

[Manuals.plus](#) /

› [AUKTWE](#) /

› AUKTWE Electric Water Gun Model 777 User Manual

AUKTWE 777

AUKTWE Electric Water Gun Model 777 Instruction Manual

Your guide to setup, operation, and maintenance.

IMPORTANT SAFETY INFORMATION

WARNING: CHOKING HAZARD – Small parts. Not for children under 3 years.

This product may be mistaken for a firearm by law enforcement officers or others. Altering the coloration or markings required by state or federal law or regulations so as to make the product look more like a firearm is dangerous and may be a crime.

Brandishing or displaying this product in public may cause confusion and may be a crime.

Always use this product responsibly and in appropriate environments. Avoid aiming at faces or eyes. Adult supervision is recommended for children.

WHAT'S INCLUDED

Please verify that all components are present in the package:

- Water Gun (x1)
- Light Up attachment (x1)
- Battery Pack (x1)
- USB Charger (x1)
- Type-C Charger (x1)
- Instruction Manual (x1)

PRODUCT LIST



Figure 1: Product List - All components included in the package.

SETUP INSTRUCTIONS

1. Battery Charging and Installation

The water gun is powered by a rechargeable battery pack. Ensure the battery is fully charged before first use.

1. Locate the battery pack and the Type-C charger.
2. Connect the battery pack to the Type-C charger and plug it into a suitable USB power source.
3. Allow the battery to charge completely. The charging indicator will typically change color or turn off when fully charged.
4. Once charged, insert the battery pack into the designated compartment, usually located within the scope attachment. Ensure it is securely connected.



Figure 2: Battery and Charging Ports. The battery pack is integrated into the scope, and the light-up muzzle has a Type-C charging port.

2. Water Tank Filling and Installation

The water gun features a large capacity water tank for extended play.

1. Detach the water tank from the bottom of the water gun.
2. Open the water tank cap and fill it with clean water.
3. Securely close the water tank cap to prevent leaks.
4. Re-attach the filled water tank to the water gun. Ensure it clicks into place firmly.

4 STEPS TO JOW THE WATER GAME

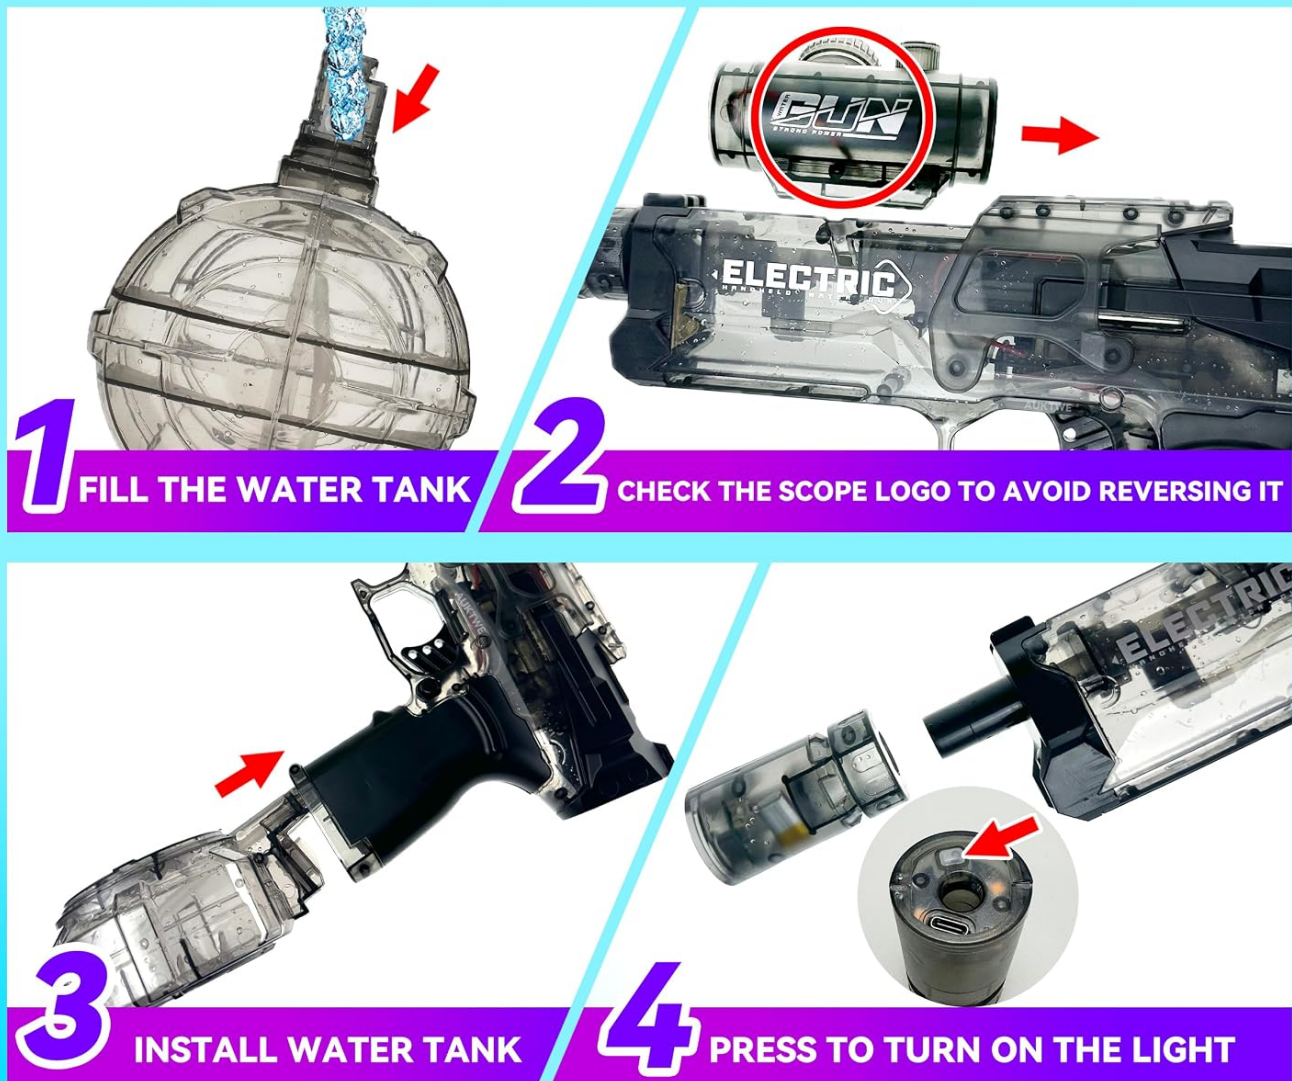


Figure 3: Water Tank Filling and Installation Steps.

Your browser does not support the video tag.

Video 1: Demonstrates how to fill and install the water tank.

3. Activating the Light-Up Feature

The water gun includes a light-up muzzle for enhanced visual effects.

- Locate the power button for the light-up feature, typically near the muzzle.
- Press the button to activate the light.

OPERATING INSTRUCTIONS

1. Powering On and Firing

Once assembled and filled, the water gun is ready for use.

1. Ensure the battery is installed and charged.
2. Point the water gun in a safe direction, away from faces and eyes.
3. Press the trigger to activate the automatic firing mechanism.
4. The water gun has a shooting range of approximately 28-32 feet.



Figure 4: Automatic Firing and Shooting Range.

2. Switching Between Manual and Automatic Modes

The water gun supports both manual pump and automatic firing modes.

- **Automatic Mode:** Press and hold the trigger for continuous water blasting.
- **Manual Pump Mode:** If the battery is low or you prefer manual operation, use the sliding mechanism (if present) to pump and fire water. This mode allows for continued play even without battery power.

Your browser does not support the video tag.

Video 2: Demonstrates the full automatic firing capability of the electric squirt gun.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your water gun.

- **Cleaning:** After each use, empty any remaining water from the tank. Rinse the tank with clean water and allow it to air dry completely to prevent mold or mildew buildup. Wipe the exterior of the water gun with a damp cloth. Do not submerge the electronic components in water.
- **Battery Care:** Store the battery in a cool, dry place. If not using the water gun for an extended period, charge the battery periodically (e.g., every 3 months) to maintain its health.
- **Storage:** Store the water gun in a dry, shaded area away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your AUKTWE Electric Water Gun, refer to the following common solutions:

Problem	Possible Cause	Solution
Water gun does not fire.	Battery is not charged or improperly installed. Water tank is empty or not properly attached.	Ensure the battery is fully charged and correctly inserted. Check if the water tank is filled and securely attached.
Weak water stream.	Low battery. Insufficient water in the tank. Air in the system.	Recharge the battery. Refill the water tank. Prime the pump by firing a few times to expel air.
Light-up feature not working.	Light-up battery is low or off.	Charge the light-up muzzle via its Type-C port. Press the light activation button.
Water leaks from the tank.	Water tank cap not sealed. Tank not properly installed.	Ensure the water tank cap is tightly closed. Re-install the water tank, ensuring it clicks into place.

For further assistance, please refer to the support section.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	AUKTWE
Model Number	777
Material	High-Quality ABS Plastic
Color	Blue
Operation Mode	Manual and Automatic
Maximum Range	28-32 feet
Water Tank Capacity	500 cubic centimeters
Battery Type	1 Lithium Ion battery (included)

Feature	Detail
Charging	USB Charger, Type-C Charger
Item Dimensions (L x W x H)	10.8" x 10.6" x 5"
Special Features	Electric operation, Light-up shots, Manual/Automatic mode switching
Recommended Age	8 years and up (Manufacturer Minimum Age 96 months)

WARRANTY INFORMATION

AUKTWE provides a **1-year free replacement warranty** for manufacturing defects from the date of purchase. Additionally, the product is covered by a **30-day no-reason return policy** through the retailer. This warranty does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

CUSTOMER SUPPORT

For any questions, concerns, or technical assistance, please contact AUKTWE customer support.

- **Online Support:** You can reach us via Amazon messaging for quick responses, typically within 24 hours.
- **Lifetime Support:** AUKTWE is committed to providing lifetime support and satisfactory solutions for our products.

Please have your product model number (777) and purchase details ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D93K3HTF>

More documents and user manuals: <https://manuals.plus/>