

[Manuals.plus](#) /

› [GIDEALED](#) /

› GIDEALED C04RF RGBW LED Controller and 2.4GHz Wireless Remote Control User Manual

GIDEALED C04RF

GIDEALED C04RF RGBW LED Controller and 2.4GHz Wireless Remote Control User Manual

Model: C04RF

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your GIDEALED C04RF RGBW LED Controller and 2.4GHz Wireless Remote Control. This system is designed to control FCOB, COB, RGB, and RGBW LED strip lights operating at DC5V, DC12V, or DC24V. It features 4-zone group control, allowing independent management of LED strips in different areas, and offers comprehensive color changing and dimming capabilities via a sensitive RF wireless remote.

PACKAGE CONTENTS

Please verify that all items are present in your package:

- 1x GIDEALED RGBW LED Controller (Model: C04RF)
- 1x GIDEALED 2.4GHz RF Wireless Remote Control
- 1x Mounting Bracket for Remote Control
- *Note: LED strip lights and power supply are not included. The remote control requires 2x AAA batteries (not included).*



Image: GIDEALED RGBW LED Controller and 2.4GHz Wireless Remote Control Kit, showing the controller, remote, and packaging.

SETUP INSTRUCTIONS

1. Remote Control Battery Installation

The remote control requires two AAA batteries. Open the battery compartment on the back of the remote and insert the

batteries, ensuring correct polarity. Close the compartment securely.

2. Wiring the LED Controller

The GIDEALED C04RF controller is compatible with DC5V, DC12V, and DC24V RGBW LED strip lights. Ensure your power supply matches the voltage requirements of your LED strip.

- 1. **Connect Power Supply:** Connect your DC5V-24V power adapter to the "INPUT" terminal of the RGBW LED Controller. The controller supports both DC plug (5.5x2.1mm) and screw terminal connections for power input.
- 2. **Connect LED Strip:** Connect the RGBW LED strip to the "OUTPUT" terminals of the controller. Match the wires: V+ to V+, R to R, G to G, B to B, and W to W. Use a small screwdriver to secure the wires in the screw terminals.



How to Connect LED Strip Light&Wiring Guide

 
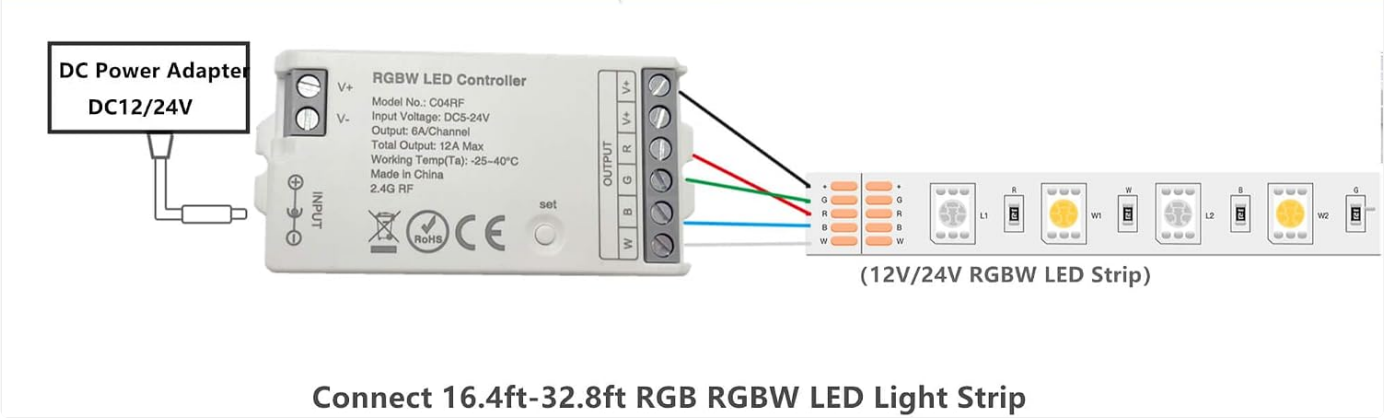 


Image: Detailed wiring guide for connecting a DC power adapter and an RGBW LED strip to the GIDEALED C04RF controller.

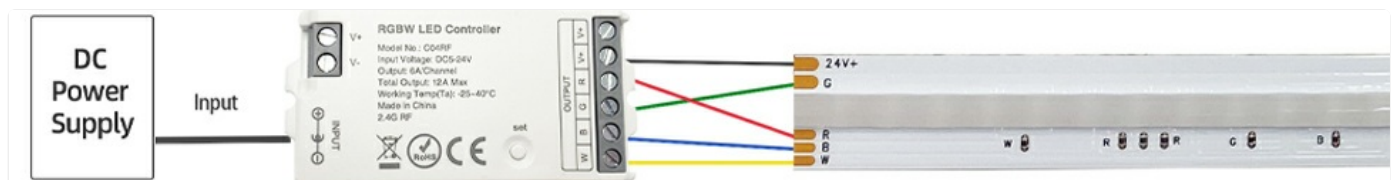

Connect 16.4ft~32.8ft RGBW/RGB COB LED Light Strip

DC Plug 5V~24V $\ominus \text{---} \oplus$ 5.5X2.1mm

4-CH 6A/Channel



Image: Close-up view of the GIDEALED C04RF controller's DC power input and RGBW output screw terminals.

3. Linking Controller to Remote (Pairing)

The remote control can be linked to one or more controllers, allowing for individual or group control across up to 4 zones.

- Power Cycle:** Disconnect the power supply from the LED controller. Wait for at least 10 seconds, then reconnect the power.
- Initiate Linking:** Within 3 seconds of reconnecting power to the controller, short press one of the Zone ON buttons (1, 2, 3, or 4) on the remote control three times.
- Confirmation:** If the linking is successful, the connected LED strip light will blink three times slowly. This indicates the controller is now paired to the selected zone on the remote.
- Repeat for Multiple Zones:** To control multiple LED strips independently, repeat this process for each controller, linking each to a different zone button (1-4) on the remote.

Your browser does not support the video tag.

Video: Official GIDEALED demonstration of linking the 4-channel LED controller with the RF remote control for individual and group control.

OPERATING INSTRUCTIONS

The 2.4GHz RF Wireless Remote Control offers comprehensive control over your GIDEALED RGBW LED Controller. Below are the functions of the remote:

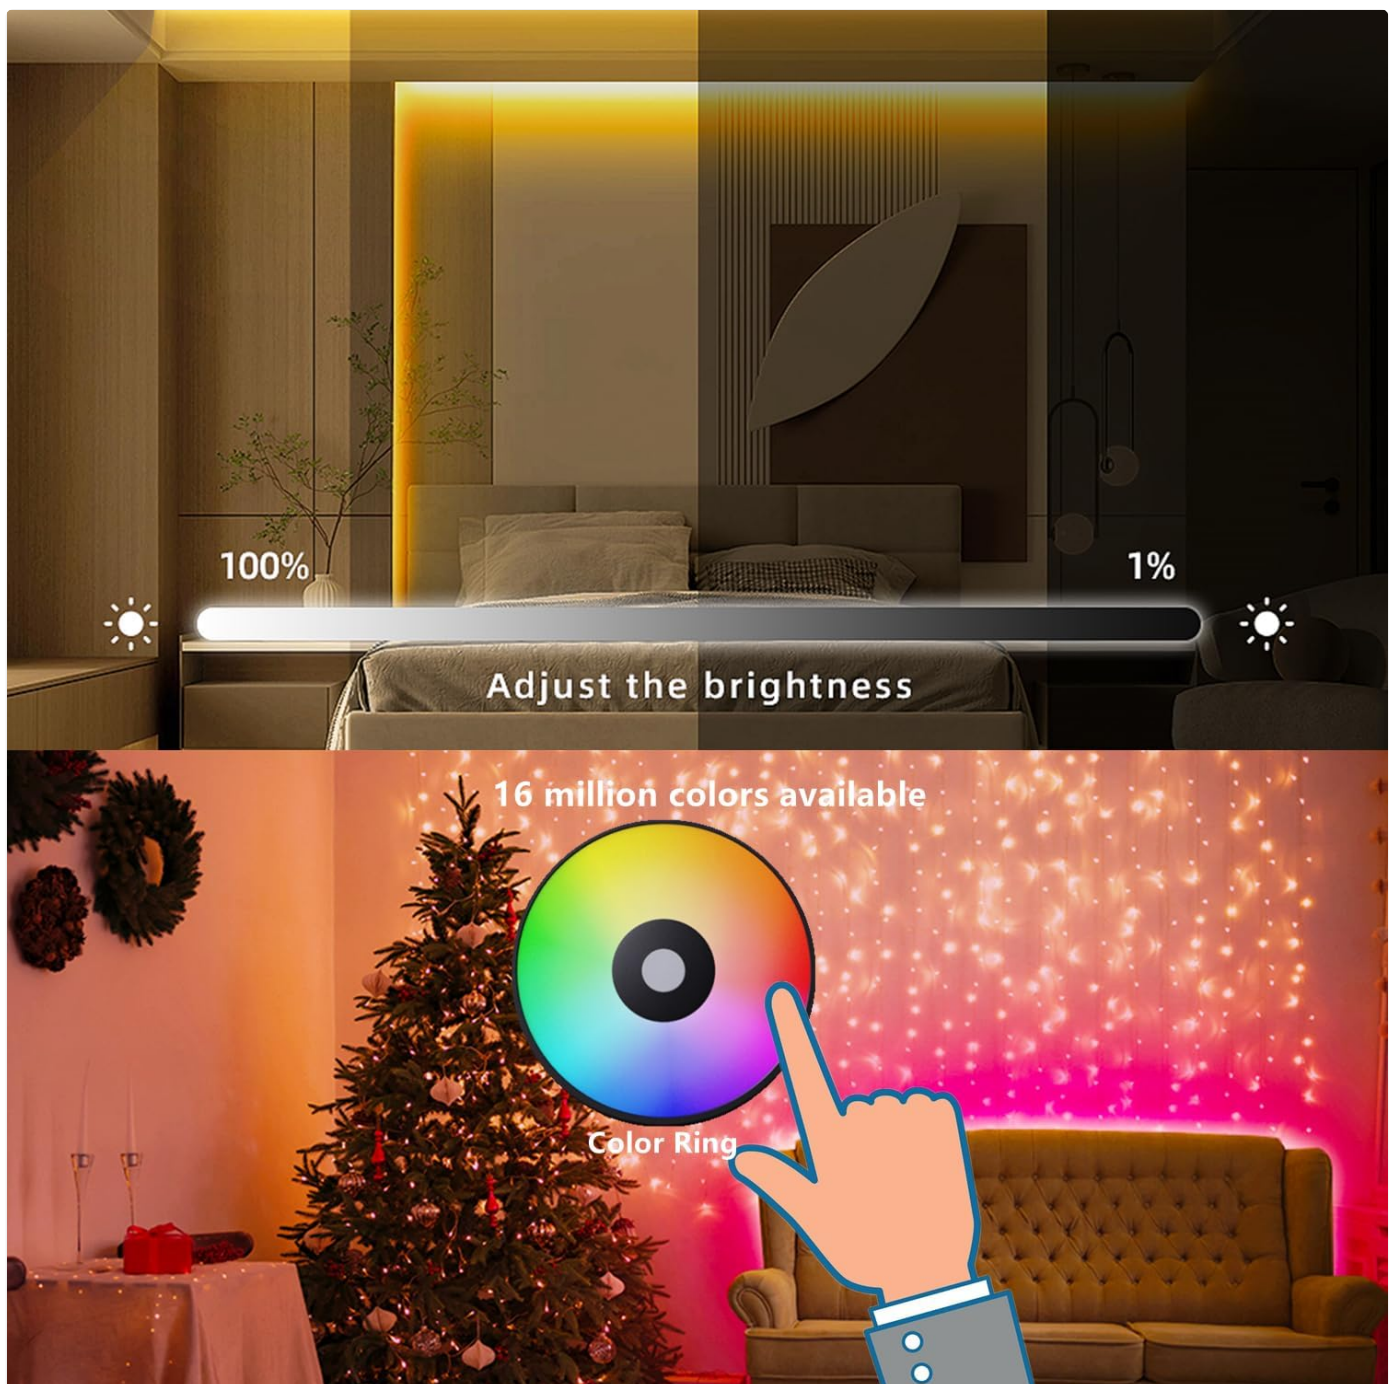 


Image: GIDEALED remote control highlighting the color ring, brightness, mode, and zone selection buttons.

- **ON/OFF Buttons:** Located at the top of the remote. Press "ON" to turn on the lights for the selected zone(s), and "OFF" to turn them off. To control all linked lights simultaneously, press the "ON" button without selecting a specific zone.
- **Color Ring:** The central touch-sensitive color wheel allows you to select from 16 million colors. Simply touch the desired color on the ring.
- **Brightness Adjustment:** Use the **W+** and **W-** buttons to increase or decrease the brightness of the selected color or white light (1% to 100%).
- **White Light Control:** The **W** button activates pure white light. Use **W+** and **W-** to adjust its brightness.
- **Dynamic Modes:** The **M** button cycles through various pre-programmed dynamic lighting modes (e.g., color chase, breathing effects).
- **Speed Adjustment:** Use the **S+** and **S-** buttons to increase or decrease the speed of dynamic modes.
- **Zone Selection (1-4):** The four numbered buttons at the bottom allow you to select specific zones. Press a zone button to control only the lights linked to that zone. Pressing the same zone button again will turn off that zone.

Multi-Zone Control Example

After linking multiple controllers to different zones (e.g., Zone 1 for living room, Zone 2 for kitchen, Zone 3 for bedroom), you can control each area independently. Select Zone 1 and choose a color, then select Zone 2 and choose a different color, and so on.



4 Zone 2.4GHZ Wireless Control

One remote control can control LED lights in 4 different areas separately

- Zone1: bedroom**
- Zone2: dining room**
- Zone3: kids room**
- Zone4: living room**



Image: Illustration of the 4-zone wireless control feature, demonstrating how one remote can control LED lights in different rooms (bedroom, dining room, living room) independently.



Image: Diagram illustrating the auto-transmitting feature, where multiple GIDEALED controllers can receive signals from a single remote within a 30-meter range.

MAINTENANCE

- Keep the controller and remote clean and dry. Avoid exposure to moisture or extreme temperatures.
- Regularly check wiring connections to ensure they are secure.
- Replace remote control batteries when performance degrades.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
LED strip not lighting up.	◦ No power to controller. ◦ Incorrect wiring. ◦ Controller not linked to remote. ◦ Faulty LED strip or power supply.	◦ Check power adapter connection and power outlet. ◦ Verify all wires are correctly connected (V+, R, G, B, W). ◦ Perform the linking procedure (see "Linking Controller to Remote"). ◦ Test with a different LED strip or power supply if available.
Remote not responding.	◦ Dead batteries. ◦ Remote out of range. ◦ Controller not linked.	◦ Replace AAA batteries. ◦ Ensure remote is within 30 meters (98ft) of the controller. ◦ Perform the linking procedure (see "Linking Controller to Remote").
Colors are incorrect or inconsistent.	◦ Incorrect wiring of RGBW channels. ◦ Incompatible LED strip type.	◦ Double-check the R, G, B, W wire connections to ensure they match the LED strip. ◦ Confirm your LED strip is RGBW type and compatible with the controller.

SPECIFICATIONS

Feature	Detail
Brand	GIDEALED
Model Number	C04RF
Input Voltage	DC5V~24V
Output Channels	4 Channels (RGBW)
Max Output Current	6A/Channel, 12A Max Total
Control Method	RF 2.4GHz Wireless
Wireless Range	Up to 30 meters (98 feet)
Remote Control Batteries	2x AAA (not included)
Dimensions (Controller)	2.95 x 1.3 x 0.6 inches
Material	Plastic
Special Features	Color Changing, Dimmable, Remote Controlled, 4-Zone Group Control

WARRANTY AND SUPPORT

GIDEALED products are manufactured with high-quality standards. For warranty information, technical support, or any questions regarding your product, please refer to the contact information provided with your purchase or visit the official GIDEALED website. Please retain your proof of purchase for warranty claims.

For further assistance, you may visit the GIDEALED Store:[GIDEALED Store on Amazon](#)

© 2024 GIDEALED. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page
<https://manuals.plus/asin/B0D93KKWM9>
More documents and user manuals: <https://manuals.plus/>