

Edifier EDF100074

Edifier M60 Multimedia Speaker User Manual

Model: EDF100074 | Brand: Edifier

INTRODUCTION

Thank you for choosing the Edifier M60 Multimedia Speaker. This manual provides essential information for setting up, operating, and maintaining your new speakers. The Edifier M60 offers powerful and clear audio with versatile connectivity options, designed to enhance your listening experience.



PRODUCT FEATURES

- **Powerful Output:** Handcrafted wooden cabinets house a 1-inch silk dome tweeter and a 3-inch long-throw aluminum mid-bass driver. Driven by a high-performance closed-loop Class-D amplifier from Texas Instruments, the speakers deliver a total of 66W RMS output, providing powerful and clear sound.
- **High-Quality Audio Processing:** The M60 features a high-performance analog audio front-end (ADC) and a Texas Instruments Class-D digital amplifier, supporting 24-bit/96kHz to ensure perfect analog/digital conversion. The built-in DSP (Digital Signal Processor) provides precise 22-way active crossover and effectively manages Dynamic Range Control (DRC).
- **Diverse Input Methods:** Rear-mounted USB-C and AUX inputs allow for easy connection to computers or turntables.
- **Bluetooth Connection:** Bluetooth V5.3 supports LDAC codec, offering a maximum transfer rate of 990 kbps. High-resolution audio up to 24-bit/96kHz can be streamed from Android devices running Android 8.0 or higher.
- **Friendly Operation Method:** The top-mounted touch panel features an automatic backlight function that illuminates when your hand approaches and turns off when it moves away. Easily operate the speakers with light touches or swipes.
- **Speaker Stand Included:** The M60 comes with a dedicated pair of aluminum speaker stands. These effectively reduce sound coloration caused by reflections from the desktop surface. The stands are angled at 15 degrees to further optimize the listening experience.
- **Dedicated App:** Download the EDIFIER ConneX mobile app to access more features.

PACKAGE CONTENTS

Please check the package contents carefully. If any items are missing or damaged, contact your retailer.

- Edifier M60 Multimedia Speakers (1 pair)
- Aluminum Speaker Stands (1 pair)
- Power Cable
- USB-C to USB-C Cable
- 3.5mm AUX Cable
- User Manual

SETUP

1. Speaker Placement

Place the speakers on a stable, flat surface. Utilize the included 15-degree angled aluminum stands to reduce desktop reflections and optimize sound projection towards your listening position.

EDIFIER ConneX専用アプリ

EDIFIER ConneXモバイルアプリをダウンロードして、
より多くの機能を利用してください。

再生コントロールサウンドエフェクトの切り替えとカスタマイズ
タッチパネルバックライト設定
ユーザーマニュアルおよびその他の設定



Proper placement of the Edifier M60 speakers with their dedicated stands.

2. Connecting to Power

Connect the power cable to the main speaker's power input and then to a wall outlet.

3. Audio Connections

The Edifier M60 offers multiple ways to connect to your audio sources:

- Bluetooth Connection:

- Turn on the speakers. The indicator light will flash, indicating Bluetooth pairing mode.

2. On your audio device (smartphone, tablet, computer), enable Bluetooth and search for "EDIFIER M60".
3. Select "EDIFIER M60" to pair. Once connected, the indicator light will become solid.

Bluetooth接続

Bluetooth V5.3はLDACコーデックをサポートし、
最大990 kbpsの転送速度を提供します。
Android 8.0以上を実行しているAndroidデバイスから、
最大24ビット/96kHzの高解像度オーディオをストリーミングできます。



Connecting the Edifier M60 via Bluetooth to a device.

- **USB-C Connection:**


Use the provided USB-C cable to connect the main speaker's USB-C input to your computer's USB-C port. This connection supports high-resolution audio playback.

- **AUX Connection:**

Use the provided 3.5mm AUX cable to connect the main speaker's AUX input to the audio output of your device (e.g., computer, turntable, MP3 player).

多様な入力方法

背面に取り付けられたUSB-CおよびAUX入力は、コンピューターやターンテーブルへの接続が簡単です。

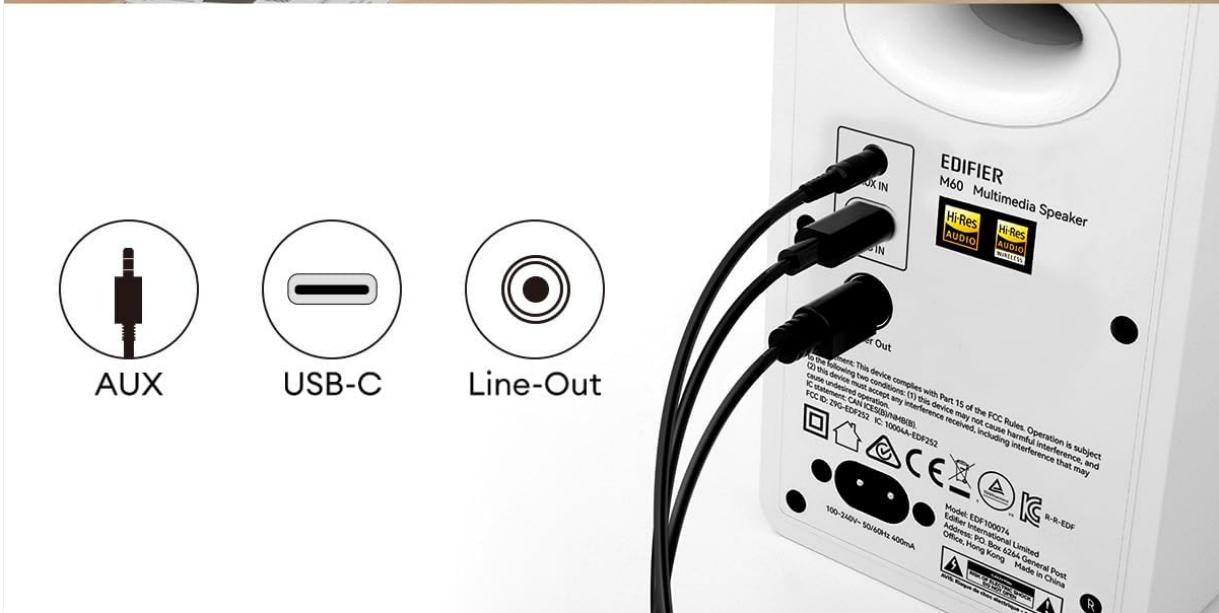

Rear panel of the Edifier M60 showing USB-C and AUX input ports.

OPERATION

1. Touch Panel Controls

The Edifier M60 features an intuitive touch panel on the top of the main speaker for easy control. The panel's backlight automatically illuminates when your hand approaches.

- **Volume Control:** Tap or swipe on the volume area to adjust the sound level.
- **Play/Pause:** Tap the play/pause icon to control media playback.
- **Track Navigation:** Swipe left or right to skip tracks.
- **Input Selection:** Tap the input icon to cycle through available audio inputs (Bluetooth, USB-C, AUX).

スピーカースタンド付属

専用のアルミスピーカースタンドが1ペア付属しています。

これにより、デスクトップ表面からの反射による音の色の変化を効果的に軽減できます。スタンドは15度の角度で傾いており、リスニング体験をさらに最適化します。



A hand interacting with the touch-sensitive controls on top of the Edifier M60 speaker.

2. EDIFIER ConneX Mobile App

Download the EDIFIER ConneX app from your device's app store to unlock additional features and customization options for your M60 speakers.

- Sound Effects:** Switch between various sound modes and apply custom equalizer settings.
- Input Switching:** Easily switch between different audio sources.
- Backlight Settings:** Adjust the behavior of the touch panel backlight.
- Firmware Updates:** Receive and install firmware updates for optimal performance.

使いやすいタッチ操作

手を近づけると自動でバックライトが点灯、離れる
と消灯するタッチパネルを搭載。タップやスワイプで
簡単に操作できます。



Screenshots demonstrating the EDIFIER ConneX mobile app's interface for controlling the M60 speakers.

MAINTENANCE

To ensure the longevity and optimal performance of your Edifier M60 speakers, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the speaker surfaces. Avoid using abrasive cleaners, waxes, or solvents as they may damage the finish.
- **Dust Protection:** Keep the speakers free from dust by regularly wiping them down.
- **Environment:** Place the speakers in a dry environment, away from direct sunlight, heat sources, and excessive

humidity.

- **Handling:** Handle the speakers with care. Avoid dropping them or subjecting them to strong impacts.

TROUBLESHOOTING

If you encounter any issues with your Edifier M60 speakers, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
No sound	Power not connected; Incorrect input selected; Volume too low; Audio cable loose.	Ensure power cable is securely connected; Select the correct input source; Increase volume; Check audio cable connections.
Bluetooth connection fails	Speakers not in pairing mode; Device too far; Interference; Previously paired device connected.	Ensure speakers are in pairing mode (flashing indicator); Move device closer; Reduce interference; Disconnect from other Bluetooth devices.
Sound distortion	Volume too high; Poor audio source quality; Cable issues.	Lower volume; Try a different audio source; Replace audio cables.
Touch panel unresponsive	Temporary software glitch.	Power off the speakers, wait a few seconds, then power them back on.

If the issue persists after trying these steps, please contact Edifier customer support for further assistance.

SPECIFICATIONS

Feature	Specification
Brand	Edifier
Model Number	EDF100074
Speaker Type	Woofer
Connectivity Technology	AUX, USB-C, Bluetooth 5.3 (LDAC)
Output Power	66W RMS (Total)
Woofer Diameter	3 inches
Tweeter Diameter	1 inch
Audio Processing	24-bit/96kHz, Built-in DSP
Product Dimensions (D x W x H)	32.5cm x 38.4cm x 14.8cm
Color	Black
Mounting Type	Tabletop Mount
Battery Required	No

WARRANTY AND SUPPORT

Edifier products are designed and manufactured to the highest quality standards. For detailed warranty information specific to your region and product, please refer to the warranty card included in your product packaging or visit the official Edifier website.

For technical support, troubleshooting assistance, or any other inquiries, please visit the official Edifier support page or contact their customer service directly. Contact information can typically be found on the Edifier website or in your product documentation.