

FLEXISPOT XC6

FLEXISPOT 270° Swivel Rocker Recliner User Manual

Model: XC6

Brand: FLEXISPOT

1. INTRODUCTION

Thank you for choosing the FLEXISPOT 270° Swivel Rocker Recliner. This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your new recliner. Designed for comfort and versatility, this chair features a 270° swivel, gentle rocking motion, adjustable recline, and an integrated massage and heating system to enhance your relaxation experience.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all safety instructions before assembling or using the recliner. Retain this manual for future reference.

- The chair supports a maximum weight capacity of 300 pounds (approximately 136 kg). Do not exceed this limit.
- Ensure proper use of the adjustable backrest and footrest mechanisms. Avoid sudden movements or excessive force.
- Verify that all parts are present and properly assembled before use. If any parts are missing or damaged, do not proceed with assembly and contact customer service.
- When using the USB port for charging devices, ensure devices do not overheat and do not obstruct any chair functions.
- Regularly inspect the chair for signs of wear or damage, especially around the steel frame and textile material. Discontinue use if damage is found and contact customer service.
- Keep children and pets away from the chair's moving parts during operation.

3. PACKAGE CONTENTS

Your FLEXISPOT recliner is shipped in one box and includes the following components:

- Recliner Base
- Backrest

- Armrests (pre-attached or easily foldable into position)
- Power Adapter
- Remote Control for Massage/Heating
- User Manual

4. ASSEMBLY INSTRUCTIONS

The FLEXISPOT recliner is designed for tool-free assembly and can typically be set up by one person. Follow these steps:

1. **Unpack Components:** Carefully remove all parts from the single shipping box. Place them on a soft, clean surface to prevent damage.
2. **Attach Backrest:** Align the metal brackets on the backrest with the corresponding slots on the recliner base. Slide the backrest down firmly until it clicks securely into place. Ensure both sides are fully engaged.
3. **Connect Power:** Locate the power cable from the recliner and connect it to the provided power adapter. Plug the adapter into a standard wall outlet.
4. **Verify Connections:** Gently test the recline mechanism and check for stability. Ensure all connections are secure before use.

If you encounter any difficulties during assembly, please refer to the troubleshooting section or contact customer service.

5. OPERATING INSTRUCTIONS

5.1 Swivel and Rocking Function

The recliner features a 270° swivel capability, allowing you to rotate the chair to face different directions without moving the base. A gentle rocking motion is also integrated for added comfort and relaxation.



A user enjoying the recliner's swivel function, illustrating how the chair can rotate to face different directions without needing to move the entire unit.

Swivel & Rocking

270° Swivel | 30° Rocking | 135° Recline



An illustration demonstrating the full range of motion for the recliner, including its swivel, rocking, and maximum recline angles.

5.2 Reclining Function

To recline the chair, locate the side-pull buckle on the side of the recliner. Pull the buckle to release the footrest and lean back to achieve your desired recline angle, up to 135 degrees. To return to the upright position, push the footrest down with your legs and lean forward.

 **10M+** PEOPLE

Use Flexispot products to avoid spine health problems

 **1000+**

Authorized patents & 72 invention patents

 **20+**

Experience in ergonomics industry

A person relaxing in the fully reclined position, demonstrating the comfort and support provided by the chair.

5.3 Massage and Heating Functions

The recliner is equipped with an 8-point vibration massage system and lumbar heating. Use the included remote control to operate these features:


- **Massage:** The 8 vibration nodes target your back, lumbar, thighs, and legs. The remote allows you to select from 5 vibration modes and 3 intensity levels to customize your massage experience.
- **Heating:** The lumbar heating function promotes blood circulation and helps reduce muscle fatigue. Activate it via the remote control.



This image shows the recliner's massage and heating features, with a remote control for adjusting settings, emphasizing the customizable comfort options.

5.4 Side Storage Pockets

Convenient side pockets are integrated into the armrests, providing storage for remote controls, magazines, or other small items.

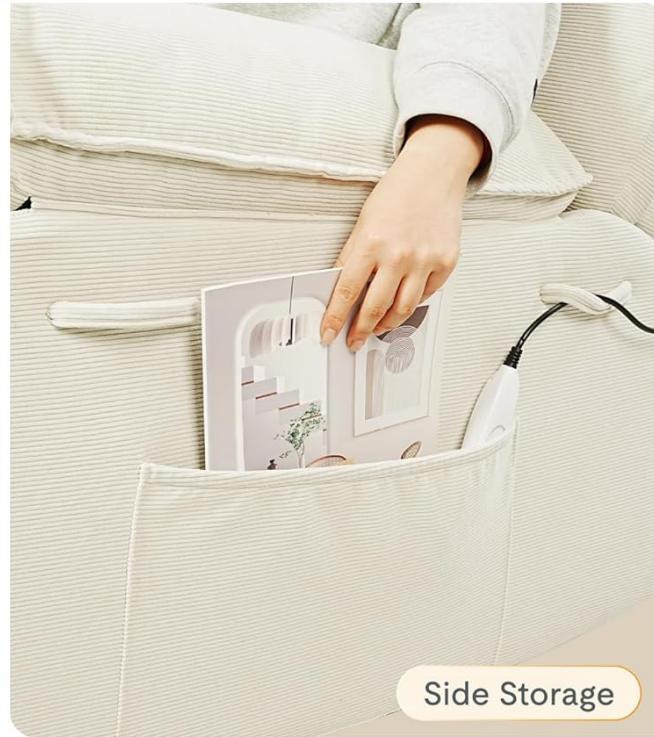

This composite image provides close-up views of key design elements, including the spacious armrests, integrated storage pockets, ergonomic back support, and the robust metal frame that ensures stability and durability.

6. MAINTENANCE

Proper care will extend the life and appearance of your recliner.

- Cleaning Fabric:** For general cleaning, use a soft brush or vacuum cleaner to remove dust and loose debris. For spills, blot immediately with a clean, dry cloth. For stubborn stains, use a mild fabric cleaner according to the product instructions, testing on an inconspicuous area first.
- Frame and Mechanism:** Periodically check all bolts and screws to ensure they are tight. Do not overtighten. Lubricate moving parts if necessary with a silicone-based lubricant, avoiding contact with fabric.
- Electrical Components:** Keep the power adapter and remote control dry. Do not expose them to liquids.

7. TROUBLESHOOTING

If you encounter issues with your recliner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Chair does not recline or footrest does not extend.	Side-pull buckle not fully engaged; obstruction in mechanism.	Ensure the side-pull buckle is pulled completely. Check for any objects obstructing the footrest mechanism.
Massage or heating function not working.	Power adapter disconnected; remote control battery low or faulty; loose internal connection.	Verify the power adapter is securely plugged into both the chair and the wall outlet. Check remote control batteries. If the issue persists, contact customer service.
Chair feels unstable or makes unusual noises.	Loose assembly connections; uneven floor; internal mechanism issue.	Check all assembly points to ensure they are securely fastened. Place the chair on a level surface. If noises persist, contact customer service.

8. SPECIFICATIONS

Feature	Detail
Brand	FLEXISPOT
Model Number	XC6
Color	Beige
Product Dimensions (D x W x H)	38.6" x 42.1" x 39.4"
Maximum Weight Recommendation	300 Pounds (136 kg)
Swivel Angle	270°
Recline Angle	Up to 135°
Massage Points	8-point vibration system
Massage Modes	5
Massage Intensity Levels	3
Heating Function	Lumbar heating
Assembly	Tool-free, 1-box shipping
Material	Fabric (Cotton fill)

9. WARRANTY AND CUSTOMER SUPPORT

9.1 Return Policy

You are allowed to return or exchange the furniture within 30 days of when you receive it. Please refer to your purchase platform's return policy for detailed instructions.

9.2 Contact Us

For any questions, assistance, or warranty claims, please contact FLEXISPOT customer service:

- **Email:** contact@flexispot.com
- **Phone:** +1(855)585-5618

If you purchased through Amazon, you can also contact the seller directly:

1. Login to your Amazon Account.
2. Go to 'Your Orders'.
3. Find the Order ID for your recliner.
4. Click 'Contact Seller'.

© 2025 FLEXISPOT. All rights reserved.

Related Documents

	<p>FlexiSpot XR6 Recliner User Manual</p> <p>User manual for the FlexiSpot XR6 recliner, detailing materials, components, assembly instructions, phone holder installation, and troubleshooting.</p>
	<p>FlexiSpot: Innovative Ergonomic Furniture for Modern Workspaces</p> <p>Explore FlexiSpot's commitment to innovation, quality, and sustainability. Discover their range of height-adjustable desks, ergonomic chairs, recliners, and phone booths designed for comfortable and productive work and living environments, backed by global logistics and strong ESG initiatives.</p>
	<p>FlexiSpot E7B/E7S/E7W-CA Standing Desk Assembly Guide FlexiSpot</p> <p>Comprehensive assembly guide for the FlexiSpot E7B, E7S, and E7W-CA electric standing desk frames. Learn how to install, operate, and troubleshoot your FlexiSpot desk.</p>
	<p>FlexiSpot M18M Computer Riser Installation Guide</p> <p>This guide provides step-by-step instructions for installing the FlexiSpot M18M Computer Riser, including specifications, parts included, and warranty information.</p>



[\[pdf\]](#) User Manual Installation Guide Instructions Warranty

1 Administrator User Manual OTTO The backpack cover is set in the back inner frame and then inserted on iron to install Pat with your hands 946ebc16 1704 4955 8537 7395f8d90ba9 d otto de files ||| Warranty Precaution 49 211 368 74223 info flexispot.de Item No. **XC6-BG-EU/XC6-OB-EU/XC6-LG-EU** User Manual CONTENTS English-----01 German-----09 French-----17 Italian-----25 Spanish-----33 Component list 1 X1 2 X1 3 X1 5 X1 7 X1 01 4 X1 6 X4 Assembly Instructions ...

lang:en score:23 filesize: 1.64 M page_count: 22 document date: 2024-07-31