Manuals+

Q & A | Deep Search | Upload

SEYVUM DL-AB4010

SEYVUM 40V Cordless Leaf Blower Instruction Manual

Model: DL-AB4010

NTRODUCTION

Thank you for choosing the SEYVUM 40V Cordless Leaf Blower. This powerful and versatile tool is designed for efficient outdoor cleaning, offering high performance with the convenience of cordless operation. This manual provides essential information for safe assembly, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device.



Image: The SEYVUM 40V Cordless Leaf Blower, showcasing its main unit, two 5.0Ah batteries, and the dual battery charger.

SAFETY INSTRUCTIONS

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury. Read all instructions carefully before operating the leaf blower.

- **Personal Safety:** Always wear appropriate personal protective equipment (PPE), including eye protection (safety glasses or goggles), hearing protection (earbuds or earmuffs), and sturdy footwear. Avoid loose clothing that could get caught in moving parts.
- Work Area: Keep the work area clean and well-lit. Do not operate the blower in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust. Keep bystanders, children, and pets at a safe distance.
- **Electrical Safety:** Use only the specified battery pack and charger. Do not modify the charger or battery. Do not handle the charger or blower with wet hands.
- **Product Use and Care:** Do not force the tool. Use the correct tool for your application. Disconnect the battery pack before making any adjustments, changing accessories, or storing the tool. Store idle tools out of reach of children.

• **Battery Care:** Before use, ensure the battery is fully charged for optimal performance and extended battery life. Do not expose batteries to water or extreme temperatures.

PACKAGE CONTENTS

Verify that all items are present and in good condition upon opening the package:

- 1 x SEYVUM 40V Cordless Leaf Blower Unit
- 1 x Blower Tube (Main)
- 1 x Extension Nozzle (Tapered)
- 2 x 20V 5.0Ah Lithium-Ion Batteries
- 1 x Dual Port Battery Charger

ASSEMBLY AND SETUP

1. Charging the Batteries

It is crucial to fully charge both 20V 5.0Ah batteries before initial use to ensure optimal performance and extend their lifespan. The dual port charger allows for simultaneous charging of both batteries.

- 1. Connect the charger to a standard electrical outlet.
- 2. Insert the 20V 5.0Ah batteries into the charging slots. Ensure they are seated firmly.
- 3. Monitor the power indicator lights on the charger. Lights will typically change from red to green when charging is complete. A full charge takes approximately 2-2.5 hours.



Image: The dual battery charger with two 5.0Ah batteries inserted, illustrating the charging process.

2. Attaching the Blower Tube and Nozzles

The leaf blower comes with a main blower tube and an additional tapered nozzle for concentrated airflow.

- 1. Align the main blower tube with the air outlet on the blower unit.
- 2. Twist the tube clockwise until it locks securely into place.
- 3. For concentrated airflow, attach the tapered extension nozzle to the end of the main blower tube. Twist to secure.



Image: A visual guide demonstrating the secure attachment of the blower tube to the main unit.

3. Installing the Batteries

The blower requires both 20V 5.0Ah batteries to operate as a 40V system.

- 1. Locate the battery compartments on the top rear of the blower unit.
- 2. Slide each fully charged battery into its respective slot until it clicks into place. Ensure a firm connection.

OPERATION

1. Powering On/Off

To turn the leaf blower on, press the Power ON/OFF button. To turn it off, press the button again.

2. Variable Speed Control

The blower features a 3-speed variable control system, allowing you to adjust the airflow according to the task. Use the variable speed trigger to control the airflow from low to high.

3. Turbo Mode Activation

For maximum power, such as moving wet leaves or stubborn debris, activate the Turbo Mode by pressing the dedicated Turbo button. This increases the wind pressure to 1400Pa.



Image: Detailed view of the control panel on the blower handle, highlighting the power, turbo, and variable speed controls.

4. Using Different Nozzles

- Large-Diameter Nozzle: Ideal for cleaning large areas like lawns, courtyards, and aisles, providing a powerful airflow up to 650 CFM.
- Tapered Nozzle: Provides a concentrated airflow (up to 200 MPH) for enhanced control, suitable for removing heavy objects or working in tight spaces. Note: The noise level may be higher when using the tapered nozzle; hearing protection is recommended.



Image: Visual comparison of the large-diameter nozzle for broad coverage and the integrated tapered nozzle for focused blowing.

5. Ergonomic Handling

The SEYVUM leaf blower is designed to be lightweight (approximately 7.5 lbs with batteries) and features a soft rubber-wrapped handle for comfortable one-handed operation, reducing user fatigue during extended use.



Image: A user demonstrating the comfortable, one-handed operation of the lightweight SEYVUM leaf blower.

MAINTENANCE AND STORAGE

- Cleaning: After each use, clean the exterior of the blower with a damp cloth. Ensure air vents are clear of debris to prevent overheating. Do not use harsh chemicals or abrasive cleaners.
- **Battery Care:** Store batteries in a cool, dry place away from direct sunlight and extreme temperatures. For long-term storage, it is recommended to store batteries with a partial charge (around 50%) rather than fully charged or fully depleted.
- **Storage:** Store the leaf blower in a dry, secure location, out of reach of children. Disconnect batteries from the unit before storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Blower does not start.	Batteries not installed correctly or not charged.	Ensure batteries are fully charged and properly seated in their compartments.
Reduced airflow or power.	Low battery charge; obstructed air intake/outlet; incorrect nozzle for task.	Recharge batteries. Clear any obstructions from air vents. Select appropriate nozzle for the task.
Short battery runtime.	Batteries not fully charged; operating continuously at high speed/Turbo mode.	Ensure batteries are fully charged before use. Optimize speed settings for the task to conserve battery life.
Unusual noise or vibration.	Loose components; debris inside the blower.	Turn off and disconnect batteries. Inspect for loose parts or debris and remove if safe to do so. If problem persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	SEYVUM
Model Name	DL-AB4010
Power Source	Battery Powered
Voltage	40 Volts (2 x 20V batteries)
Battery Capacity	2 x 5.0Ah Lithium Ion
Motor Type	Brushless Motor
Max Air Volume	650 CFM (Cubic Feet Per Minute)
Max Air Speed	200 MPH (Miles Per Hour)
Max Wind Pressure (Turbo)	1400 Pa
Variable Speed	3-Speed Control
Weight (with 2 batteries)	Approx. 7.5 lbs
Product Dimensions	9.5"L x 5.5"W x 36.8"H
Included Components	Blower Unit, Blower Tube, Extension Nozzle, 2x 5.0Ah Batteries, Charger



Image: An illustration detailing the advanced 40V brushless motor technology and its performance advantages.

WARRANTY AND CUSTOMER SUPPORT

SEYVUM stands behind the quality of its products. This leaf blower comes with an **18-month promise**, ensuring support for any manufacturing defects or issues arising from normal use within this period.

For technical assistance, warranty claims, or general inquiries, please contact SEYVUM customer support through the retailer's platform or the official SEYVUM website. Please have your model number (DL-AB4010) and purchase date available when contacting support.



Image: The SEYVUM brand logo accompanied by an "18 Month Promise" badge, indicating warranty coverage.

© 2025 SEYVUM. All rights reserved.

Related Documents



Seyvum LB-8189 20V Cordless Leaf Blower Instruction Manual

Instruction manual for the Seyvum LB-8189 20V Max Cordless Leaf Blower, covering safety guidelines, operation, assembly, and technical data.



SEYVUM 20V MAX* Cordless Chainsaw CS-BM11 Instruction Manual

Comprehensive instruction manual for the SEYVUM 20V MAX* Cordless Chainsaw, Model CS-BM11. Includes safety instructions, intended use, operating procedures, maintenance, cleaning, storage, function description, specifications, battery pack information, and charger guide for optimal use and care.