

[manuals.plus](#) /

› [Blue Snail](#) /

› [BlueSnail LED Digital Productivity Timer \(Model BS-8124\) Instruction Manual](#)

## Blue Snail BS-8124

# BlueSnail LED Digital Productivity Timer (Model BS-8124) Instruction Manual

## INTRODUCTION

This manual provides detailed instructions for the BlueSnail LED Digital Productivity Timer, Model BS-8124. This versatile timer is designed for various applications, including kitchen use, classroom activities, gym workouts, and office tasks, to enhance time management and productivity.



Figure 1: BlueSnail LED Digital Productivity Timer.

## SETUP

### Battery Installation

The BlueSnail LED Digital Productivity Timer requires 3 AAA batteries for operation. These batteries are included with your purchase.

To install the batteries:

1. Locate the battery compartment on the back of the timer.
2. Open the battery compartment cover.
3. Insert 3 AAA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.



Figure 2: Battery installation for the BlueSnail LED Digital Productivity Timer.

## OPERATING INSTRUCTIONS

### Setting the Timer

The timer features an intuitive rotating outer ring for time adjustment.

- **Increase Time:** Rotate the outer ring clockwise.
- **Decrease Time:** Rotate the outer ring counter-clockwise.

Time adjusts in 5-second increments. The maximum setting is 99 minutes and 55 seconds.



Figure 3: Adjusting time by rotating the outer ring.

## Start, Stop, and Pause

To start or pause the timer, press the ST/SP button located on the screen. A single press will initiate the countdown/countup or pause the active timer.

## Countdown and Countup Functionality

The timer supports both countdown and countup modes:

- **Countdown:** Set the desired time using the rotating ring and press ST/SP. The timer will count down from the set time.
- **Countup:** To use as a stopwatch, ensure the timer is at 00:00 and press ST/SP. The timer will begin counting upwards.

## Volume and Brightness Settings

The timer offers adjustable volume and brightness settings to suit various environments.

### Volume Modes:

The timer has three volume settings: Treble, Bass, and Silent. Refer to the device's specific controls (e.g., a dedicated button or combination press) to cycle through these modes.

### Brightness Modes:

- **Constant Brightness Mode:** The LED display remains continuously illuminated.
- **Normal Mode:** The screen will enter sleep mode after 5 seconds of inactivity to conserve battery.

Switching between brightness modes is typically done via a dedicated button or a long press of the ST/SP button.

## Magnetic Mounting

The timer is equipped with strong magnets on its back, allowing it to be securely attached to metal surfaces such as refrigerators, whiteboards, or gym equipment. This feature enables convenient, one-handed operation.



Figure 4: Timer magnetically attached to a metal surface.

## MAINTENANCE

### Cleaning

Wipe the timer with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.

### Battery Replacement

When the display dims or the timer functions erratically, it is time to replace the batteries. Follow the battery installation steps outlined in the "Setup" section.

## TROUBLESHOOTING

### Timer Not Turning On / Display Not Visible

- Check if the batteries are correctly installed with the proper polarity.
- Replace old batteries with new AAA batteries.
- Ensure the battery compartment cover is securely closed.

### Alarm Not Sounding

- Verify that the timer is not set to "Silent" volume mode. Adjust the volume settings as needed.

### Inaccurate Timing

- Ensure the timer is placed on a stable surface.
- Replace batteries if they are low, as this can affect performance.

## SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	Blue Snail
Model Number	BS-8124
Color	All Black
Material	Metal
Product Dimensions	1.18"D x 3.15"W x 3.15"H
Item Weight	90 Grams (3.17 ounces)
Screen Size	3 Inches
Battery Type	3 x AAA (included)
Timing Range	00:00 to 99:55
UPC	680306509164

## WARRANTY AND SUPPORT

Blue Snail provides a 6-month return/replacement service for product quality problems. If you encounter any issues, please contact Blue Snail customer support for assistance.


## Contact Information

For support inquiries, please refer to the contact details provided with your purchase or visit the official Blue Snail website.



© 2025 Blue Snail. All rights reserved.

### Related Documents - BS-8124

	<p><a href="#">Blue Snail Rotary Countdown Timer - User Guide</a></p> <p>Comprehensive guide for the Blue Snail Rotary Countdown Timer, detailing its features, usage as a countdown timer and stopwatch, and specifications. Learn how to set time, start/stop, manage alarms, adjust brightness, and install the timer.</p>
---	---



[KADAMS Visual Timer: Setup and Usage Guide](#)

Comprehensive guide to setting up and using the KADAMS Visual Timer, a traffic light-style countdown device for effective time management in classrooms and homes. Learn to adjust volume, set countdown and pre-alarm times, and operate the timer.



[Green Brook T100A 24 Hour Mechanical Socket Box Timer: Installation and Operation Guide](#)

Comprehensive installation, operation, and wiring instructions for the Green Brook T100A 24 Hour Mechanical Socket Box Timer, including technical specifications and safety information.



[GreenBrook T80 Digital Compact Timer: Installation and Operating Instructions](#)

Comprehensive guide for installing and operating the GreenBrook T80 Din Rail Mounting Digital Compact Timer, covering setup, programming, and technical specifications.



[GLEMM BS Series Speaker Pair - Instruction Manual](#)

Comprehensive instruction manual for GLEMM BS Series speaker pairs, covering installation, operation, technical specifications, and warranty information. Includes safety precautions and compliance details.