

## TechRise B0D94CFF5P

# TechRise Wireless Mouse User Manual

Model: B0D94CFF5P

Brand: TechRise

## 1. INTRODUCTION

This user manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your TechRise Wireless Mouse. Please read this manual carefully before using the product to ensure proper functionality and to maximize its lifespan.

The TechRise Wireless Mouse offers a reliable 2.4G wireless technology, adjustable DPI settings, and an ergonomic design for comfortable use across various operating systems.

## 2. PRODUCT OVERVIEW

### 2.1 Package Contents

- 1 x TechRise Wireless Mouse
- 1 x USB Nano Receiver
- 1 x User Manual

### 2.2 Component Identification

Refer to the diagram below for an identification of the mouse components.

# Product Details



1 Left Button	2 Forward Button	3 Back Button
4 Light indicator	5 Right Button	6 Anti-slip Scroller
7 DPI Switch	8 OFF/ON Switch	9 USB Receiver
10 2AA Batteries(Battery not included)		

*Image: Front and bottom view of the TechRise Wireless Mouse with numbered components.*

- 1. Left Button:** Standard left-click function.
- 2. Forward Button:** Navigates forward in web browsers or file explorers.
- 3. Back Button:** Navigates backward in web browsers or file explorers.
- 4. Light indicator:** Indicates power status or DPI change.
- 5. Right Button:** Standard right-click function.
- 6. Anti-slip Scroller:** Scroll wheel for vertical navigation.
- 7. DPI Switch:** Button to cycle through DPI settings.
- 8. OFF/ON Switch:** Power switch for the mouse.
- 9. USB Receiver:** Wireless receiver for connecting to a computer.
- 10. 2 AA Batteries (not included):** Battery compartment.

## 3. SETUP

---

### 3.1 Installing Batteries

1. Locate the battery compartment on the underside of the mouse.
2. Open the battery compartment cover.
3. Insert two (2) AA batteries (not included) into the compartment, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.




2.5X Longer



# 30 Months Battery Life

2.5X Longer Power

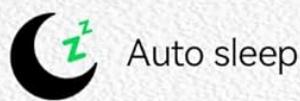

Auto sleep



2 AA batteries

*Image: The underside of the mouse with the battery cover removed, showing two AA batteries inside.*

## 3.2 Connecting the USB Receiver

1. Locate the USB Nano Receiver, typically stored within the battery compartment of the mouse.
2. Remove the USB receiver from its storage slot.
3. Plug the USB receiver into an available USB port on your computer (laptop or desktop).

4. Turn on the mouse using the OFF/ON switch located on the underside.
5. Your computer should automatically detect and install the necessary drivers. This is a plug-and-play device.

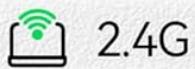


*Image: The TechRise Wireless Mouse shown alongside its compact USB receiver, ready for connection.*



# Plug and Play

No Delays, No Dropouts



2.4G



15M



15m



*Image: A close-up of the USB receiver plugged into a laptop's USB port, indicating a successful connection.*

## 4. OPERATING INSTRUCTIONS

### 4.1 Basic Operation

Once connected, the mouse is ready for use. Move the mouse on a flat surface to control the cursor on your screen. Use

the left and right buttons for clicking and the scroll wheel for vertical navigation.

# Ergonomically Shaped

## Comfortable Feeling



*Image: A hand demonstrating the ergonomic grip on the TechRise Wireless Mouse, highlighting its comfortable design.*

### 4.2 DPI Adjustment

The mouse features 6 adjustable DPI levels to customize cursor sensitivity. Press the DPI Switch button (7) located behind the scroll wheel to cycle through the settings:

- 800 DPI
- 1200 DPI
- 1600 DPI
- 2400 DPI
- 3200 DPI
- 4800 DPI

Each press of the DPI button will change the sensitivity, indicated by the light indicator (4).

# 6-DPI Adjustments

Meets your different needs



*Image: A visual representation of the 6-level DPI adjustment, showing the range from 800 to 4800 DPI.*

## 4.3 Side Buttons (Forward/Back)

The forward (2) and back (3) buttons are pre-programmed for navigation in web browsers and file explorers. These buttons enhance productivity by allowing quick page navigation.

*Note: On Mac OS, the side buttons may not be applicable or require specific software configuration.*

## 5. BATTERY MANAGEMENT

---

The TechRise Wireless Mouse is designed for extended battery life, up to 30 months, through advanced power management features.

### 5.1 Power Saving Features

- **Automatic Sleep Mode:** The mouse will enter a sleep mode after a period of inactivity to conserve battery power. To wake the mouse, simply move it or click any button.
- **OFF/ON Switch:** For prolonged periods of non-use, it is recommended to turn off the mouse using the OFF/ON switch (8) on the underside to maximize battery life.




2.5X Longer



# 30 Months Battery Life

2.5X Longer Power

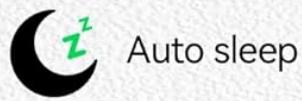

Auto sleep



2 AA batteries

*Image: The underside of the mouse, illustrating the battery compartment and the location of the power switch.*

## 5.2 Battery Replacement

When the mouse performance degrades or the light indicator (4) flashes, it may be time to replace the batteries. Follow the steps in Section 3.1 to replace the two AA batteries.

## 6. COMPATIBILITY

The TechRise Wireless Mouse offers broad compatibility with various operating systems:

- Windows XP, Windows Vista, Windows 7, Windows 8, Windows 10, Windows 11
- Chromebook / Chrome OS
- Mac OS (Note: Side buttons may not be fully functional or require specific software configuration)
- Linux

# Universal Compatibility



Windows




ChromeOS



Linux



Mac OS

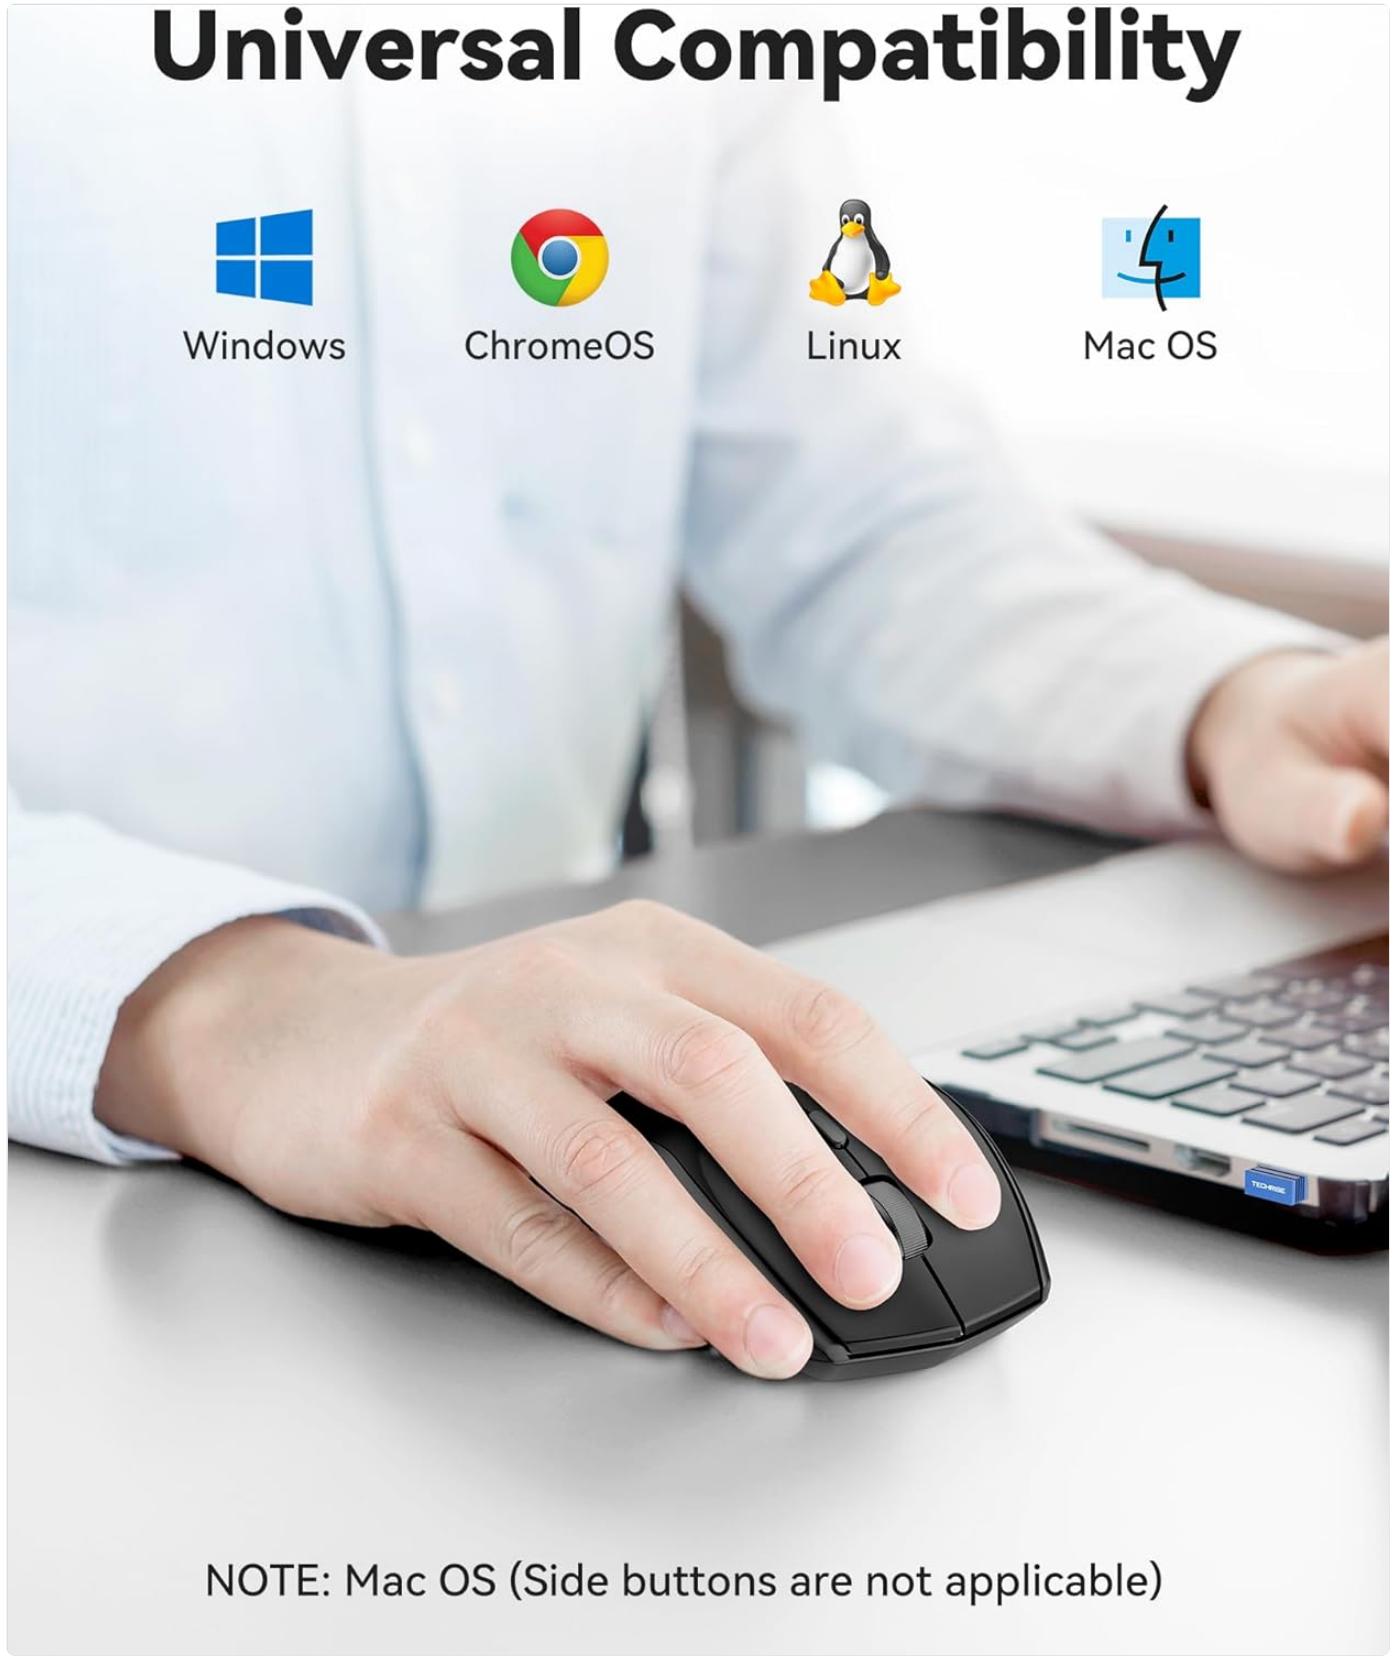

NOTE: Mac OS (Side buttons are not applicable)

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Mouse not responding	Batteries are low or incorrectly installed. Mouse is turned off. USB receiver is not properly connected. Interference from other wireless devices.	Replace batteries or ensure correct polarity. Turn on the mouse using the OFF/ON switch. Plug the USB receiver into a different USB port. Move the mouse closer to the receiver or away from other wireless devices.
Cursor movement is erratic or slow	Low battery. Dirty optical sensor. Mouse used on an unsuitable surface. DPI setting is too low.	Replace batteries. Clean the optical sensor with a soft, dry cloth. Use the mouse on a clean, non-reflective mouse pad or surface. Increase the DPI setting using the DPI switch.
Side buttons not working on Mac OS	Default Mac OS behavior.	This is a known limitation. Consider using third-party software for button remapping if desired.

## 8. SPECIFICATIONS

- Connectivity:** 2.4 GHz Wireless (USB Receiver)
- DPI Levels:** 800 / 1200 / 1600 / 2400 / 3200 / 4800 (Adjustable)
- Buttons:** 6 (Left, Right, Scroll Wheel, DPI Switch, Forward, Back)
- Battery Type:** 2 x AA Batteries (not included)
- Estimated Battery Life:** Up to 30 months
- Movement Detection:** Optical
- Product Dimensions:** 4.45 x 2.83 x 0.1 inches
- Item Weight:** 3.84 ounces
- Compatibility:** Windows XP/Vista/7/8/10/11, Chromebook, Mac OS, Linux

## 9. SAFETY INFORMATION

- Do not expose the mouse to extreme temperatures or humidity.
- Avoid dropping or subjecting the mouse to strong impacts.
- Do not attempt to disassemble or modify the mouse. This will void the warranty.
- Keep out of reach of children.
- Dispose of batteries according to local regulations.

## 10. WARRANTY AND SUPPORT

TechRise products are designed and manufactured to the highest quality standards. For warranty information or technical support, please contact TechRise customer service through the retailer where the product was purchased or visit the

official TechRise website.

**TechRise Official Store:** <https://www.amazon.com/stores/TechRise/page/1F20A320-FE73-4433-BA0D-FCAE95E5ECCC>

Please retain your proof of purchase for warranty claims.

© 2025 TechRise. All rights reserved.