

H.Koenig FRY880

H.Koenig FRY880 XXL 8L Air Fryer Instruction Manual

Model: FRY880 | Brand: H.Koenig

1. IMPORTANT SAFETY INSTRUCTIONS

Please read this instruction manual carefully before using the appliance and keep it for future reference. Incorrect operation may cause damage to the appliance or injury to the user.

- Always ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Do not immerse the appliance, cord, or plug in water or any other liquid to prevent electric shock.
- Supervise children closely when the appliance is in use.
- Unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool before attaching or removing parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use accessories not recommended by the appliance manufacturer, as this may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "off", then remove the plug from the wall outlet.
- Do not use the appliance for anything other than its intended use.
- This appliance is for household use only.
- Ensure the basket is properly inserted before operation.
- Hot air is released through the air outlet opening. Keep your hands and face at a safe distance from the air outlet opening.

2. PRODUCT OVERVIEW

The H.Koenig FRY880 air fryer uses hot air circulation to cook food, providing a healthier alternative to traditional deep frying with little to no oil. It features a large 8-liter capacity and a user-friendly touch control panel.



Image 2.1: Front view of the H.Koenig FRY880 Air Fryer, showcasing its sleek black design and digital touch display. The display shows "180 °C" and various cooking icons.

2.1 Components

- Main Unit with Heating Element and Fan
- Removable Frying Basket
- Removable Non-Stick Rack
- Touch Control Panel with Digital Display
- Power Cord



Image 2.2: The H.Koenig FRY880 Air Fryer with its main unit on the left and the removable frying basket and non-stick rack detached on the right, illustrating the separate components for cooking and cleaning.

2.2 Control Panel Features



Image 2.3: A close-up view of the H.Koenig FRY880 Air Fryer's digital touch control panel. It displays "180 °C" and features icons for various cooking programs, temperature adjustment (+/-), timer adjustment, and power on/off.

- **Digital Display:** Shows temperature and time.
- **Power Button:** Turns the appliance on/off.
- **Mode/Program Selection (M):** Cycles through 5 pre-set cooking programs.
- **Temperature Adjustment (+/-):** Adjusts cooking temperature from 80 °C to 200 °C.
- **Timer Adjustment (+/-):** Adjusts cooking time up to 60 minutes.
- **Start/Pause Button:** Initiates or pauses the cooking cycle.

3. SETUP AND FIRST USE

3.1 Unpacking

1. Remove all packaging materials from the air fryer.
2. Check that all components are present and undamaged.
3. Remove any stickers or labels from the appliance.

3.2 Cleaning Before First Use

1. Wipe the exterior of the appliance with a damp cloth.
2. Clean the frying basket and non-stick rack with hot water, dish soap, and a non-abrasive sponge. These parts are also dishwasher-safe.
3. Rinse thoroughly and dry all parts completely before use.

3.3 Placement

- Place the air fryer on a stable, heat-resistant, and level surface.
- Ensure there is at least 10 cm of free space around the back and sides of the appliance to allow for proper ventilation.
- Do not place the appliance near walls or other appliances that are sensitive to heat.

4. OPERATING INSTRUCTIONS

4.1 Basic Operation

1. Place the non-stick rack inside the frying basket.
2. Place the food into the frying basket. Do not overfill the basket to ensure even cooking.
3. Slide the frying basket back into the air fryer until it clicks into place.
4. Plug the power cord into a grounded wall outlet. The appliance will beep, and the display will light up.
5. Press the Power button to turn on the air fryer.
6. **Manual Mode:** Use the temperature (+/-) buttons to set the desired cooking temperature (80-200 °C) and the timer (+/-) buttons to set the cooking time (up to 60 minutes).
7. **Pre-set Programs:** Press the Mode (M) button to cycle through the 5 pre-set cooking programs. Each program has a default temperature and time, which can be adjusted manually if needed.
8. Press the Start/Pause button to begin cooking.
9. During cooking, you can pull out the basket to shake or turn food. The air fryer will automatically pause and resume when the basket is reinserted.
10. An audible alarm will sound when the cooking time is complete, and the appliance will automatically shut off.
11. Carefully pull out the basket and transfer the cooked food to a plate. Use heat-resistant tongs.



Image 4.1: The H.Koenig FRY880 Air Fryer with its basket pulled out, revealing a generous portion of golden-brown fries, demonstrating its cooking capacity.

4.2 Cooking Tips

- For best results, shake the basket halfway through cooking for items like fries or chicken nuggets.
- Lightly spray or brush food with oil for extra crispiness, especially for fresh vegetables.
- Refer to a reliable air fryer recipe guide for specific cooking times and temperatures for various foods.
- Preheating the air fryer for 3-5 minutes can improve cooking results for some foods.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

5.1 Cleaning After Each Use

1. Unplug the air fryer and allow it to cool completely before cleaning.
2. Remove the frying basket and rack.

3. Wash the basket and rack with hot water, dish soap, and a non-abrasive sponge. They are also dishwasher-safe.
4. Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaners.
5. Clean the interior of the air fryer with a damp cloth. If necessary, use a soft brush to remove food residue from the heating element.
6. Ensure all parts are completely dry before storing or next use.

5.2 Storage

- Store the cleaned and dried air fryer in a cool, dry place.
- Do not wrap the power cord tightly around the appliance.

6. TROUBLESHOOTING

If you encounter any issues with your H.Koenig FRY880 air fryer, please refer to the following table before contacting customer support.

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in. Power outlet not working.	Ensure the power cord is securely plugged into a grounded outlet. Test the outlet with another appliance.
Food is not cooked evenly.	Basket is overfilled. Food not shaken during cooking.	Reduce the amount of food in the basket. Shake the basket halfway through cooking.
Food is not crispy.	Not enough oil (for some foods). Temperature too low or time too short.	Lightly spray or brush food with a small amount of oil. Increase temperature or cooking time.
White smoke coming from the appliance.	Grease residue from previous use. High-fat food being cooked.	Clean the basket and interior thoroughly. For high-fat foods, drain excess fat from the basket during cooking.
Basket does not slide in properly.	Basket is not aligned correctly. Food is obstructing the basket.	Ensure the basket is empty and aligned with the guides. Rearrange food to ensure it does not protrude.

7. SPECIFICATIONS

Feature	Detail
Brand	H.Koenig
Model Number	FRY880

Feature	Detail
Color	Black
Capacity	8 Liters
Power	1700 Watts
Voltage	230 Volts
Material	Metal
Temperature Range	80 °C to 200 °C
Timer	Up to 60 minutes
Cooking Programs	5 pre-set programs
Control Type	Touch Screen Digital
Product Dimensions (L x W x H)	38 x 31 x 37 cm
Item Weight	3.7 Kilograms
Recommended Uses	Bake, Defrost, Reheat

fry880

8L

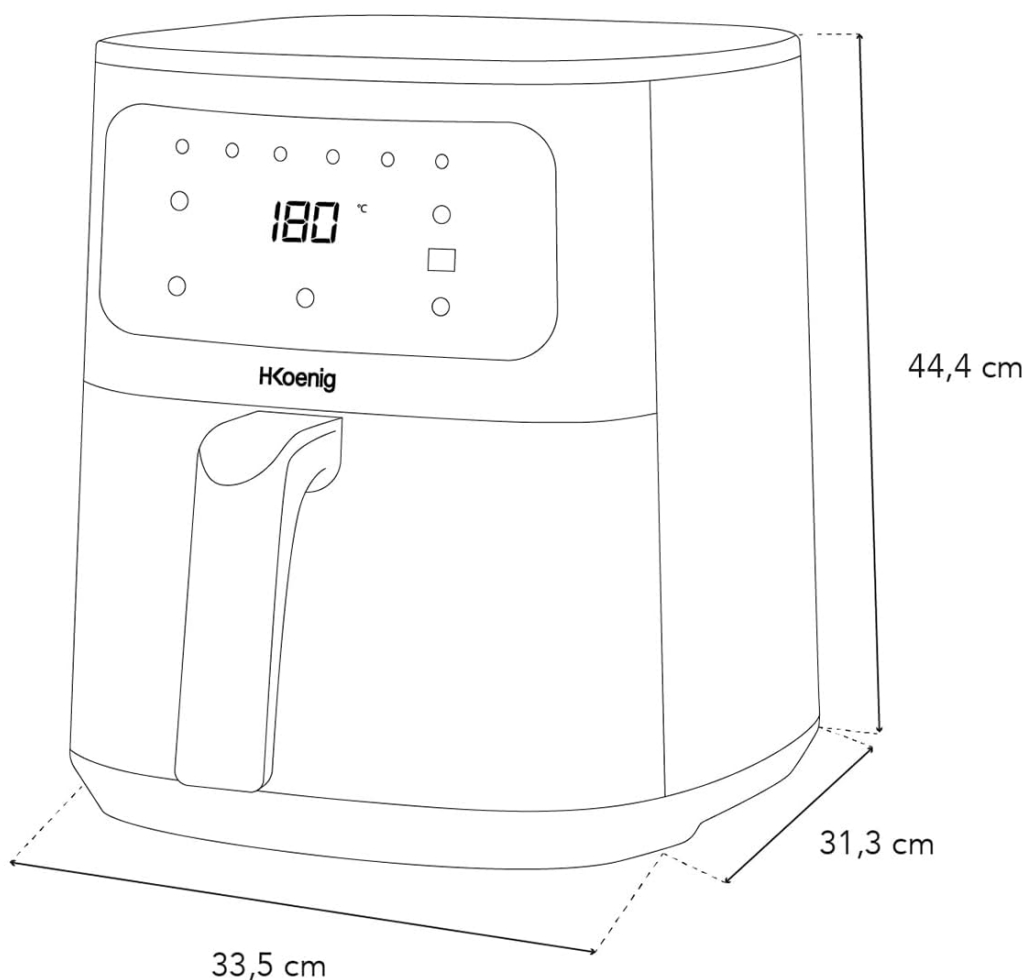


Image 7.1: Technical drawing of the H.Koenig FRY880 Air Fryer, showing its dimensions: 44.4 cm height, 31.3 cm width, and 33.5 cm depth, along with the model number FRY880 and 8L capacity.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The H.Koenig FRY880 Air Fryer comes with an initial warranty period, which can be extended. The product description mentions an extended 2-year warranty, supported by an after-sales service center in Spain and Portugal. Please refer to your purchase documentation for the exact warranty terms and registration process.







For warranty claims, retain your proof of purchase.

8.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty service, please contact H.Koenig customer support. Contact details can typically be found on the official H.Koenig website or on your product packaging.

When contacting support, please have your model number (FRY880) and proof of purchase readily available.

Related Documents - FRY880

	<p>H.Koenig fry840 Air Fryer Instruction Manual</p> <p>User manual for the H.Koenig fry840 Air Fryer, providing instructions for safe operation, maintenance, and technical specifications for healthy cooking.</p>
	<p>H.Koenig FRY960 10L Oil-Free Deep Fryer: Healthy and Tasty Cooking</p> <p>Discover the H.Koenig FRY960, a 10L oil-free deep fryer with 2400W power for healthy and tasty cooking. Features 8 programs, intuitive touchscreen, and a large basket for versatile meal preparation.</p>
	<p>Profi Cook PC-FR 1242 H Double Hot Air Fryer: User Manual & Operation Guide</p> <p>Explore the Profi Cook PC-FR 1242 H Double Hot Air Fryer with this comprehensive user manual. Learn about its dual-basket functionality, automatic programs, safe operation, cleaning, and troubleshooting tips for efficient cooking.</p>
	<p>IZZY Air Fryer Dual 11lt IZ-8260: Οδηγίες Χρήσης & Εγχειρίδιο</p> <p>Οδηγίες χρήσης και πληροφορίες για την IZZY Air Fryer Dual 11lt IZ-8260. Μάθετε για τις λειτουργίες, τα προγράμματα, την ασφάλεια και τη συντήρηση της συσκευής.</p>
	<p>Toshiba AF-52CSROUS(H) Air Fryer Recipes: Delicious Delicacies</p> <p>Explore a collection of delicious recipes for the Toshiba 5.5QT Air Fryer (Model AF-52CSROUS(H)), featuring starters, main courses, and desserts. Enhance your cooking with easy-to-follow instructions.</p>
	<p>H.Koenig UPX22 Cordless Vacuum Cleaner: Instruction Manual & User Guide</p> <p>Comprehensive instruction manual for the HKoenig UPX22 cordless vacuum cleaner. Includes safety guidelines, operation, installation, maintenance, troubleshooting, and technical specifications for optimal use.</p>