



[Manuals.plus](#) /

› [Cutting Edge](#) /

› Cutting Edge CXR1-1005-INT Rechargeable Cordless Rotary Shaver User Manual

Cutting Edge CXR1-1005-INT

Cutting Edge CXR1-1005-INT Rechargeable Cordless Rotary Shaver User Manual

Model: CXR1-1005-INT

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Cutting Edge CXR1-1005-INT Rechargeable Cordless Rotary Shaver. Please read all instructions carefully before first use and retain this manual for future reference.

IMPORTANT SAFETY INFORMATION

- Always keep the shaver away from water while charging.
- Avoid using the shaver near water or while charging to prevent electrical hazards.
- Always clean the shaver after each use to maintain hygiene and prevent bacterial growth.
- Exercise caution while using the shaver to avoid cuts and skin irritation.
- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

PACKAGE CONTENTS

Upon unpacking, please verify that all items are present and in good condition:

- Cutting Edge CXR1-1005-INT Rotary Shaver
- Charging Cable
- Cleaning Brush
- Protective Cap
- User Manual (this document)

PRODUCT FEATURES

- **Efficient Rechargeable Performance:** Up to 45 minutes of continuous shaving after an 8-hour charge.
- **Versatile Pop-Up Trimmer:** Integrated for precise detailing and shaping.
- **Comfortable and Close Shave:** Rotary blades adapt to facial contours for minimal irritation.
- **Convenient Wet or Dry Operation:** Suitable for use with or without shaving foam/gel.
- **Ergonomic Design:** Lightweight and easy to handle for comfortable use.
- **Special Features:** Battery Indicator, Cordless, Washable.

SETUP

1. Initial Charging

Before first use, fully charge the shaver for approximately 8 hours. The battery indicator will show charging status.

1. Ensure the shaver is turned off.
2. Connect the charging cable to the shaver's charging port.
3. Plug the other end of the charging cable into a suitable power outlet.
4. Allow the shaver to charge for 8 hours. Do not use the shaver while it is charging.





Image: The Cutting Edge CXR1-1005-INT Rotary Shaver. This image displays the shaver's ergonomic design and the power button, indicating its readiness for charging or operation.

2. Initial Cleaning

After charging, it is recommended to perform a quick rinse of the shaver head under running water before the first shave.

OPERATING INSTRUCTIONS

1. Basic Shaving (Wet or Dry)

1. Press the power button to turn on the shaver.
2. For dry shaving, ensure your skin is clean and dry.
3. For wet shaving, apply shaving foam or gel to your face.
4. Hold the shaver at a right angle to your skin and move it in small, circular motions.
5. Stretch your skin with your free hand to ensure a close shave.
6. After shaving, rinse your face and the shaver head.

2. Using the Pop-Up Trimmer

The integrated pop-up trimmer is ideal for precise detailing and shaping.

1. Locate the pop-up trimmer switch on the back of the shaver.
2. Slide the switch upwards to activate the trimmer.
3. Use the trimmer to define sideburns, trim mustaches, or shape beard contours.
4. After use, slide the switch downwards to retract the trimmer.

3. Tips for Best Results

- Shave before washing your face for dry shaving.
- For wet shaving, use warm water to soften your beard before applying foam/gel.
- Replace shaving heads annually for optimal performance.
- Allow your skin to adapt to the new shaver for a few weeks if you are switching from a different shaving method.

MAINTENANCE

1. Cleaning the Shaver

Regular cleaning ensures optimal performance and hygiene.

1. Turn off the shaver and disconnect it from the power source.
2. Open the shaver head assembly (refer to diagrams if available, or gently twist/pull).
3. Rinse the shaver head and the internal cutting elements under warm running water.
4. Use the provided cleaning brush to remove any stubborn hair particles.
5. Allow all parts to air dry completely before reassembling the shaver head.
6. Close the shaver head assembly securely.

2. Replacing Shaving Heads

For continued optimal performance, it is recommended to replace the shaving heads approximately once a year. Replacement heads can be purchased from authorized retailers or the manufacturer's website.

1. Turn off the shaver and disconnect it from the power source.
2. Open the shaver head assembly.
3. Carefully remove the old shaving heads.
4. Insert the new shaving heads, ensuring they click into place.
5. Close the shaver head assembly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver for 8 hours.
Shaver pulls hair or shaves poorly.	Shaver heads are dirty or worn.	Clean the shaver heads thoroughly. Consider replacing shaving heads if they are old.
Shaver makes unusual noise.	Hair or debris caught in the shaver head.	Clean the shaver head. If the noise persists, contact customer support.

Problem	Possible Cause	Solution
Skin irritation after shaving.	Incorrect shaving technique or sensitive skin.	Ensure proper shaving technique (small circular motions, not pressing too hard). Try wet shaving with foam/gel. Allow skin to adapt.

SPECIFICATIONS

- **Model Name:** CXR1
- **Item Model Number:** CXR1-1005-INT
- **Brand:** Cutting Edge
- **Power Source:** Battery Powered
- **Runtime:** Up to 45 minutes (after 8-hour charge)
- **Features:** Cordless, Wet & Dry Operation, Pop-Up Trimmer, Battery Indicator, Washable, Ergonomic Design
- **Recommended Uses:** Beard, Face, Lip, Mustache, Scalp
- **Package Dimensions:** 8 x 5.25 x 1.5 inches
- **Item Weight:** 12.8 ounces

WARRANTY AND SUPPORT

This Cutting Edge product is covered by a manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Cutting Edge website.

For technical support, replacement parts, or further assistance, please contact Cutting Edge customer service. Contact information can typically be found on the product packaging or the brand's official website.