

Masterpart 00634806

Masterpart Adjustable Screw-In Foot Leg Instruction Manual

For Siemens Fridges & Freezers (KG33, KG34, KG36 Series)

1. PRODUCT OVERVIEW

This Masterpart Adjustable Screw-In Foot Leg is a genuine, original manufacturer's replacement part designed to provide stable support and leveling for compatible Siemens fridge and freezer models. It ensures your appliance remains level, which is crucial for optimal performance, energy efficiency, and proper door sealing.

Manufacturer's Part Number: 00634806



Figure 1: The Masterpart Adjustable Screw-In Foot Leg, showing its hexagonal base and threaded screw.

2. WHAT'S IN THE Box

- 1 x Masterpart Fridge & Freezer Adjustable Screw-In Foot Leg

3. COMPATIBILITY

This adjustable foot leg is compatible with a wide range of Siemens fridge and freezer models, specifically those in the KG33, KG34, and KG36 series. Please verify your appliance's model number against the list below to ensure compatibility.

Compatible Models Include:

- KG34NX90GB/14, KG34NX90GB/96, KG34NX90GB/97, KG34NX90GB/99
- KG34NX93GB/01, KG34NX93GB/02, KG34NX93GB/03, KG34NX93GB/04, KG34NX93GB/06, KG34NX93GB/07, KG34NX93GB/08, KG34NX93GB/10
- KG34NX94GB/01, KG34NX94GB/02, KG34NX94GB/03, KG34NX94GB/04, KG34NX94GB/05, KG34NX94GB/06
- KG36EX35/01, KG36EX45/01
- KG36NY20/01, KG36NY20/02, KG36NY20/03, KG36NY20/04, KG36NY20/05, KG36NY20/06, KG36NY20/07
- KG36NY40/02, KG36NY40/03, KG36NY40/04, KG36NY40/05, KG36NY40/06, KG36NY40/07, KG36NY40/08, KG36NY40/09
- KG36VA72/01, KG36VE27/01, KG36VE27/99
- KG36VE45/01 to KG36VE45/11, KG36VE45/90 to KG36VE45/99 (various sub-models)
- KG36VE77/02, KG36VE77/98
- KG36VV00/01 to KG36VV00/10 (various sub-models)
- KG36VV03/01 to KG36VV03/06, KG36VV03/95 to KG36VV03/99 (various sub-models)
- KG36VV04/01, KG36VV04/02
- KG36VV43/01 to KG36VV43/06 (various sub-models)
- KG36VX00/01 to KG36VX00/11 (various sub-models)
- KG36VX03/01 to KG36VX03/07, KG36VX03/94 to KG36VX03/99 (various sub-models)
- KG36VX13/01 to KG36VX13/06 (various sub-models)
- KG36VX15/01 to KG36VX15/05 (various sub-models)
- KG36VX27/01 to KG36VX27/05, KG36VX27/96 to KG36VX27/99 (various sub-models)
- KG36VX27GB/01, KG36VX27GB/02, KG36VX27GB/99
- KG36VX42/01 to KG36VX42/12, KG36VX42/90 to KG36VX42/99 (various sub-models)
- KG36VX43/01 to KG36VX43/11, KG36VX43/91 to KG36VX43/99 (various sub-models)
- KG36VX44/01 to KG36VX44/10 (various sub-models)
- KG36VX46/01 to KG36VX46/08 (various sub-models)
- KG36VX47/01 to KG36VX47/09, KG36VX47/92 to KG36VX47/99 (various sub-models)
- KG36VX47GB/01 to KG36VX47GB/05 (various sub-models)
- KG36VX50/01 to KG36VX50/11 (various sub-models)
- KG36VX74/01
- KG36VX77/01 to KG36VX77/05, KG36VX77/96 to KG36VX77/99 (various sub-models)
- KG36VX77GB/01, KG36VX77GB/02, KG36VX77GB/99
- KG36VX78/01
- KG36VY30/01 to KG36VY30/07, KG36VY30/94 to KG36VY30/99 (various sub-models)

- KG36VY32/01 to KG36VY32/03, KG36VY32/97 to KG36VY32/99 (various sub-models)
- KG36VY40/01 to KG36VY40/10 (various sub-models)

This list is not exhaustive. If your model is not listed, please cross-reference with the manufacturer's part number 00634806.

4. INSTALLATION INSTRUCTIONS

Replacing or installing the adjustable foot leg is a straightforward process. Always prioritize safety when working with appliances.

1. **Safety First:** Before beginning, ensure the fridge or freezer is completely unplugged from the power outlet to prevent electrical hazards.
2. **Empty and Move Appliance:** If possible, empty the contents of the appliance to reduce weight. Carefully tilt or lay the appliance on its back or side to access the bottom, ensuring it is stable and supported. Use padding (e.g., blankets, cardboard) to protect the appliance's finish and your flooring.
3. **Locate the Foot Leg:** Identify the existing foot leg that needs replacement or the designated screw-in point for a new installation.
4. **Remove Old Foot Leg (if applicable):** If replacing, unscrew the old foot leg by turning it counter-clockwise until it detaches. It may be stiff due to age or corrosion.
5. **Install New Foot Leg:** Take the new Masterpart adjustable foot leg. Align the threaded screw with the corresponding hole on the appliance's base. Turn the foot leg clockwise to screw it into place.



Figure 2: Close-up view of the foot leg's threaded screw, which allows for secure installation and height adjustment.

6. **Secure Tightly:** Continue screwing until the foot leg is firmly seated. Do not overtighten, but ensure it is snug to prevent wobbling.
7. **Return Appliance to Upright Position:** Carefully return the fridge or freezer to its upright position.

5. FUNCTION AND ADJUSTMENT

The primary function of the adjustable foot leg is to level your appliance. A level appliance operates more efficiently, reduces noise, and prevents issues like doors not closing properly.

1. **Check Level:** Use a spirit level on top of the appliance to check if it is level from front to back and side to side.
2. **Adjusting Height:** To adjust the height, gently tilt the appliance slightly to relieve pressure on the foot leg you wish to adjust. Turn the foot leg clockwise to raise the corner of the appliance, or counter-clockwise to lower it.



Figure 3: Top view of the foot leg, illustrating the central screw hole for attachment and adjustment.

3. **Re-check and Fine-tune:** Once adjusted, release the tilt and re-check the level. Repeat the adjustment process as needed until the appliance is perfectly level and stable on all feet.

6. CARE AND MAINTENANCE

The Masterpart adjustable foot leg requires minimal maintenance. Periodically check the following:

- **Stability Check:** Gently push on the corners of the appliance to ensure it does not wobble. If it does, re-level it.
- **Cleanliness:** Keep the area around the foot legs clean and free of debris, which could interfere with stability or adjustment.
- **Corrosion:** In humid environments, occasionally check for signs of corrosion on the metal screw part.

7. TROUBLESHOOTING

If your appliance is unstable or wobbling after installation, consider the following:

- **Appliance Not Level:** Re-check the level of the appliance using a spirit level and adjust the foot legs as described in Section 5.
- **Foot Leg Not Fully Screwed In:** Ensure the foot leg is securely screwed into its mounting point.
- **Damaged Thread:** Inspect the threads on both the foot leg and the appliance's mounting point for any

damage. If damaged, the foot leg or appliance may require professional repair.

- **Uneven Flooring:** Even with adjustable feet, extremely uneven flooring can pose challenges. Consider placing a sturdy, flat shim under the appliance's base if necessary.

8. SPECIFICATIONS

Attribute	Detail
Brand	Masterpart
Model / Part Number	00634806
Product Dimensions	2.5 x 2.5 x 3.5 cm
Colour	Black/Silver
Included Components	Fridge & Freezer Adjustable Screw in Foot Leg

9. SUPPORT AND WARRANTY

For further assistance, technical support, or inquiries regarding this Masterpart product, please contact your retailer or the Masterpart customer service department.

Information regarding specific warranty terms and conditions for this replacement part should be obtained from your point of purchase or the official Masterpart website. Keep your proof of purchase for any warranty claims.