

[manuals.plus](#) /› [Beautiful](#) /› [Beautiful 14-Cup Programmable Drip Coffee Maker User Manual, Model B0D9526BGY](#)

## Beautiful B0D9526BGY

# Beautiful 14-Cup Programmable Drip Coffee Maker

**MODEL: B0D9526BGY**

---

## 1. Introduction

---

This manual provides essential information for the safe and efficient operation of your Beautiful 14-Cup Programmable Drip Coffee Maker. Please read all instructions carefully before first use and retain for future reference.

The coffee maker features a 14-cup capacity, fast-brew technology, a touch-activated display, and programmable settings for convenience. It also includes auto-pause and keep-warm functions.

---

## 2. Safety Information

---

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the brewing cycle.

### 3. Product Overview

Familiarize yourself with the components of your coffee maker:

- **Water Reservoir:** Holds water for brewing.
- **Filter Basket:** Holds coffee grounds. Includes a reusable gold filter basket.
- **Glass Carafe:** Collects brewed coffee.
- **Control Panel:** Touch-activated display for settings and operation.
- **Warming Plate:** Keeps coffee warm after brewing.



Figure 3.1: Front view of the Beautiful 14-Cup Programmable Drip Coffee Maker, showcasing its touch-activated display and sleek design.



Figure 3.2: An overhead view of the coffee maker with the lid raised, highlighting the removable filter basket, replaceable charcoal water filter, and permanent gold-tone filter for optimal freshness.

Your browser does not support the video tag.

Video 3.1: This video demonstrates the touch-activated display and the process of opening the lid to access the water reservoir and filter basket.

## 4. Setup

- 1. Unpacking:** Carefully remove all packaging materials and inspect the coffee maker for any damage.
- 2. Initial Cleaning:** Before first use, wash the carafe, lid, and filter basket in warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the coffee maker with a damp cloth.
- 3. First Brew Cycle (without coffee):** Fill the water reservoir to the 14-cup mark with fresh, cold water. Place the empty filter basket and carafe in position. Run a full brew cycle to clean the internal components. Discard the water.
- 4. Placement:** Place the coffee maker on a flat, stable, heat-resistant surface, away from the edge of the counter.

## 5. Operating Instructions

### 5.1. Setting the Clock

To set the current time:

1. Ensure the coffee maker is plugged in. The display will flash.
2. Press the 'HOUR' button to adjust the hour. Press and hold for faster adjustment.

3. Press the 'MINUTE' button to adjust the minutes. Press and hold for faster adjustment.

4. The clock is set automatically after a few seconds of inactivity.

## 5.2. Brewing Coffee

1. Open the top lid and fill the water reservoir with fresh, cold water to your desired level (up to 14 cups).
2. Place the reusable filter basket into its holder. Add your desired amount of ground coffee to the filter basket. A general guideline is 1 tablespoon of coffee per cup.
3. Close the top lid securely.
4. Place the empty glass carafe on the warming plate.
5. Press the 'BREW/OFF' button to start brewing. The display will indicate the brewing process.
6. The coffee maker will automatically keep the coffee warm for a period after brewing.

## 5.3. Programming Delay Brew

To set a delayed brew time:

1. Prepare the coffee maker with water and coffee grounds as described in section 5.2.
2. Press the 'PROGRAM' button. The display will show 'PROGRAM' and allow you to set the desired brew start time using the 'HOUR' and 'MINUTE' buttons.
3. Once the desired time is set, press the 'PROGRAM' button again to confirm. The 'PROGRAM' indicator will light up.
4. The coffee maker will automatically start brewing at the programmed time.

## 5.4. Brew Strength Selection

This coffee maker offers different brew strength options. Consult the specific model's control panel for 'STRONG' or similar buttons to adjust the coffee intensity before brewing.

Your browser does not support the video tag.

Video 5.1: This video illustrates the coffee maker in operation, including the brewing process and the final result.

# 6. Maintenance and Cleaning

## 6.1. Daily Cleaning

- After each use, discard used coffee grounds and rinse the filter basket.
- Wash the carafe and filter basket in warm, soapy water or place them in the dishwasher (top rack only).
- Wipe the exterior of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.

## 6.2. Descaling

Mineral deposits from water can build up in your coffee maker and affect its performance. Descaling your coffee maker regularly (e.g., monthly or every 60 uses, as indicated by a flashing 'CLEAN' light if available) using a descaling solution or a mixture of white vinegar and water (1:2 ratio).

1. Fill the water reservoir with the descaling solution or vinegar mixture.
2. Place an empty filter basket and carafe.
3. Run a full brew cycle.

4. After the cycle, let the solution sit in the carafe for 15-30 minutes.
5. Discard the solution and run 2-3 cycles with fresh, cold water to rinse thoroughly.

## 7. Troubleshooting

Problem	Possible Cause	Solution
Coffee not brewing.	Not plugged in; power outage; brew cycle not started.	Check power connection; ensure 'BREW/OFF' button is pressed.
Weak coffee.	Insufficient coffee grounds; incorrect brew strength setting.	Add more coffee grounds; select a stronger brew setting.
Coffee overflows from filter basket.	Too many coffee grounds; filter basket not seated correctly; clogged filter.	Reduce coffee grounds; ensure filter basket is properly in place; clean filter.
Coffee leaks when pouring from carafe.	Carafe spout design; pouring too quickly.	Pour slowly and carefully. Some carafe designs may be prone to minor drips.
Coffee is not hot enough.	Warming plate not active; descaling needed.	Ensure warming plate is on; descale the coffee maker.

## 8. Specifications

- Brand:** Beautiful
- Model Name:** Coffee Maker
- ASIN:** B0D9526BGY
- Color:** Sage Green
- Product Dimensions:** 9.58"D x 9.58"W x 14.8"H
- Item Weight:** 7 pounds
- Special Features:** Dishwasher Safe Parts, Programmable, Touch Activated
- Coffee Maker Type:** Drip Coffee Machine
- Operation Mode:** Fully Automatic
- Included Components:** Filter, Measuring scoop, Reusable gold filter basket
- Coffee Filter Size:** #6
- Manufacture Year:** 2023

## 9. Warranty and Support

For warranty information and customer support, please refer to the documentation included with your purchase or contact the manufacturer directly. Keep your proof of purchase for warranty claims.

