

Manuals.plus /

› ALLIMITY /

› Allimity Replaced Remote Control Fit for ANTTEQ Smart TV AB32 AB24

ALLIMITY ANTTEQ-1

User Manual

ALLIMITY REPLACED REMOTE CONTROL

Model: ANTTEQ-1

1. Introduction

This manual provides essential information for the proper setup, operation, and maintenance of your Allimity Replaced Remote Control, model ANTTEQ-1. This remote is designed as a direct replacement for specific ANTTEQ Smart TV models, including AB32 and AB24.

The remote control is constructed from durable ABS material, ensuring longevity and a comfortable grip. Its infrared (IR) technology allows for operation within a range of up to 30 feet, providing reliable control over your compatible television.





Figure 1: Front view of the Allimity Replaced Remote Control.

2. Setup

The Allimity Replaced Remote Control requires two AAA alkaline batteries for operation. Batteries are not included with the remote control. No programming or pairing is required; simply insert the batteries, and the remote will be ready for use with compatible ANTTEQ Smart TV models.

Battery Installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Figure 2: Battery compartment on the back of the remote control.

3. Operating Instructions

Once batteries are installed, the remote control is ready to operate your compatible ANTTEQ Smart TV. Point the remote control directly at the television's infrared receiver for optimal performance.

Key Functions:

- **Power Button:** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels.
- **Volume Up/Down:** Adjusts the audio volume.
- **Channel Up/Down:** Changes the television channel.
- **Mute Button:** Silences the television audio.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.
- **Menu Button:** Accesses the TV's main menu.
- **Source Button:** Changes the input source (HDMI, AV, etc.).
- **Colored Buttons (Red, Green, Yellow, Blue):** Specific functions depending on the TV model or application.
- *Other buttons are specific to certain TV models or functions and may vary in functionality.*

This remote control is specifically designed for ANTTEQ Smart TV models AB32 and AB24. While it may function with other models, full compatibility is guaranteed only for the specified models.

4. Maintenance

To ensure the longevity and optimal performance of your remote control, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** While durable, repeated drops can damage internal components. Handle the remote with care.

5. Troubleshooting

If you experience issues with your Allimity Replaced Remote Control, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries.	Replace batteries with new AAA alkaline batteries, ensuring correct polarity.
Remote has limited range or intermittent response.	Low batteries; Obstruction between remote and TV; Remote not pointed at TV's IR receiver.	Replace batteries; Remove any obstructions; Ensure direct line of sight to TV's IR receiver.
Certain buttons do not work.	Button stuck or damaged; TV model incompatibility for specific functions.	Gently press the button multiple times; Confirm your TV model (AB32, AB24) is fully compatible with all remote functions.
Remote works for some TVs but not mine.	TV model is not compatible.	This remote is specifically designed for ANTTEQ Smart TV models AB32 and AB24. Verify your TV model.

6. Specifications

Detailed specifications for the Allimity Replaced Remote Control:

Model Number: ANTTEQ-1

Compatible TV

Models: ANTTEQ Smart TV AB32, AB24

Power Source: 2 x AAA Alkaline Batteries (not included)

Material: ABS

Operating Range: Up to 30 feet (infrared)

Color: Black

Product Dimensions: 6 x 1.8 x 0.5 inches (approximately 15.24 x 4.57 x 1.27 cm)

Item Weight: 3.07 ounces (approximately 87 grams)

Manufacturer: YUDAXINFACTORY





Figure 3: Remote control with approximate dimensions.

7. Warranty Information

This product is typically covered by a standard manufacturer's warranty against defects in materials and workmanship. Please refer to the specific warranty terms provided at the time of purchase or contact your retailer for detailed warranty information. Keep your purchase receipt as proof of purchase.

8. Customer Support

For any questions, technical assistance, or support regarding your Allimity Replaced Remote Control, please contact the seller or the manufacturer directly through the platform where the product was purchased. Provide your order number and product model (ANTTEQ-1) for faster service.

For general inquiries, you may also refer to the product listing on Amazon.com for additional details or frequently asked questions.

