

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [CHOEZON](#) /

› [CHOEZON TV Stand with Power Outlets and LED Lights, Model MDS01UDBB \(55 inches\)](#)

CHOEZON MDS01UDBB

CHOEZON TV Stand with Power Outlets and LED Lights

Model: MDS01UDBB

Brand: CHOEZON

INTRODUCTION

This manual provides essential instructions for the assembly, operation, and maintenance of your CHOEZON MDS01UDBB TV Stand. Please read this guide thoroughly before assembly and use to ensure safe and proper functionality. This TV stand is designed to accommodate televisions up to 65 inches and features integrated power outlets, multi-color LED lighting, and adjustable glass shelves for versatile storage.

SAFETY INFORMATION

Important Safety Precautions:

- Avoid placing heavy objects on the top shelf to prevent tip-over.
- Keep small parts out of reach of children to prevent choking hazards.
- Always follow the assembly instructions carefully to ensure the stability of the TV stand.
- Do not overload the power outlets. Ensure total wattage does not exceed the specified limits.
- Place the TV stand on a level, stable surface.

PACKAGE CONTENTS

Before beginning assembly, verify that all parts listed in the included assembly guide are present and undamaged. If any parts are missing or damaged, please contact customer support.

Note: A detailed list of components and hardware can be found in the separate assembly instruction booklet.

ASSEMBLY INSTRUCTIONS

The CHOEZON MDS01UDBB TV Stand is designed for straightforward assembly. Please refer to the dedicated assembly instruction booklet provided in your package for detailed, step-by-step guidance. Ensure you have adequate space and the necessary tools before starting.

General Assembly Tips:

- Lay out all components on a soft, clean surface to prevent scratches.
- Identify each part by its label as shown in the instruction booklet.
- Do not overtighten screws during initial assembly; tighten fully once the structure is stable.
- Two people are recommended for assembly to ensure stability and ease of handling larger components.

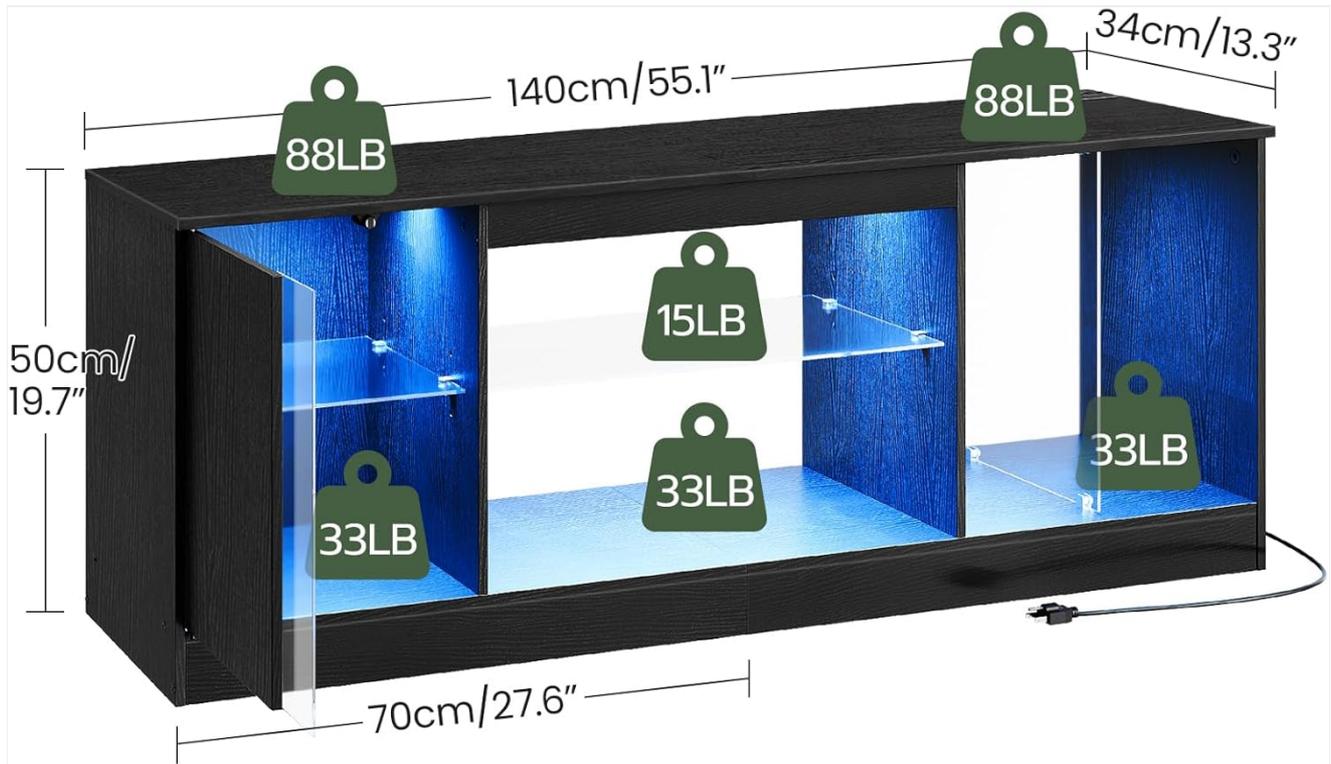


Figure 1: Product dimensions and weight capacities. The stand measures 55.1 inches long, 13.8 inches wide, and 19.7 inches high. The top surface supports up to 88 lbs, and shelves support 15 lbs or 33 lbs depending on location.



Figure 2: Overview of the TV stand's storage compartments, including two side cabinets (01, 03) and a central open shelf area (02).

3-Height Adjustable Glass Shelf

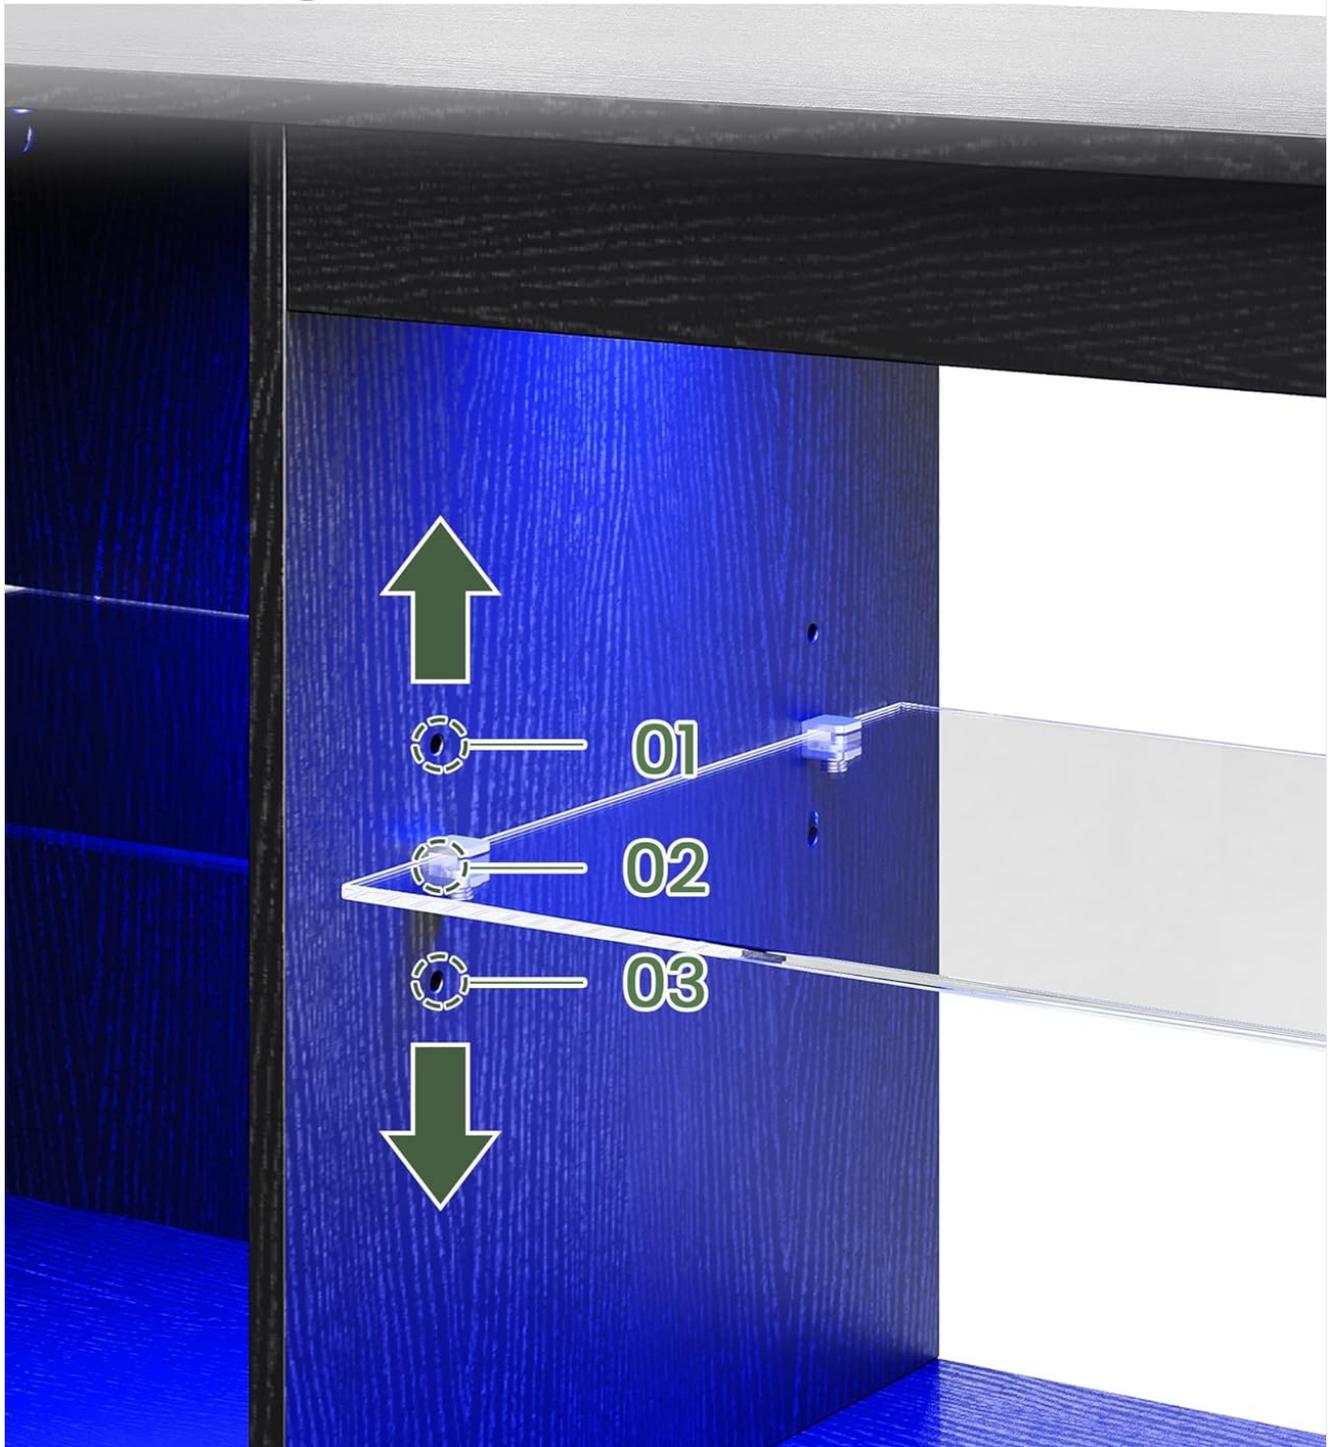


Figure 3: Detail of the adjustable glass shelf. The shelf can be positioned at three different heights (01, 02, 03) to accommodate various item sizes.

OPERATING INSTRUCTIONS

1. Using the Integrated Power Outlets

The TV stand includes a built-in power strip with 2 AC outlets (125V/12A) and 2 USB ports (5V/2A) for convenient charging and powering of your devices. The power cord is 4.9 feet long.

- Plug the TV stand's main power cord into a wall outlet.
- Connect your TV, gaming consoles, sound systems, or other electronic devices to the AC outlets.
- Use the USB ports to charge smartphones, tablets, or other USB-powered accessories.

- Ensure that the total power consumption of connected devices does not exceed the specified limits to prevent electrical overload.



Figure 4: Integrated power outlets and USB ports for convenient device connectivity.

2. Controlling the LED Lights

The TV stand features a multi-color LED strip with various settings, controlled by the included remote control.

- Ensure the LED strip is properly connected to its power source.
- Use the remote control to power the lights on/off.

- Select from 20 different colors to match your mood or decor.
- Choose from 22 dynamic modes for various lighting effects.
- Adjust the brightness using the remote control (5 brightness levels available).



Figure 5: The LED light strip offers 20 colors, 22 dynamic modes, and 5 brightness levels, all controllable via remote.

Your browser does not support the video tag.

Video 1: Demonstration of the CHOEZON LED TV Stand with Power Outlets, showcasing its features and lighting effects.

Your browser does not support the video tag.

3. Adjusting Glass Shelves

The middle partition and interior shelves of the cabinets feature 3 adjustable heights. This allows you to customize the storage space for various items, such as gaming consoles, media players, or decorative objects.

- Carefully remove any items from the shelf you wish to adjust.
- Lift the glass shelf slightly and remove the shelf pins from their current holes.
- Insert the shelf pins into the desired new height holes.
- Gently place the glass shelf back onto the pins, ensuring it is level and secure.

MAINTENANCE

To ensure the longevity and appearance of your TV stand, follow these maintenance guidelines:

- **Cleaning:** Wipe with a dry cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish or glass.
- **Dusting:** Regularly dust all surfaces to prevent buildup.
- **Spills:** Immediately wipe up any spills with a soft, dry cloth to prevent staining or damage to the engineered wood.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight and secure.

TROUBLESHOOTING

If you encounter any issues with your TV stand, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Stand is wobbly or unstable.	Loose connections or uneven floor.	Ensure all screws are tightened. Place the stand on a level surface or use shims if necessary.
LED lights are not working.	Power connection issue, remote control battery, or LED strip malfunction.	Check if the LED strip is properly plugged into its power source and the wall outlet. Replace remote control batteries. If the issue persists, contact customer support.
Power outlets are not providing power.	Main power cord unplugged, circuit breaker tripped, or overloaded outlets.	Verify the TV stand's main power cord is securely plugged into a working wall outlet. Check your home's circuit breaker. Reduce the number of devices connected to the outlets.
Glass shelf does not fit or is uneven.	Shelf pins incorrectly inserted or misaligned.	Ensure shelf pins are fully inserted into corresponding holes on both sides and are at the same height.

SPECIFICATIONS

Feature	Detail
Model Number	MDS01UDBB

Feature	Detail
Brand	CHOEZON
Dimensions (L x W x H)	55.1 x 13.8 x 19.7 inches
Item Weight	47.9 pounds
Material	Acrylic, Engineered Wood, Tempered Glass
Color	Black
Power Outlets	2 AC Outlets (125V/12A), 2 USB Ports (5V/2A)
LED Features	20 Colors, 22 Dynamic Modes, 5 Brightness Levels
Shelf Adjustability	3 adjustable heights for glass shelves
Assembly Required	Yes
Product Care	Wipe with Dry Cloth

WARRANTY AND CUSTOMER SUPPORT

For warranty information, replacement parts, or further assistance, please contact CHOEZON customer support. Refer to your purchase documentation for specific warranty terms and contact details.

Contact Information:

- Visit the official CHOEZON store on Amazon: [CHOEZON Store](#)
- Refer to the contact details provided in your product packaging.