

[Manuals.plus](#) /

› [CHOEZON](#) /

› CHOEZON Hanging Pot Rack (Model TPR03BB) - Installation and User Manual

CHOEZON TPR03BB

CHOEZON Hanging Pot Rack (Model TPR03BB) - Installation and User Manual

Model: TPR03BB | Dimensions: 23.7"L x 15.7"W x 0.8"H | Material: Metal

1. SAFETY INFORMATION

Please read all instructions carefully before installation and use. Retain this manual for future reference.

- Ensure the installation surface (ceiling) is structurally sound and capable of supporting the weight of the pot rack and all intended cookware.
- Always use appropriate mounting hardware for your specific ceiling material. The provided expansion screws are suitable for various wall types, but professional advice is recommended for uncertain structures.
- Distribute weight evenly across the pot rack to maintain stability and prevent undue stress on mounting points.
- Do not overload the pot rack beyond its intended capacity.
- Keep children and pets away from the installation area during setup.

2. PACKAGE CONTENTS

Verify all components are present before beginning assembly:

- Pot Rack Frame (1 unit)
- Mesh Shelf (1 unit)
- Metal Chains (4 units)
- S-Hooks (12 units)
- Mounting Hardware (includes expansion screws for various wall types)



Figure 2.1: All components of the CHOEZON Hanging Pot Rack, including the frame, mesh shelf, chains, and S-hooks.

3. SETUP AND INSTALLATION

Follow these steps for proper installation of your pot rack:

1. **Assemble the Rack:** Connect the mesh shelf to the pot rack frame using the provided screws. Ensure all connections are secure.
2. **Determine Mounting Location:** Select a suitable location on your ceiling, ideally above a kitchen island or counter, ensuring sufficient clearance for hanging cookware. Use a stud finder to locate ceiling joists for optimal support.
3. **Mark Drill Points:** Use the pot rack as a template to mark the four points where the chains will attach to the ceiling.

4. **Drill Pilot Holes:** Drill pilot holes at the marked locations. The size of the drill bit should match the recommended size for the chosen expansion screws.
5. **Install Ceiling Hooks:** Insert the appropriate expansion screws into the pilot holes and tighten them securely. Ensure they are firmly anchored.
6. **Attach Chains:** Connect one end of each of the four metal chains to the pot rack frame.
7. **Hang the Rack:** Carefully lift the assembled pot rack and attach the other end of each chain to the installed ceiling hooks. Adjust chain length as needed to achieve the desired height and levelness.
8. **Add S-Hooks:** Distribute the 12 movable S-hooks along the bottom bars of the pot rack.



Figure 3.1: Basic installation steps for securing the pot rack to the ceiling.

Video 3.1: An overview of the CHOEZON Hanging Pot Rack, demonstrating its design and how it can be used in a kitchen setting.

4. OPERATING INSTRUCTIONS

The CHOEZON Hanging Pot Rack is designed for efficient storage of your kitchen cookware and utensils.

- **Using S-Hooks:** Hang pots, pans, and utensils directly onto the movable S-hooks. The hooks can be repositioned along the rack's bars to accommodate various item sizes and quantities.
- **Using the Mesh Shelf:** Place pot lids, smaller pots, or other kitchen essentials on the top mesh shelf for organized storage.
- **Weight Distribution:** Always distribute the weight of your cookware as evenly as possible across the rack to ensure stability and longevity.



High Capacity

More storage space



Soup Pot



Skillet



Frying Pan



spatula

Figure 4.1: The pot rack demonstrating its high capacity for storing various kitchen items.

5. MAINTENANCE

Regular maintenance will ensure your pot rack remains in optimal condition:

- **Cleaning:** Wipe the metal frame and mesh shelf with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.

- **Inspection:** Periodically check all screws, chains, and hooks for tightness and signs of wear. Tighten any loose connections immediately.
- **Rust Prevention:** While made of high-quality metal, avoid prolonged exposure to excessive moisture to prevent rust.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Rack feels unstable or wobbly.	Loose mounting screws or uneven weight distribution.	Tighten all mounting screws. Redistribute cookware weight evenly. Ensure ceiling anchors are appropriate for the load.
S-hooks slide too easily or fall off.	Normal movement or excessive force when removing items.	The S-hooks are designed to be movable. If excessive sliding is an issue, consider adding small rubber stoppers or a dab of non-permanent adhesive to secure them in place.
Rack appears to sag in the middle.	Overloading or improper chain adjustment.	Reduce the total weight on the rack. Adjust the chains to ensure even tension and support across all four points.

7. SPECIFICATIONS

Feature	Detail
Model Number	TPR03BB
Dimensions (L x W x H)	23.7" x 15.7" x 0.8"
Item Weight	3.59 pounds
Material	Metal
Color	Black
Mounting Type	Ceiling Mount
Included Components	Metal Chains, S-Hooks, Mounting Hardware

8. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the product packaging or contact CHOEZON customer service directly. Keep your purchase receipt for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question