

Silicone Protective Case B0D95JCZJN

Generic Red Silicone Protective Case for Skyworth, Haier, and Kodak TV Remotes

Model: B0D95JCZJN

INTRODUCTION

This manual provides instructions for the Generic Red Silicone Protective Case, designed to safeguard your compatible TV remote control from daily wear, accidental drops, and impacts. The case offers enhanced grip, precise button access, and a durable, washable material for long-lasting protection.

COMPATIBILITY

This silicone protective case is specifically designed to fit the following TV remote control models:

- **Skyworth:** 55Q20, TC9010, TC9012, RHA-T2, SXF9850, Frame+ TV, SUF958P, SUE9350F, E55G, Portable TV, SUE9320F, STE6600, SUE9550
- **Haier:** 55C11, 65C10, 65C11, 55S8GT, 65S8GT, 65S9QT, 55S9QT, 43S800QT, 55S800QT, 65S800QT, 75S800QT, 43P7GT, 50P7GT, 55P7GT, 65P7GT, 75P7GT
- **Kodak:** Matrix Series 4K Ultra HD Smart QLED Google TV 55Mt5022, CAPRO Series 4K Ultra HD LED Google TV 50CAPROGT5012

Please verify your remote control model number to ensure proper fitment.

FEATURES

- **Comprehensive Protection:** Shields your remote from drops, scratches, and daily wear.
- **Anti-Slip Design:** Textured surface provides a secure and comfortable grip, reducing accidental slips.
- **Precise Cutouts:** Ensures full access to all buttons, ports, and the IR sensor without obstruction.
- **Thickened Ends:** Reinforced design at both ends offers additional impact absorption for enhanced drop protection.
- **Luminous Option:** Certain variants of this case can glow in the dark after absorbing light, making the remote easier to locate in low-light conditions.
- **Durable Silicone Material:** Made from premium, soft, and washable silicone for comfort and longevity.

- **Lanyard Holes:** Integrated holes for attaching a lanyard (included) to prevent loss.

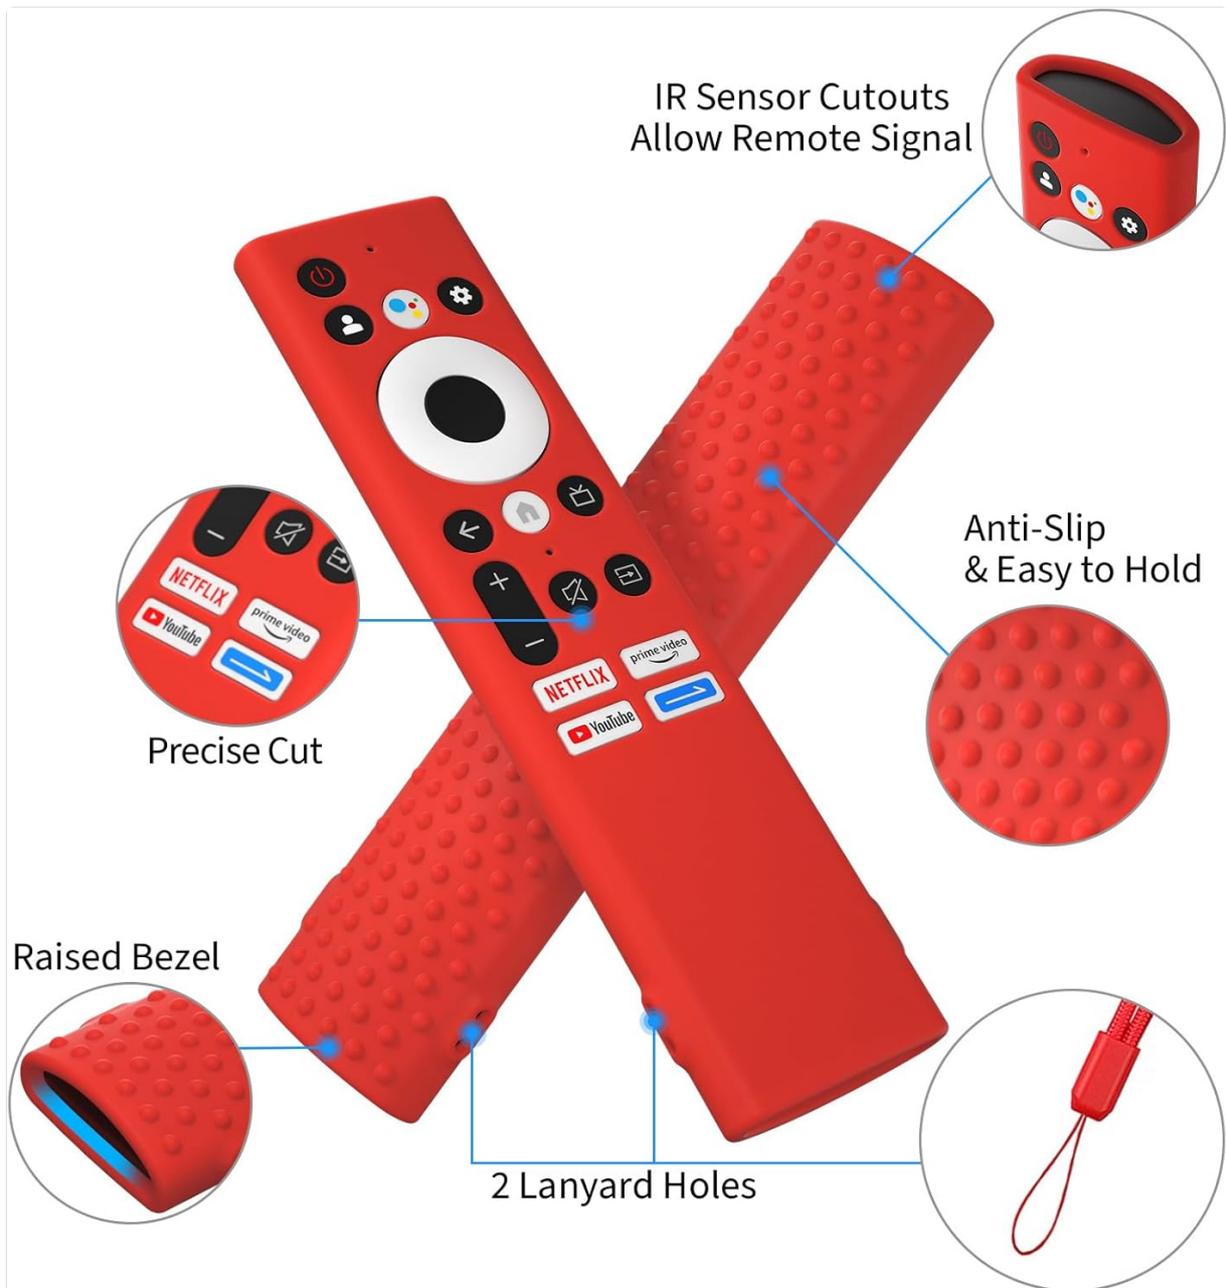


Image: Overview of the silicone case features, including precise cutouts for buttons and IR sensor, anti-slip texture, raised bezel, and lanyard holes.

SETUP

1. **Prepare Your Remote:** Ensure your TV remote control is clean and free of debris before installation.
2. **Insert Remote:** Gently slide the remote control into the silicone case, starting from the top (button end). Ensure all buttons align with the case's cutouts.
3. **Adjust for Fit:** Carefully adjust the case around the remote until it sits snugly and all openings (buttons, IR sensor) are correctly positioned.
4. **Attach Lanyard (Optional):** If desired, thread the included lanyard through the designated holes at the bottom of the case. Secure the lanyard to prevent accidental detachment.

Drop Protection

2 end thickening design
More comprehensive protection



Image: The case provides drop protection, with a visual representation of impact absorption.

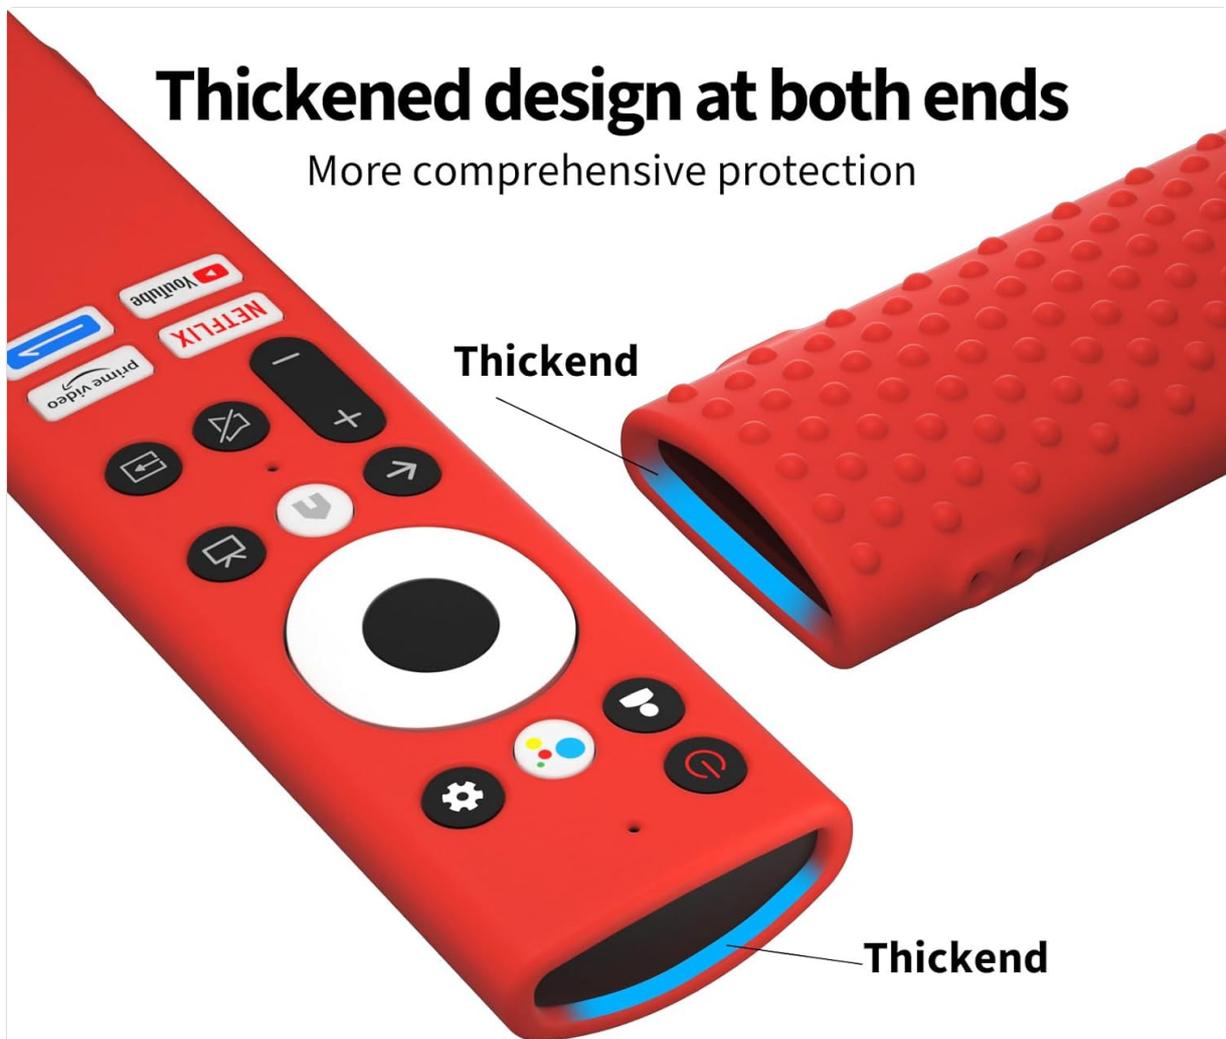


Image: Detail of the thickened design at the top and bottom ends of the case, providing comprehensive protection.

OPERATING

Once the silicone case is installed, your remote control will function as usual. The case is designed not to interfere with the remote's infrared (IR) signal transmission or button responsiveness.

- **IR Signal:** The case features specific cutouts to ensure the IR sensor on your remote remains unobstructed, allowing for seamless communication with your television.
- **Luminous Feature (if applicable):** If you have the luminous green variant, expose the case to light for a few minutes to activate its glow-in-the-dark property. This will make your remote easier to find in dark environments.
- **Enhanced Grip:** The textured surface of the case provides a more secure grip, reducing the likelihood of the remote slipping from your hand.

MAINTENANCE

To keep your silicone protective case clean and in optimal condition:

- **Cleaning:** The silicone material is washable. You can gently wipe the case with a damp cloth or rinse it under running water. Use mild soap if necessary.
- **Drying:** Allow the case to air dry completely before re-installing it onto your remote control.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners or harsh chemicals, as these may damage the silicone material or affect its luminous properties.

Environmental material



ANTI-FALL



SOFT&LIGHT



WASHABLE



Image: The case is made from environmental material, featuring anti-fall, soft, light, and washable properties.

Environmental Material



SWEAT PROOF



SKIN-FRIENDLY



ANTI-SLIP



Image: The case is made from environmental material, featuring sweat-proof, skin-friendly, and anti-slip properties.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Case does not fit remote.	Incorrect remote model or case orientation.	Verify your remote model against the compatibility list. Ensure the case is oriented correctly (top to bottom).
Buttons are difficult to press or misaligned.	Case is not fully seated or misaligned.	Remove the remote and re-insert the case, ensuring all cutouts align perfectly with the remote's buttons.
Remote's IR signal is blocked.	Case is obstructing the IR emitter.	Ensure the case's IR cutout is clear and not covered. Re-adjust the case if necessary.
Luminous feature is not glowing.	Insufficient light exposure.	Expose the case to a bright light source (e.g., sunlight, lamp) for several minutes to allow it to absorb light.

SPECIFICATIONS

- **Material:** Premium Silicone
- **Color:** Red (This specific product variant)
- **Form Factor:** Cover
- **Special Features:** Lightweight, Anti-slip, Washable, Drop Protection, Luminous (for specific variants)
- **Connectivity Technologies:** N/A (Case does not affect remote's Bluetooth/IR)
- **Compatible Devices:** Television Remote Controls (specific models listed in Compatibility section)

WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your Generic Silicone Protective Case, please refer to the seller's contact information on the platform where the product was purchased. Specific warranty details may vary by seller and region.

Manufacturer: Dwdzey

Date First Available: July 16, 2024