

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [KEMEI](#) /
- › [KEMEI Hair Clippers and Trimmers Set User Manual](#)

## KEMEI KM-2371+2372AMZ

# KEMEI Hair Clippers and Trimmers Set User Manual

Model: KM-2371+2372AMZ

## IMPORTANT SAFETY INFORMATION

---

Please read all instructions carefully before using this product. Keep this manual for future reference.

- **Caution:** Risk of injury from sharp blades. Avoid contact with eyes and ears during use.
- Keep out of reach of children.
- Do not immerse the unit in water.
- Use only the provided charging cables and accessories.
- Ensure the product is fully charged before first use.

## PRODUCT OVERVIEW AND COMPONENTS

---

The KEMEI KM-2371+2372AMZ grooming kit provides a comprehensive solution for hair cutting and trimming needs. This set includes a professional barber clipper and a detail hair trimmer, designed for precision and ease of use.



Image: The KEMEI Hair Clippers and Trimmers Set, showcasing both the larger clipper and the smaller trimmer, along with various accessories including guide combs, charging cables, oil, and a cleaning brush.

### Package Contents:

- 1 x Professional Barber Clipper (KM-2372)
- 1 x Detail Hair Trimmer (KM-2371)
- 4 x Guide Limit Combs for Clipper (3mm, 6mm, 10mm, 13mm)
- 3 x Guide Combs for Trimmer (1.5mm, 3mm, 4.5mm)
- 2 x USB Type-C Charging Cables
- 2 x Cleaning Brushes
- 1 x Long Comb
- 1 x Bottle of Lubricating Oil



Image: A detailed view of the clipper and trimmer, highlighting the different sizes of guide combs (3mm, 6mm, 10mm, 13mm for the clipper and 1.5mm, 3mm, 4.5mm for the trimmer) that come with the set.

## SETUP AND CHARGING

Before first use, it is recommended to fully charge both the hair clipper and the detail trimmer to ensure optimal performance and battery longevity.

### Charging Instructions:

1. Connect the provided USB Type-C charging cable to the charging port on the bottom of the clipper or trimmer.
2. Plug the other end of the USB cable into a compatible USB power adapter (not included), computer, or power bank.
3. The LED display on the device will indicate the charging status and battery percentage.
4. A full charge typically takes approximately 3 hours. Once fully charged, the display will show 100%.
5. The clipper provides up to 240 minutes of run time, and the trimmer provides up to 160 minutes on a full charge.

# CORDLESS RECHARGEABLE CONVENIENCE



**Fast-charging  
Technology**



**Long-lasting  
Battery**



Image: The KEMEI clipper and trimmer shown connected via USB-C cables, illustrating the cordless rechargeable convenience and charging process.

## OPERATING INSTRUCTIONS

This section provides guidance on how to effectively use your KEMEI hair clipper and trimmer for various grooming tasks.

### Attaching Guide Combs:

- Select the desired guide comb size based on the hair length you wish to achieve.
- Align the comb with the blade and push it firmly until it clicks into place.
- To remove, gently pull the comb away from the blade.

### Using the Hair Clipper:

1. Ensure the clipper is charged and the blades are clean and oiled.
2. Turn on the clipper using the side push switch.
3. For general hair cutting, use the appropriate guide comb. Move the clipper against the direction of hair growth for an even cut.
4. The powerful 7000 RPM motor ensures a snag-free trimming experience.

# PROVIDES SMOOTH CUTS WITHOUT SNAGGING

**7000 RPM Motor**

**Oil blade often to  
make it sharper**

**Precision steel blade  
for sharp cuts**



Image: An illustration highlighting the internal components of the KEMEI clipper, including the 7000 RPM motor for smooth cuts and the precision steel blade for sharp results. It also shows where to apply oil for maintenance.

## **Using the Detail Hair Trimmer:**

1. The T-blade trimmer is ideal for creating clean lines, precise edges, and detailing.
2. Use without a guide comb for zero-gapped trimming of beards, sideburns, mustaches, and necklines.
3. For shorter beard lengths, attach one of the smaller guide combs (1.5mm, 3mm, 4.5mm).
4. Hold the trimmer at a slight angle and gently guide it along the desired area.

# Barber's Choice



Image: A barber using the KEMEI trimmer to precisely shape a man's beard and hairline, demonstrating its use for detailing and clean edges.

## MAINTENANCE AND CARE

---

Proper maintenance ensures the longevity and optimal performance of your KEMEI grooming kit.

### Cleaning the Blades:

1. After each use, turn off the device and remove any attached guide combs.
2. Use the provided cleaning brush to remove loose hairs from the blades and the clipper/trimmer head.
3. For a more thorough cleaning, the blades can be rinsed under running water, but ensure the main body of the device does not get wet. Dry thoroughly before reattaching.

### Oiling the Blades:

1. Regular oiling is crucial for maintaining blade sharpness and smooth operation.
2. Apply a few drops of the included lubricating oil to the teeth of the blades after every few uses or when the LED display indicates it's time to add oil.

3. Turn on the device for a few seconds to allow the oil to distribute evenly.
4. Wipe off any excess oil with a soft cloth.

### Storage:

- Store the clippers and all accessories in a dry, cool place.
- The ergonomic design includes an easy storage hook at the bottom for convenient hanging.



Image: The KEMEI clipper and trimmer are shown hanging on a wall hook, demonstrating the easy storage feature and ergonomic design for minimizing hand fatigue.

### TROUBLESHOOTING

If you encounter any issues with your KEMEI grooming kit, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Device not turning on.	Low battery or not charged.	Charge the device fully (approx. 3 hours). Check the LED display for battery level.
Blades pulling hair or cutting poorly.	Blades are dull, dirty, or not oiled.	Clean the blades thoroughly and apply lubricating oil. If issues persist, consider professional sharpening or replacement.
Excessive noise or vibration.	Blades need oiling or are misaligned.	Apply lubricating oil to the blades. Ensure blades are properly aligned.
Device not charging.	Faulty charging cable or power source.	Try a different USB Type-C cable or power adapter. Ensure the charging port is clean.

## PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	KM-2371+2372AMZ
Brand	KEMEI
Motor Speed	7000 RPM
Clipper Battery	2000 mAh Li-Ion
Trimmer Battery	1200 mAh Li-Ion
Charging Time	Approx. 3 Hours
Clipper Run Time	Up to 240 minutes
Trimmer Run Time	Up to 160 minutes
Charging Type	USB Type-C
Blade Material	Precision Steel
Country of Origin	China

## WARRANTY AND SUPPORT

KEMEI products are manufactured with high-quality standards. For any warranty claims or technical support, please refer to your purchase documentation or contact the retailer where the product was purchased.

For further assistance, you may visit the official KEMEI store on Amazon: [KEMEI Official Store](#).