

[Manuals.plus](#) /

› [ViRockSign](#) /

› ViRockSign Gesture Sensing RC Stunt Car Model 2333 Instruction Manual

ViRockSign 2333

ViRockSign Gesture Sensing RC Stunt Car Model 2333 Instruction Manual

1. OVERVIEW

This manual provides essential information for the safe and effective operation and maintenance of your ViRockSign Gesture Sensing RC Stunt Car, Model 2333. Please read this manual thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

Warning:

- Children under 3 years old must be used under adult supervision.
- Do not operate the car near water or in wet conditions to prevent electrical damage.
- Avoid operating the car in crowded areas or near obstacles that could cause injury or damage.
- Ensure all batteries are correctly installed and charged according to instructions.

3. WHAT'S IN THE BOX

Your package should contain the following items:

- RC Stunt Car
- Remote Control
- Gesture Sensing Watch Remote Control
- Rechargeable Lithium Ion Batteries (2 included)
- USB Charging Cable

- Water Syringe (for spray function)
- Product Manual (this document)

4. PRODUCT FEATURES

The ViRockSign Gesture Sensing RC Stunt Car offers a dynamic and engaging play experience with its advanced features:

- **4WD All-Round Drift and Stunt Capabilities:** Enjoy straight and backward driving, sideways walking, 360° rotation, and dual-sided driving.
- **Innovative 45° Lateral Drift:** A unique feature for enhanced maneuverability.
- **Custom Demonstration Mode:** Program your own stunt sequences.
- **Cool LED Lights & Dynamic Music:** Enhances the visual and auditory experience.
- **Spray Effects:** Adds an exciting visual element to stunts.
- **Dual Control Modes:** Operate with either the traditional remote control or the intuitive gesture sensing watch.
- **All-Terrain Performance:** Designed to handle various surfaces including sand, indoor floors, grass, and gravel.
- **Long Playtime:** Two rechargeable batteries provide up to 60 minutes of continuous play.




Forward and Backward



360° Rotation



Lateral Movement

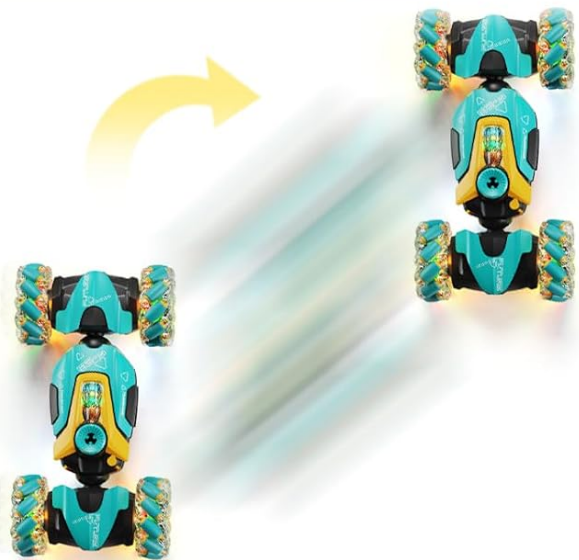

45° Sideways Movement

Figure 1: Demonstrating the car's versatile movement capabilities.

Trick Tires
Cool & wear-resistant



Spray special effects
Full of atmosphere



4WD High Tech
Adapt to any road surface



5. SETUP

5.1 Battery Installation and Charging

1. **Car Battery:** Insert the rechargeable Lithium Ion battery into the car's battery compartment. Ensure it is securely connected.
2. **Charging:** Connect the car's battery to the USB charging cable. Plug the USB end into a compatible USB power source (e.g., computer, wall adapter). The indicator light on the charging cable will show charging status.
3. **Remote Control Batteries:** The traditional remote control requires AAA batteries (not included). Open the battery compartment on the back of the remote and insert the batteries, observing polarity.
4. **Gesture Sensing Watch:** The gesture sensing watch has a built-in rechargeable battery. Use its dedicated charging cable to charge it via a USB power source.

Easily Conquer All Complex Roads



Figure 3: The car is designed to operate on diverse surfaces.

5.2 Water for Spray Function

To activate the spray function:

1. Locate the water inlet on the top of the car.
2. Use the provided water syringe to carefully fill the water tank with clean water. Do not overfill.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off and Pairing

1. **Car:** Turn on the power switch on the car.
2. **Remote Control:** Turn on the power switch on your chosen remote (traditional or gesture watch).
3. The car and remote should automatically pair. If not, refer to the troubleshooting section.

6.2 Traditional Remote Control Functions



Figure 4: Layout of the remote controls and their functions.

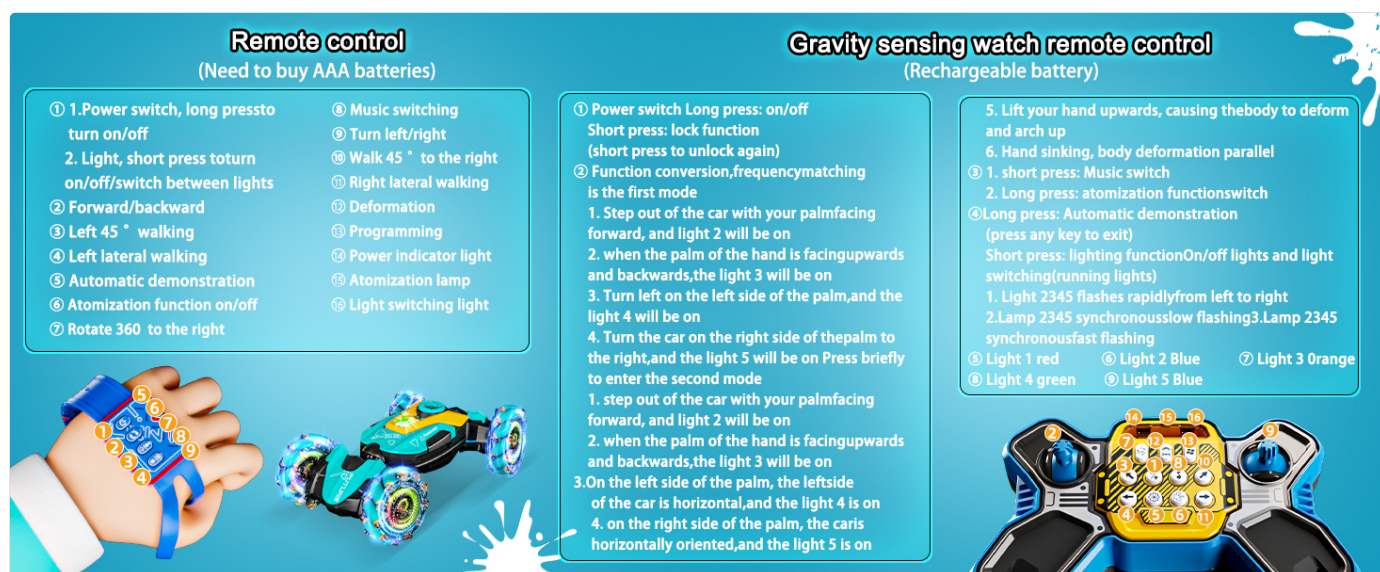


Figure 5: Detailed operational guide for both remote types.

Refer to Figure 4 and Figure 5 for button layout and specific functions:

- **Power Switch:** Long press to turn on/off.
- **Light Switch:** Short press to cycle through light modes (Light 1 red, Light 2 blue, Light 3 orange, Light 4 green, Light 5 blue).
- **Forward/Backward:** Use the joystick to move the car.
- **Left 45° Walking / Right 45° Walking:** Specific buttons for diagonal movement.
- **Left Lateral Walking / Right Lateral Walking:** Buttons for direct sideways movement.
- **Deformation:** Transforms the car's chassis.
- **Programming:** Enter custom operation mode. Press again to show custom stunt performance.
- **Music Switching:** Cycles through available music tracks.
- **Atomization Lamp:** Activates the spray function.

- **Rotate 360°:** Initiates a 360-degree spin.
- **Automatic Demonstration:** Activates a pre-programmed stunt show.

6.3 Gesture Sensing Watch Remote Control Functions

Refer to Figure 4 and Figure 5 for detailed instructions:

- **Power Switch:** Long press for on/off. Short press for lock function (press again to unlock).
- **Function Conversion/Frequency Matching:** This is the first mode.
- **Movement:**
 - Step out of the car with your palm facing forward: Light 2 will be on.
 - When the palm of the hand is facing upwards and backwards: Light 3 will be on.
 - Turn left on the left side of the palm: The left side of the car is horizontal, and Light 4 will be on.
 - Turn right on the right side of the palm: The car is horizontally oriented, and Light 5 will be on.
- **Lift Hand Upwards:** Causes the car body to deform and arch up.
- **Hand Sinking:** Initiates body deformation parallel.
- **Short Press Music Switch:** Changes music.
- **Long Press Atomization Function Switch:** Activates/deactivates spray.
- **Long Press Automatic Demonstration:** Initiates automatic stunt show.
- **Light Effects:** Lights 2345 flash rapidly from left to right. Lamp 2345 synchronously flash. Lamp 2345 synchronous fast flashing.

Video 1: Official product video demonstrating the ViRockSign Remote Control Car's features and movements.

7. MAINTENANCE

- **Cleaning:** Wipe the car with a dry, soft cloth after each use. Do not use water or chemical cleaners.
- **Storage:** Store the car and accessories in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove batteries from the car and remote controls if not used for extended periods.

8. TROUBLESHOOTING

- **Car Not Responding:**
 - Ensure both the car and remote control are powered on.
 - Check battery levels in both the car and remote controls. Recharge or replace as necessary.
 - Ensure the car and remote are within operating range.
 - Re-pair the remote control with the car by turning both off and then on again.
- **Spray Function Not Working:**
 - Check if the water tank is filled with water.
 - Ensure the atomization button/function is activated on the remote.

- **Car Not Moving Straight:**

- Check for any debris or obstructions in the wheels.
- Ensure the car is on a flat, even surface.

9. SPECIFICATIONS

Product Dimensions	11.8 x 6.1 x 3.7 inches
Item Weight	1.81 pounds
Model Number	2333
Manufacturer	ViRockSign
Recommended Age	36 months - 18 years
Batteries	1 Lithium Ion battery required (included)

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official ViRockSign website. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name**Email**

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question