

HOMCOM 83A-142V80WT

HOMCOM 68" Kitchen Pantry Storage Cabinet User Manual

Model: [83A-142V80WT](#) | Brand: [HOMCOM](#)

1. INTRODUCTION

1.1 Product Overview

The HOMCOM 68" Kitchen Pantry Storage Cabinet is a versatile and stylish solution designed to enhance your kitchen or living space. This freestanding hutch features a built-in charging station with 2 AC outlets and 2 USB ports, ideal for powering small appliances. It offers extensive storage with an enclosed cabinet, two open shelves, two large drawers, a spacious countertop, and two tilt-out cabinets suitable for 10-gallon trash cans or laundry baskets. Adjustable shelves provide flexible storage options, and its classic design with beadboard door panels integrates seamlessly with various home decors.



Figure 1.1: Front view of the HOMCOM Kitchen Pantry Storage Cabinet.

1.2 Safety Information

Important Safety Precautions:

- Always ensure the cabinet is fully assembled and stable before use.
- Keep the cabinet away from heat sources and liquids to prevent damage.
- Do not overload the shelves or drawers beyond their stated weight capacity.
- Always use the provided assembly instructions and safety gear when assembling the cabinet.
- Utilize the anti-tipping design feature to secure the cabinet to a wall, especially in homes with children or pets.



Figure 1.2: Illustration of the anti-tipping design for enhanced safety.

2. COMPONENTS LIST

Before beginning assembly, verify that all parts and hardware are present and accounted for. Refer to the detailed parts list included in your product packaging for specific component identification.

2.1 Included Components (General)

- Cabinet Panels (Top, Bottom, Side, Back)
- Doors (Glass and Beadboard)
- Shelves (Adjustable and Fixed)
- Drawers and Sliding Rails
- Handles and Knobs
- Charging Station Unit (2 AC outlets, 2 USB ports)
- Tilt-out Mechanisms for Trash Cans
- Assembly Hardware (Screws, dowels, cam locks, etc.)

- Anti-Tipping Hardware

3. SETUP AND ASSEMBLY

Assembly is required for this product. It is recommended to have at least two people for assembly to ensure safety and ease of construction. Follow the step-by-step instructions provided in the separate assembly manual included with your purchase.

3.1 Pre-Assembly Checklist

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Identify all parts using the provided component list.
3. Ensure you have the necessary tools (e.g., screwdriver, hammer, level).

3.2 Key Assembly Considerations

- **Dimensions:** Be aware of the cabinet's overall dimensions (39.4" W x 13.8" D x 67.7" H) to ensure it fits your intended space.
- **Adjustable Hinges:** The doors feature adjustable hinges, allowing you to fine-tune their alignment for a flush appearance. Refer to the assembly manual for detailed adjustment steps.
- **Anti-Tipping Device:** Securely attach the anti-tipping device to a wall stud to prevent accidental tipping, especially in households with children or pets.



CHARGING STATION

Featuring 2 AC outlets and 2 USB ports to power kitchen appliances

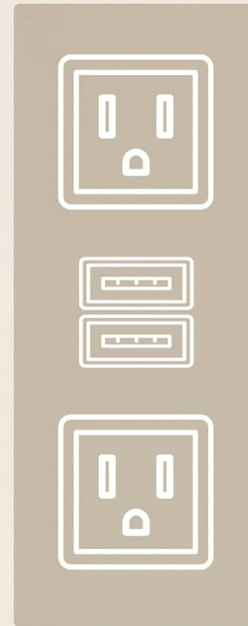


Figure 3.1: Product dimensions for planning placement.

ANTI-TIPPING DESIGN

Friendly and safe for family with children and pets



Figure 3.2: Guide for adjusting door hinges to ensure proper alignment.

4. OPERATING INSTRUCTIONS

4.1 Utilizing the Charging Station

The integrated charging station is located on the back panel of the open shelf area. It features two standard AC outlets and two USB ports. To use, simply plug the cabinet's power cord into a wall outlet. You can then plug in small kitchen appliances like coffee makers, toasters, or blenders, or charge your mobile devices directly from the USB ports.



Figure 4.1: Detail of the convenient built-in charging station.

4.2 Using Tilt-Out Cabinets

The two lower cabinets are designed with a tilt-out mechanism, perfect for concealing 10-gallon trash cans or laundry baskets. Simply pull the top of the cabinet door outwards to access the interior. Ensure the bins are properly sized to fit within the designated space for smooth operation.

ADJUSTABLE SHELVES



1.3" (3.2 cm)



Figure 4.2: The tilt-out design provides discreet storage for waste or laundry.

4.3 Adjusting Shelves

The shelves within the enclosed upper cabinet are adjustable, allowing you to customize storage space to fit items of various heights. Locate the shelf pins on the interior sides of the cabinet. Remove the shelf, reposition the pins to the desired height, and then place the shelf back on the pins, ensuring it is level and secure.

ADJUSTABLE HINGE

Adjust the hinges so that your door gaps can be flush

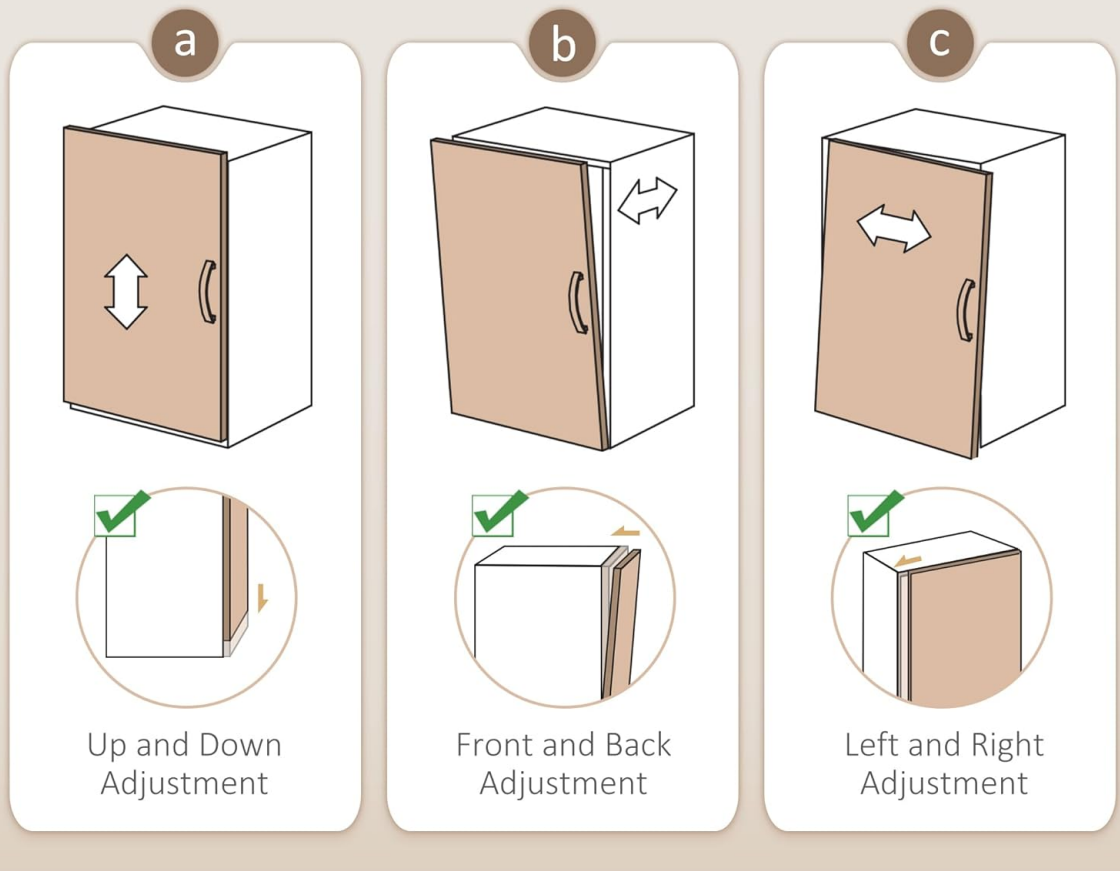


Figure 4.3: Adjustable shelves offer flexible storage configurations.

4.4 Product Overview Video

Your browser does not support the video tag.

Video 4.1: An official overview of the HOMCOM 83A-142V80WT Kitchen Pantry Cabinet, showcasing its features and functionality.

5. MAINTENANCE

5.1 Care and Cleaning

To maintain the appearance and longevity of your HOMCOM Kitchen Pantry Storage Cabinet, follow these simple care instructions:

- Wipe surfaces regularly with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, as they may damage the painted finish.
- For spills, wipe immediately with a dry cloth to prevent staining. The cabinet is designed to be

stain and scratch resistant, but prompt cleaning is always recommended.

- Periodically check all screws and hardware to ensure they remain tight. Retighten as necessary to maintain structural integrity.
- Keep the cabinet away from direct sunlight and extreme temperature changes to prevent warping or discoloration.

6. TROUBLESHOOTING

If you encounter any issues with your HOMCOM Kitchen Pantry Storage Cabinet, please refer to the common problems and solutions below. For persistent issues, contact customer support.

Problem	Possible Cause	Solution
Cabinet feels unstable or wobbly.	Loose assembly hardware; uneven floor; anti-tipping device not installed.	Ensure all screws are tightened. Place shims under the cabinet feet if the floor is uneven. Install the anti-tipping device securely to a wall stud.
Doors are not aligned or do not close properly.	Hinges need adjustment; cabinet not level.	Adjust the door hinges using the adjustment screws (refer to assembly manual). Ensure the cabinet is level.
Drawers stick or do not slide smoothly.	Drawer slides are misaligned or damaged; debris in tracks.	Check that the metal sliding rails are correctly installed and aligned. Clear any debris from the tracks. If damaged, contact customer support for replacement parts.
Tilt-out bins do not operate smoothly or seem flimsy.	Incorrect assembly of tilt-out mechanism; bins are too large or heavy.	Review the assembly steps for the tilt-out mechanism. Ensure you are using 10-gallon trash cans or appropriately sized laundry baskets. Avoid overloading the bins.

7. SPECIFICATIONS

Feature	Detail
Brand	HOMCOM
Model Number	83A-142V80WT
Color	White
Product Dimensions	13.8"D x 39.4"W x 67.7"H

Feature	Detail
Item Weight	103.6 pounds
Weight Limit	253 Pounds
Material	Engineered Wood (Frame, Top, Back)
Finish Type	Painted
Number of Shelves	4
Number of Compartments	7
Mounting Type	Floor Mount (Freestanding)
Special Features	Anti-Tipping, Built-In Charging Station, Stain Resistant, Scratch Resistant, Adjustable Shelf
Assembly Required	Yes

8. WARRANTY AND CUSTOMER SUPPORT

8.1 Returns and Protection Plans

This product is eligible for 30-day easy returns. For extended coverage, protection plans are available for purchase. Please refer to your purchase documentation or the retailer's website for details on specific protection plan terms and conditions.

8.2 Customer Support

For any questions, concerns, or assistance with assembly, parts, or product functionality, please contact HOMCOM customer support. Contact information can typically be found on the HOMCOM official website or through your original point of purchase.

When contacting support, please have your model number (83A-142V80WT) and purchase details readily available to expedite assistance.