

## Geuxe RL67H-8

# Geuxe RL67H-8 TV Remote Control Instruction Manual

For Changhong TV Models

## INTRODUCTION

This manual provides instructions for the Geuxe RL67H-8 TV Remote Control. This remote is designed for use with various Changhong TV models, offering a straightforward and efficient way to control your television. No programming is required for its use; simply insert batteries and begin operation.

### Compatible Changhong TV Models include:

- TV20A-C35, LC32HA3, LED50C2000H, LED50C2000IS, LED29B1000S
- LED32C2000H, LED28C2000DS, LED28C2000S, LED50C2000H, LED50C2000IS, LED29B1000S
- LED32C1600H, LED40C1600, LED40C1600DS, LED22T868, LED32C2200DS, LED28C2000H
- LED39B3100H, 32C2200DS, 29A6500, LED19T868H, RL67H, LED39D2200H, LED32C2200H





Figure 1: Front view of the Geuxe RL67H-8 TV Remote Control, showing all buttons and layout.

## SETUP

---

The Geuxe RL67H-8 remote control is designed for immediate use without complex setup procedures. The primary setup involves installing batteries.

### Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Once batteries are installed, the remote control is ready for operation with your compatible Changhong TV.





Figure 2: Back view of the remote control, highlighting the battery compartment for installation.

## OPERATING INSTRUCTIONS

---

The RL67H-8 remote control provides full functionality for your Changhong TV. Its ergonomic design and responsive buttons ensure comfortable and efficient operation.

### Key Functions:

- **POWER:** Turns the TV on or off.
- **SOURCE:** Selects input sources (e.g., HDMI, AV, TV).
- **Number Buttons (0-9):** Directly select channels.
- **VOL (+/-):** Adjusts the volume level.
- **CH (Up/Down):** Changes channels sequentially.
- **MUTE:** Mutes or unmutes the TV audio.
- **MENU:** Accesses the TV's main menu.
- **Navigation Buttons (Up/Down/Left/Right) & ENTER:** Navigates through menus and confirms selections.
- **EXIT:** Exits the current menu or function.
- **INFO:** Displays information about the current program or input.
- **LIST:** Accesses the channel list.
- **INDEX:** Provides index functions (if supported by TV).
- **AUDIO (I/II):** Selects audio tracks or modes.
- **DVB:** Switches to Digital Video Broadcasting mode.
- **SLEEP:** Sets a sleep timer for the TV.
- **EPG:** Accesses the Electronic Program Guide.
- **SUBTITLE:** Toggles subtitles on or off.
- **USB:** Switches to USB input mode.

Ensure a clear line of sight between the remote control's infrared emitter and the TV's IR receiver for optimal performance. The remote operates effectively over a long distance due to its low power consumption design.

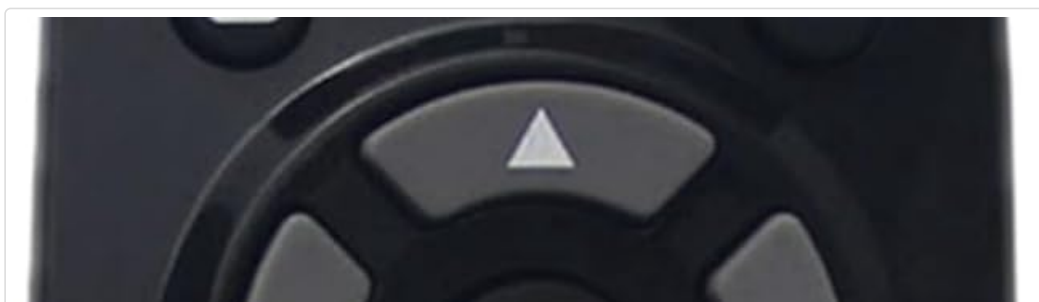




Figure 3: Detailed view of the central control buttons, including navigation, volume, and channel controls.

## MAINTENANCE

Proper care and maintenance will extend the life of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's range decreases or it becomes unresponsive. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can cause damage. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Impact:** Do not drop the remote control or subject it to strong impacts, as this can damage internal circuitry.

## TROUBLESHOOTING

If you encounter issues with your Geuxe RL67H-8 remote control, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote control is not working.	Dead or incorrectly inserted batteries. Obstruction between remote and TV. TV is off.	Replace batteries, ensuring correct polarity. Remove any objects blocking the signal path. Ensure TV is powered on.
Remote control has limited range.	Weak batteries. Interference from other devices.	Replace batteries. Ensure no strong light sources or electronic devices are interfering with the IR signal.
Specific buttons are unresponsive.	Dirt or debris under the button. Internal malfunction.	Clean the remote surface. If the issue persists, the remote may require replacement.

## SPECIFICATIONS

Below are the technical specifications for the Geuxe RL67H-8 TV Remote Control:

- **Model:** RL67H-8
- **Brand:** Geuxe
- **Color:** Black
- **Material:** ABS, Plastic
- **Function:** Infrared Control
- **Product Dimensions:** 7.87 x 2.36 x 2.36 inches (20 x 6 x 6 cm)
- **Item Weight:** 6.1 ounces (173 grams)
- **Maximum Range:** 10 Meters (approximately 33 feet)

- **Max Number of Supported Devices:** 1 (Changhong TV)
- **Power Source:** 2 x AAA Batteries (not included)

# PRODUCT DESCRIPTION

**MATERIAL** Plastic

**FUNCTION** Infrared Control

**BUTTON MATERIAL** ABS,Plastic



Figure 4: Product description image showing material (Plastic/ABS) and function (Infrared Control).

## WARRANTY AND SUPPORT

Specific warranty information for the Geuxe RL67H-8 TV Remote Control is not provided in this manual. Please refer to the product packaging or contact your retailer or the manufacturer, Geuxe, directly for details regarding warranty coverage and support services.

For technical assistance or further inquiries, please reach out to the seller or manufacturer through their official contact channels.

