

Anyski M5

Anyski M5 Dash Cam & USB C Bundle User Manual

Model: M5

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Anyski M5 Dash Cam and USB C Bundle. This bundle is designed for users who may not have an available cigarette lighter port in their vehicle, offering a convenient USB-C power solution. Please read this manual thoroughly before use to ensure proper functionality and safety.

SAFETY INFORMATION

- Do not obstruct the driver's view or interfere with the operation of vehicle controls.
- Ensure the dash cam is securely mounted to prevent detachment during driving, which could cause injury or damage.
- Use only the power accessories provided or approved by Anyski to avoid damage to the device or vehicle.
- Avoid exposing the device to extreme temperatures, direct sunlight for prolonged periods, or excessive moisture.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.

PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- Anyski M5 Dash Cam (Main Unit)
- Rear Camera
- USB C Power Cable
- Hardwire Kit
- 64GB Memory Card
- User Manual



Image 1: The Anyski M5 Dash Cam bundle, showcasing the main dash cam unit, a separate rear camera, a 64GB memory card, and the USB-C power cable. This image provides a comprehensive view of the primary components included in the package.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Anyski M5 Dash Cam:



Image 2: This image displays the Anyski M5 Dash Cam alongside a smartphone screen showing the companion application interface. It highlights the dash cam's front and interior lenses, its display screen, and the wireless connectivity feature for remote viewing and settings adjustment via a mobile device.

Main Dash Cam Unit:

- **Front Lens:** Records the road ahead in 1440p resolution.
- **Interior Lens:** Records the vehicle's cabin.
- **Display Screen:** Shows live view, playback, and menu options.
- **Control Buttons:** For navigation and selection within the menu.
- **USB-C Port:** For power connection.
- **Memory Card Slot:** For inserting the 64GB memory card.
- **Mounting Slot:** For attaching the windshield mount.

USB C Power Cable:



Image 3: A close-up view of the USB-A to USB-C power cable. This cable is essential for powering the M5 Dash Cam, especially for vehicles without a traditional cigarette lighter port, allowing connection to a standard USB power source.

The included USB C power cable allows you to power the dash cam via a standard USB port, providing flexibility for vehicles without a cigarette lighter port or when that port is occupied.

SETUP

1. Inserting the Memory Card

1. Ensure the dash cam is powered off.
2. Locate the memory card slot on the side of the dash cam.
3. Insert the 64GB memory card with the gold contacts facing the back of the camera until it clicks into place.
4. To remove, gently push the card in until it springs out.

2. Mounting the Dash Cam

1. Clean the windshield area where you intend to mount the dash cam.
2. Attach the suction cup mount or adhesive mount (if included) to the dash cam's mounting slot.
3. Press the mount firmly onto the windshield, ensuring it does not obstruct your view.
4. Adjust the angle of the dash cam to ensure the front lens captures the road clearly and the interior lens captures the cabin.

3. Connecting Power

You have two options for powering your M5 Dash Cam:

Option A: USB C Power Cable (Recommended for USB-equipped vehicles)

1. Connect the USB-C end of the cable to the dash cam's USB-C port.
2. Connect the USB-A end of the cable to an available USB power port in your vehicle.
3. Route the cable neatly along the windshield trim to avoid interference.

Option B: Hardwire Kit (For continuous power and parking monitoring)

1. Refer to the separate instructions provided with the Hardwire Kit for detailed installation steps. Professional installation is recommended for hardwiring.
2. Ensure the hardwire kit is connected to a constant power source and an accessory power source (ACC) for proper parking mode functionality.

4. Installing the Rear Camera (if applicable)

1. Mount the rear camera on the rear windshield, ensuring a clear view.
2. Connect the rear camera cable to the designated port on the main dash cam unit.
3. Route the cable neatly along the vehicle's interior trim.

OPERATING INSTRUCTIONS

1. Powering On/Off

- **Automatic Power:** The dash cam will automatically power on and begin recording when connected to power and the vehicle's ignition is turned on.
- **Manual Power On/Off:** Press and hold the Power button for 3 seconds to manually turn the device on or off.

2. Recording Modes

- **Loop Recording:** The dash cam continuously records video in short segments (e.g., 1, 3, or 5 minutes). When the memory card is full, the oldest unlocked files are overwritten.
- **Emergency Recording (G-Sensor):** In the event of a sudden impact or collision, the built-in G-sensor will automatically lock the current video segment, preventing it from being overwritten by loop recording.
- **Parking Monitoring:** If the hardwire kit is installed, the dash cam can monitor your vehicle while parked. It will automatically record if motion or impact is detected.

3. Menu Settings

Access the menu by pressing the Menu button (if available) or navigating through the display. Common settings include:

- **Video Resolution:** Adjust recording quality (e.g., 1440p).
- **Loop Recording Duration:** Set segment length.
- **G-Sensor Sensitivity:** Adjust sensitivity for emergency recording.

- **Date/Time Stamp:** Ensure accurate time and date are displayed on recordings.
- **Wi-Fi:** Enable/disable Wi-Fi for connecting to the mobile app.
- **Night Vision:** Configure settings for enhanced low-light recording.

4. Wi-Fi Connectivity and Mobile App

The M5 Dash Cam features Wi-Fi connectivity, allowing you to connect to a dedicated mobile application for live view, video playback, downloading files, and adjusting settings.

1. Download the Anyski mobile app from your smartphone's app store.
2. Enable Wi-Fi on the dash cam via the menu settings.
3. Connect your smartphone to the dash cam's Wi-Fi network (SSID and password usually displayed on the dash cam screen).
4. Open the app to access features.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the dash cam lenses and screen. Do not use abrasive cleaners or solvents.
- **Memory Card Formatting:** It is recommended to format the memory card regularly (e.g., once a month) within the dash cam's settings to maintain optimal performance and prevent data corruption. Back up any important files before formatting.
- **Storage:** When not in use for extended periods, store the dash cam in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

Problem	Possible Solution
Dash cam not powering on.	Ensure the power cable is securely connected to both the dash cam and the power source. Verify the vehicle's USB port or hardwire connection is providing power. Try a different USB power source or cable if available.
Recording stops or freezes.	Format the memory card within the dash cam's settings. Ensure the memory card is a high-speed (Class 10 or U3) card. Check if the memory card is full; enable loop recording.
Poor video quality.	Clean the dash cam lenses. Ensure the protective film has been removed from the lenses. Adjust video resolution settings to the highest available (1440p).
Wi-Fi connection issues.	Ensure Wi-Fi is enabled on the dash cam. Restart both the dash cam and your smartphone. Verify you are connecting to the correct Wi-Fi network (SSID) and using the correct password.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	Anyski
Model Name	M5
Connectivity Technology	Wi-Fi
Special Feature	Night Vision
Video Capture Resolution	1440p
Included Components	Hardwire Kit
Mounting Type	Windshield Mount / Dashboard Mount
Color	Black

WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your Anyski M5 Dash Cam, please contact Anyski customer service. You can typically find contact details on the official Anyski website or through the retailer where you purchased the product. Please have your model number (M5) and purchase details ready when contacting support.

Note: Keep your purchase receipt as proof of purchase for warranty claims.