

Vexilar V9

Vexilar V9 Cordless Vacuum Cleaner

Instruction Manual

Model: V9 | Brand: Vexilar

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance. Keep this instruction manual for future reference.

- This appliance is for household use only. Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up water or any other liquids.

PRODUCT OVERVIEW

The Vexilar V9 Cordless Vacuum Cleaner is designed for versatile and efficient cleaning across various surfaces in your home. Its lightweight design and powerful suction make daily cleaning tasks easier.

Key Features:

- **Powerful Brushless Motor:** Delivers 30Kpa strong suction in maximum mode for effective cleaning.
- **Long Runtime:** Detachable 2200mAh Lithium-ion battery provides 15-50 minutes of cordless operation.
- **6-in-1 Versatility:** Easily converts from a stick vacuum to a handheld unit with various attachments for different cleaning needs.
- **Advanced 5-Stage Filtration:** High-efficiency cyclone metal filtration system with washable HEPA filter captures 99.97% of microscopic dust.
- **User-Friendly Design:** Lightweight (3.2lb main machine), 180° swivel head, LED headlights, and multiple charging options.

Components:

- Main Vacuum Body
- Extension Tube
- Motorized Floor Brush with LED Headlights
- Crevice Tool
- 2-in-1 Brush Attachment
- Detachable Battery
- Charging Adapter
- Wall Mount Bracket
- Spare HEPA Filters
- Cleaning Tool (for brush roll and filters)

SETUP AND ASSEMBLY

Follow these steps to assemble your Vexilar V9 Cordless Vacuum Cleaner:

1. **Attach the Extension Tube:** Insert the top end of the extension tube into the main vacuum body until it clicks securely into place.
2. **Attach the Floor Brush:** Connect the motorized floor brush to the bottom end of the extension tube, ensuring it clicks firmly.
3. **Install the Battery:** Slide the detachable battery into the slot on the main vacuum body until it locks.
4. **Optional Wall Mount:** If desired, install the wall mount bracket in a convenient location using screws (not included) and hang the vacuum for storage and charging.

For a visual guide on assembly and initial setup, please refer to the video below:

Your browser does not support the video tag.

Video Description: This video provides a detailed overview of the Vexilar V9 Cordless Vacuum Cleaner, including unboxing, assembly of its various components, and demonstration of its features and usage. It shows how to connect the

extension tube, floor brush, and other attachments, as well as how to operate the vacuum in different modes.

CHARGING THE BATTERY

Ensure your Vexilar V9 is fully charged before first use for optimal performance. The battery takes approximately 4-5 hours to fully charge.

1. **Charging Methods:** The detachable battery offers flexible charging options:
 - Directly charge the main vacuum body by plugging the adapter into the charging port.
 - Remove the battery from the main body and charge it separately.
 - Charge the vacuum while it is mounted on the wall bracket (if installed).
2. **Battery Indicator:** The LED display on the main body will show the battery level. All lights illuminated indicate a full charge.

Convenient Charging Ways



Image Description: This image illustrates the three convenient charging methods for the Vexilar V9 Cordless Vacuum Cleaner. The vacuum can be charged as a complete unit, with the main body detached, or by removing only the battery for charging.

OPERATING INSTRUCTIONS

Power On/Off and Suction Modes:

1. **Power On:** Press the trigger button once to turn on the vacuum in minimum suction mode.
2. **Change Suction Mode:** Press the trigger button again to switch to maximum suction mode. The LED display will indicate the current mode.

3. **Power Off:** Press the trigger button a third time to turn off the vacuum.

Using Attachments:

The Vexilar V9 comes with multiple attachments for versatile cleaning:

- **Motorized Floor Brush:** Ideal for hard floors and thin carpets. The LED headlights illuminate dust in dark areas.
- **Extension Tube:** Adjust the length by pressing the button and sliding to suit your height or to reach high areas.
- **Crevice Tool:** Perfect for narrow gaps, corners, and edges, such as between sofa cushions or along baseboards.
- **2-in-1 Brush Attachment:** Use the brush for delicate surfaces like curtains or upholstery, and slide the brush back to use the nozzle for tougher dirt on car interiors or keyboards.

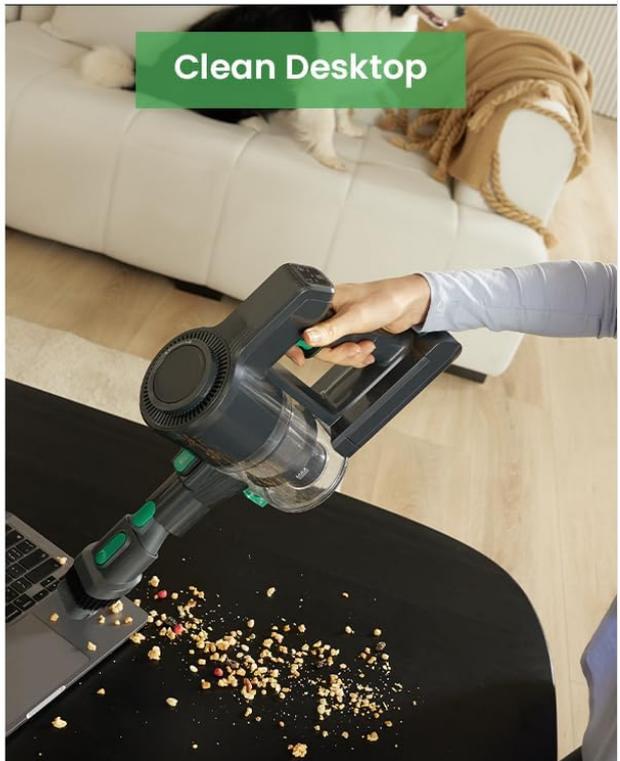
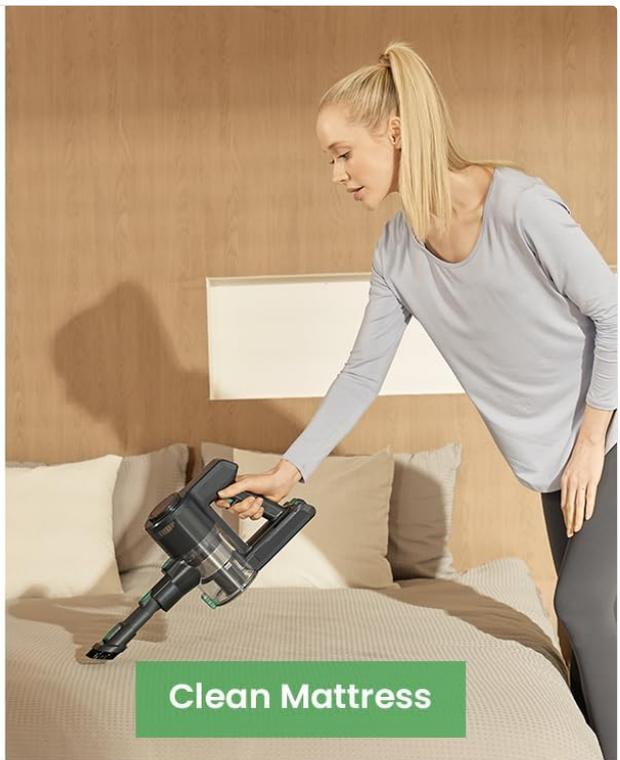


Image Description: This image showcases the Vexilar V9's 6-in-1 versatility, illustrating its use for cleaning various areas such as tight crevices, mattresses, high curtains, and desktops, highlighting its adaptability with different attachments.

Your browser does not support the video tag.

Video Description: This video demonstrates the Vexilar V9 Cordless Vacuum Cleaner in action, highlighting its ease of use and effectiveness for general home cleaning on various surfaces. It shows the vacuum being used to pick up debris, showcasing its powerful suction and maneuverability.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your Vexilar V9 vacuum

cleaner.

Emptying the Dust Cup:

1. Ensure the vacuum is turned off.
2. Locate the dust cup release button (usually near the bottom of the main body).
3. Press the button to open the dust cup flap and empty contents into a trash bin.
4. Close the flap securely until it clicks.



Image Description: This image demonstrates the 'One Click To Empty' feature of the Vexilar V9. A hand is shown pressing a button on the dust cup, which opens the bottom flap, allowing collected debris to fall out easily into a waste receptacle without direct contact.

Cleaning the Filters:

The Vexilar V9 features a 5-stage filtration system with washable HEPA filters.

1. Twist and detach the dust cup from the main body.
2. Remove the HEPA filter and stainless steel filters from the dust cup.
3. Rinse the filters under running water until clean. Do not use detergent.
4. Allow filters to air dry completely for at least 24 hours before reassembling. Ensure they are completely dry to maintain good suction.
5. Replace the HEPA filter every two to three months for optimal performance.

5-Layer Filtration System

Removes 99.95% of dust particles

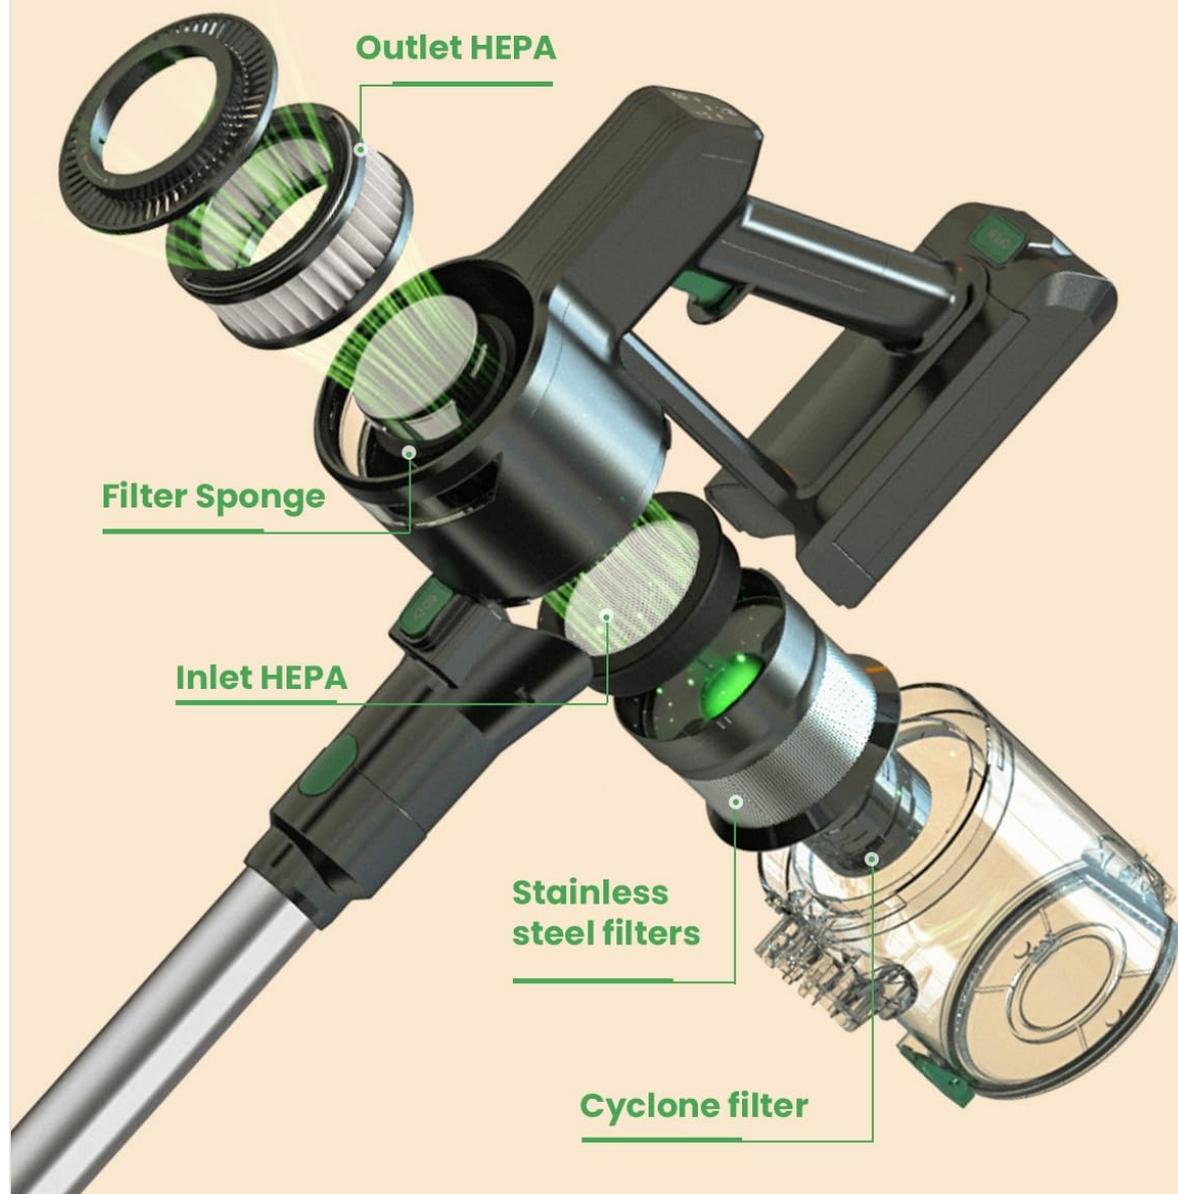


Image Description: This diagram illustrates the Vexilar V9's 5-layer filtration system, detailing each component: the outlet HEPA, filter sponge, inlet HEPA, stainless steel filters, and the cyclone filter, emphasizing its multi-stage dust capture capability.

Cleaning the Brush Roll:

Periodically check the motorized floor brush for tangled hair or debris.

- Turn off the vacuum and detach the floor brush.
- Use the provided cleaning tool (with a small blade) to cut and remove any tangled hair or fibers from the brush roll.
- Ensure the brush roll spins freely before reattaching.

TROUBLESHOOTING

If you encounter any issues with your Vexilar V9, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged or not installed correctly.	Charge the battery fully. Ensure the battery is securely clicked into place.
Weak suction power	Dust cup is full, filters are clogged, or there is a blockage.	Empty the dust cup. Clean or replace the filters (ensure they are completely dry). Check for blockages in the nozzle, extension tube, or brush roll.
Brush roll not spinning	Hair or debris tangled in the brush roll.	Turn off the vacuum and remove any tangled hair or debris from the brush roll using the cleaning tool.
Short runtime	Battery not fully charged or operating in Max mode constantly.	Ensure the battery is fully charged. Use Min mode for lighter cleaning tasks to extend battery life.
Unusual noise	Blockage in the air path or foreign object in the brush roll.	Check for and remove any blockages. Inspect the brush roll for foreign objects.

SPECIFICATIONS

Feature	Detail
Brand	Vexilar
Model Number	V9
Special Feature	Bagless

Feature	Detail
Rated Power	250W
Max Suction	30Kpa
Standard Suction	15Kpa
Battery Capacity	2200mAh Lithium-ion
Working Time	15-50 minutes (cordless)
Charging Time	4-5 hours
Dust Tank Capacity	1L
Noise Level	Less than 65dB
Net Weight	4.3lb (main machine 3.2lb)
Product Dimensions	17.5 x 11.5 x 7.5 inches
Recommended Use	Hard Floor, Thin Carpet
Color	Green

WARRANTY AND SUPPORT

The Vexilar V9 Cordless Vacuum Cleaner comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included in your product packaging or contact Vexilar customer support.

If you have any questions, require technical assistance, or need to claim warranty service, please contact our customer support team:

- **Website:** [Insert Manufacturer Website Here]
- **Email:** [Insert Support Email Here]
- **Phone:** [Insert Support Phone Number Here]

Please have your model number (V9) and purchase date ready when contacting support.