



Manuals.plus /

› PHILIPS /

› Philips Shaver Series 9000 S9976/55 Electric Shaver User Manual

PHILIPS S9976/55

Philips Shaver Series 9000 S9976/55 Electric Shaver User Manual

Model: S9976/55

PRODUCT OVERVIEW

The Philips Shaver Series 9000 S9976/55 is an advanced electric shaver designed for a close and comfortable shave. Featuring SkinIQ technology, it adapts to your unique facial contours and hair density for optimal performance. This shaver is 100% waterproof, allowing for convenient wet or dry shaving and easy cleaning.



Image: The Philips Shaver Series 9000 S9976/55, showcasing the shaver unit, a charging stand, a cleaning pod with blue solution, and a grey travel case. The shaver itself is black with silver accents and a digital display showing "100%".

IMPORTANT SAFETY INFORMATION

Please read all safety instructions before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Avoid using while charging:** Do not operate the shaver when it is connected to the power outlet for charging.
- **Clean after each use:** To maintain hygiene and prevent bacterial growth, thoroughly clean the shaver after every use.
- This appliance is waterproof and suitable for use in the bath or shower. For safety reasons, it can only be used cordless.
- Keep the appliance and adapter dry.
- Do not use the appliance if it is damaged.

SETUP AND INITIAL USE

1. **Unboxing:** Carefully remove all components from the packaging. You should find the shaver unit, a power adapter/charger, a cleaning pod (if included with your model), and a travel case.
2. **Initial Charge:** Before first use, fully charge the shaver. Connect the charger to the shaver and plug it into a power outlet. The battery indicator on the shaver will show charging progress. A full charge typically takes approximately 1 hour and provides up to 60 minutes of shaving time.
3. **Cleaning Pod Setup (if applicable):** If your model includes a cleaning pod, open the cleaning cartridge and insert it into the cleaning pod base. Place the shaver head-down into the cleaning pod.

OPERATING INSTRUCTIONS

Shaving

- **Power On/Off:** Press the power button once to turn the shaver on or off.
- **Wet Shaving:** Apply shaving foam or gel to your skin. Move the shaver in small, circular motions over your face and neck.
- **Dry Shaving:** Ensure your skin is clean and dry. Move the shaver in small, circular motions over your face and neck.
- **SkinIQ Technology:** The shaver automatically senses your hair density and adjusts power for an effortless shave. Apply gentle pressure for optimal contact.
- **Battery Indicator:** The display on the shaver shows the remaining battery percentage. Recharge when the battery level is low.

Using the Pop-up Trimmer (if applicable)

Some models include a pop-up trimmer for precise trimming of sideburns and mustaches. Slide the trimmer release button to activate it. Use the trimmer to shape and define your facial hair.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your shaver.

1. **Daily Cleaning:** After each shave, rinse the shaver head under warm running water. You can also open the shaving unit and rinse the inside thoroughly.
2. **Deep Cleaning with Cleaning Pod (if applicable):** Place the shaver in the cleaning pod after use. The cleaning cycle will automatically clean, lubricate, and dry the shaver. Refer to the cleaning pod's specific instructions for cartridge replacement.
3. **Thorough Cleaning:** Periodically, detach the shaving head from the shaver body. Disassemble the shaving unit and clean each cutter and guard separately with the provided cleaning brush or under running water. Allow all parts to air dry completely before reassembling.
4. **Replacing Shaving Heads:** For best results, replace the shaving heads every 12 months. Replacement heads are available from authorized Philips retailers.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver fully.
Poor shaving performance.	Shaving heads are dirty or worn out.	Clean the shaving heads thoroughly. Replace shaving heads if they are older than 12 months.
Shaver makes unusual noise.	Hair accumulation or damaged part.	Clean the shaver thoroughly. If noise persists, contact customer support.
Skin irritation after shaving.	Incorrect shaving technique or sensitive skin.	Ensure gentle circular motions. Try wet shaving with foam/gel. Allow skin to adapt to new shaver.

SPECIFICATIONS

- **Brand:** PHILIPS
- **Model Number:** S9976/55 (Item model number: 10853524)
- **Product Dimensions:** 6.4 x 5.65 x 6.48 inches; 2.2 Pounds
- **Power Source:** Corded Electric (for charging)
- **Special Feature:** Rechargeable, SkinIQ Technology, 100% Waterproof
- **Recommended Uses:** Facial hair, Mustache, Neck, Chin, Face
- **Included Components:** Shaver, Charger, (potentially Cleaning Pod, Travel Case - check specific package contents)
- **Battery Life:** Up to 60 minutes of cordless shaving (approximate)
- **Charging Time:** Approximately 1 hour for full charge

WARRANTY AND SUPPORT

Philips products are manufactured to the highest quality standards. This product comes with a manufacturer's warranty. For detailed warranty information, including terms and conditions, please refer to the warranty card included in your product packaging or visit the official Philips website.

For customer support, technical assistance, or to purchase replacement parts and accessories, please visit the official Philips support website or contact their customer service hotline. You can find contact details on the Philips website or in your product documentation.

Official Philips Website: www.philips.com