

Linkify A11

Linkify A11 Cordless Stick Vacuum Cleaner User Manual

Model: A11 (p8)

Brand: Linkify

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance. Keep this manual for future reference.

- This appliance is for household use only. Do not use outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup and/or filters in place.
- Turn off the appliance before connecting or disconnecting the battery pack, or before performing any maintenance.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not handle charger or appliance with wet hands.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Unplug charger from outlet when not in use and before servicing.
- Battery pack must be removed from the appliance before it is scrapped.
- The battery pack is to be disposed of safely.

2. PACKAGE CONTENTS

Carefully unpack your Linkify A11 Cordless Stick Vacuum Cleaner and check that all items are present and in good condition. If any items are missing or damaged, please contact customer support.

- Main Vacuum Body (with dustbin and motor)
- Rechargeable Battery Pack
- Extension Tube
- Motorized Floor Brush
- Crevice Tool
- 2-in-1 Brush Tool
- Wall Mount Bracket
- Charging Adapter
- User Manual (this document)

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Linkify A11 vacuum cleaner.





Figure 3.1: Fully assembled Linkifly A11 Cordless Stick Vacuum Cleaner, showing the main body, extension tube, and motorized floor brush.

Key Components:

- **Main Body:** Contains the motor, dustbin, and control panel.
- **Battery Pack:** Detachable, rechargeable lithium-ion battery.
- **Extension Tube:** Connects the main body to the floor brush or other attachments for extended reach.
- **Motorized Floor Brush:** Equipped with a rotating brush roll for effective cleaning of various floor types, including carpets and hard floors. Features LED lights to illuminate dust.
- **Dustbin:** Transparent container for collecting dust and debris.
- **HEPA Filter:** Advanced filtration system to capture fine dust particles.
- **Smart Screen:** Digital display showing battery level, suction mode, and maintenance alerts.

4. ASSEMBLY

Follow these steps to assemble your vacuum cleaner:

1. **Attach the Battery:** Align the battery pack with the slot on the main vacuum body and push it firmly until it clicks into place.

2. **Connect the Extension Tube:** Insert the wider end of the extension tube into the main vacuum body until it locks.
3. **Attach the Floor Brush:** Connect the motorized floor brush to the other end of the extension tube, ensuring it clicks securely.
4. **Alternative Assembly (Handheld Mode):** For handheld use, you can directly attach the crevice tool or 2-in-1 brush tool to the main vacuum body without the extension tube.

5. CHARGING THE BATTERY

Before first use, fully charge the battery for approximately 3-4 hours.

1. Ensure the vacuum cleaner is turned off.
2. Connect the charging adapter to the charging port on the battery pack.
3. Plug the charging adapter into a wall outlet.
4. The smart screen will indicate the charging status. Once fully charged, the indicator will show full battery.
5. Unplug the charger once charging is complete.

Note: The battery can be charged while attached to the vacuum or separately.

6. OPERATING INSTRUCTIONS

Power On/Off:

- Press the power button on the main body to turn the vacuum cleaner on.
- Press the power button again to turn it off.

Adjusting Suction Power:

The Linkify A11 features multiple suction modes for different cleaning needs, up to 40KPa.

- Press the mode button (usually indicated by a fan icon or 'M') to cycle through different suction power levels (e.g., Eco, Standard, Max).
- The smart screen will display the current suction mode.
- Use lower power for light cleaning and longer battery life, and higher power for stubborn dirt and deep cleaning.

Using Attachments:

- **Motorized Floor Brush:** Ideal for all floor types, including hard floors, tiles, and carpets. The integrated LED lights help reveal hidden dust.
- **Crevice Tool:** Perfect for narrow gaps, corners, and hard-to-reach areas like between sofa cushions or car seats.
- **2-in-1 Brush Tool:** Can be used as a stiff brush for embedded dirt on upholstery or as a soft brush for delicate surfaces like keyboards or curtains.

To change attachments, press the release button on the current attachment and pull it off. Then, align the new attachment and push it on until it clicks.

7. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dustbin:

1. Ensure the vacuum is turned off.
2. Locate the dustbin release button (usually near the dustbin). Press it to detach the dustbin from the main body.
3. Hold the dustbin over a trash can and press the dustbin bottom release button to open the flap and empty the contents.
4. Close the flap and reattach the dustbin to the main body until it clicks.

Cleaning Filters:

It is recommended to clean the filters regularly, especially if suction power decreases. Filters are washable.

1. Remove the dustbin.
2. Twist and pull out the filter assembly (HEPA filter and metal filter).
3. Tap off loose dirt from the filters over a trash can.
4. Rinse the filters under cold running water until the water runs clear. Do not use detergent.
5. Allow the filters to air dry completely for at least 24 hours before reassembling. Do not use a dryer or heat to dry them.
6. Once completely dry, reinsert the filters into the dustbin and reattach the dustbin to the vacuum.

Cleaning the Brush Roll:

Periodically check the brush roll for tangled hair or debris.

1. Turn off the vacuum and detach the motorized floor brush.
2. Locate the brush roll release tab or lock on the side of the floor brush. Unlock and remove the brush roll.
3. Use scissors or a cleaning tool to cut and remove any tangled hair or fibers from the brush roll.
4. Wipe the brush roll and its housing with a dry cloth.
5. Reinsert the brush roll and lock it back into place.

8. TROUBLESHOOTING

If you encounter any issues with your Linkify A11 vacuum cleaner, please refer to the following table before contacting customer support.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not properly installed.	Ensure battery is fully charged and securely clicked into place.

Problem	Possible Cause	Solution
Weak suction power.	Dustbin is full. Filters are clogged. Brush roll is tangled. Nozzle or tube is blocked.	Empty the dustbin. Clean or replace filters. Remove tangled hair from brush roll. Check for and remove any blockages in the nozzle, extension tube, or main body.
Brush roll not spinning.	Brush roll is jammed by debris. Floor brush is not properly connected.	Remove any obstructions from the brush roll. Ensure the floor brush is securely attached to the extension tube or main body.
Battery life is short.	Using high suction mode. Battery not fully charged. Battery reaching end of life.	Use lower suction mode for longer runtime. Ensure battery is fully charged before use. Contact customer support for battery replacement if necessary.

9. SPECIFICATIONS

Feature	Detail
Model Name	A11
Model Number	p8
Brand	Linkifly
Suction Power	Up to 40 KPa
Rated Power	600 Watts
Voltage	22.2 Volts
Dustbin Capacity	1 Litre
Noise Level	65 dB
Item Weight	1.77 Kilograms
Power Source	Battery Powered
Wireless	Yes
Battery Type	Rechargeable Lithium-ion Battery
Product Dimensions	45L x 29W x 18H cm

10. WARRANTY AND SUPPORT

Linkifyly is committed to providing high-quality products and excellent customer service.

30-Day Money-Back Guarantee

Within 30 days of purchase, you can return any undamaged product for any reason, along with its original packaging materials, for a full refund.

Up to 24-Month Warranty

Your Linkifyly A11 vacuum cleaner comes with a standard warranty, which can be extended up to 24 months. Please refer to your purchase documentation for specific terms.

Professional After-Sales Service

Linkifyly offers professional after-sales service and prompt responses to customer inquiries. If you encounter a problem or need assistance, we will provide detailed support and the best solution.

For further assistance or warranty claims, please visit the official Linkifyly website or contact our customer support team via the contact information provided with your purchase.

¿Por qué elegir Linkifyly?



Garantía de reembolso en 30 días

Dentro de los 30 días siguientes a la compra, puede devolver cualquier producto no dañado por cualquier motivo, junto con los materiales de embalaje.



12 meses

Garantía Normal



12 meses

Garantía Adicional

Garantía de hasta 24 meses



Servicio posventa profesional

Linkifyly ofrece a los clientes un servicio posventa profesional y una respuesta rápida. Si un cliente se encuentra con un problema o necesita ayuda, respondemos rápidamente, entendemos el problema en detalle y ofrecemos la mejor solución.

Figure 10.1: Summary of Linkifyly's customer support and warranty policies.

© 2025 Linkifyly. All rights reserved.
This manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question