

[Manuals.plus](#) /

› [KLIM](#) /

› KLIM B3 Portable CD Player Boombox Instruction Manual

KLIM B3

KLIM B3 Portable CD Player Boombox Instruction Manual

Model: KLIM B3

INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your KLIM B3 Portable CD Player Boombox. The KLIM B3 is a versatile audio device offering multiple playback options including CD, FM Radio, Bluetooth, USB, and AUX input. Its compact and lightweight design makes it suitable for various environments.

IMPORTANT SAFETY INFORMATION

- Do not expose the unit to rain or moisture to prevent fire or electric shock.
 - Ensure proper ventilation; do not block any ventilation openings.
 - Use only the specified power sources (AC adapter or 4 x C-size batteries).
 - Do not attempt to disassemble or modify the unit. Refer all servicing to qualified personnel.
 - Keep batteries away from children. Dispose of used batteries responsibly.
 - Before inserting a CD, ensure the protective cardboard from the lens is removed.
-

PACKAGE CONTENTS

Upon unpacking, please verify that all items are present:

- KLIM B3 Portable CD Player Boombox
- AC Power Cord
- Instruction Manual (this document)

Note: 4 x C-size batteries are not included and must be purchased separately for portable use.

PRODUCT OVERVIEW

Familiarize yourself with the main components and controls of your KLIM B3 Boombox.



Image 1: Front view of the KLIM B3 Portable CD Player Boombox, showing the dual speakers, central control panel, and LCD display. The unit is black with silver accents around the speakers.

Control Panel and Ports

PLAY MUSIC YOUR WAY

Convenient handle

Easy to use



Multifunction

Image 2: Detailed view of the KLIM B3 Boombox's front control panel. This image highlights the AUX IN port, USB port, and headphone jack, along with various playback and mode selection buttons.

- **Power Button:** Turns the unit on or off.
- **Mode Button:** Switches between CD, FM Radio, Bluetooth, USB, and AUX modes.
- **Volume - / + Buttons:** Adjusts the audio output level.
- **EQ Button:** Cycles through sound equalization presets (FLAT, CLASSICAL, JAZZ, ROCK, POP).
- **Play/Pause Button:** Starts or pauses playback.
- **Skip/Search Buttons (◀◀ / ▶▶):** Skips tracks or scans radio frequencies.
- **Repeat Button:** Repeats the current track or all tracks.
- **P+/SCAN Button:** For FM radio, scans and saves preset stations.
- **LCD Display:** Shows current mode, track number, frequency, and other information.
- **CD Compartment:** Located on top, for inserting audio CDs.
- **USB Port:** For connecting USB flash drives for audio playback.
- **AUX IN Port:** For connecting external audio devices via a 3.5mm cable.
- **Headphone Jack:** For private listening.

- **FM Antenna:** Extendable antenna for improved FM radio reception.
-

SETUP

Powering the Boombox

The KLIM B3 can be powered using the included AC power cord or with 4 C-size batteries (not included).

AC Power

1. Insert the AC power cord into the AC IN jack located at the back of the boombox.
2. Plug the other end of the AC power cord into a standard wall outlet (100-240 VAC, 50/60 Hz).

Battery Power

1. Open the battery compartment cover on the bottom of the boombox.
2. Insert 4 C-size (R14) dry batteries, ensuring correct polarity (+/-).
3. Close the battery compartment cover securely.
4. **Note:** For optimal performance, use alkaline batteries. Remove batteries if the unit will not be used for an extended period.

Initial Use - CD Player Preparation

Before playing a CD for the first time, it is crucial to remove the protective cardboard from the CD lens. This cardboard is inserted during manufacturing to prevent damage during transit.

1. Gently open the CD compartment lid on top of the boombox.
 2. Carefully locate and remove any protective cardboard or foam covering the CD lens.
 3. Close the CD compartment lid.
-

OPERATING INSTRUCTIONS

Power On/Off

Press the **Power** button on the front panel briefly to turn the unit on or off. The LCD display will illuminate when the unit is powered on.

Selecting a Mode

Press the **Mode** button repeatedly to cycle through the available playback options: CD, FM Radio, Bluetooth, USB, and AUX.

Volume Adjustment

Use the **Volume -** and **Volume +** buttons to decrease or increase the audio output level.

Equalizer (EQ) Settings

Press the **EQ** button to select from five preset sound modes: FLAT, CLASSICAL, JAZZ, ROCK, and POP. This allows you to customize the audio profile to your preference.

CD Playback

1. Ensure the protective cardboard has been removed from the CD lens (refer to Setup section).
2. Open the CD compartment lid.
3. Place a CD (CD, CD-R/RW, HDCD, WMA, MP3 CD, or audiobook CD) onto the spindle with the label side facing up.

4. Close the CD compartment lid. The unit will read the disc, and the track number will appear on the display.
5. Press the **Play/Pause** button to start playback.
6. Press **▶▶** to skip to the next track, or **◀◀** to go to the beginning of the current track or the previous track.
7. Press the **Repeat** button to cycle through repeat options (e.g., repeat one track, repeat all tracks).

FM Radio Operation

1. Extend the FM antenna for optimal reception.
2. Press the **Mode** button until "FM" appears on the display.
3. **Automatic Scan and Save:** Press and hold the **P+/SCAN** button. The radio will automatically scan for available stations and save them as presets (up to 20 stations).
4. **Manual Tuning:** Briefly press **◀◀** or **▶▶** to fine-tune the frequency.
5. **Selecting Presets:** Briefly press the **P+/SCAN** button to cycle through saved preset stations.

Bluetooth Pairing and Playback

1. Press the **Mode** button until "BT" or "Bluetooth" appears on the display. The unit will enter pairing mode, indicated by a flashing Bluetooth icon or similar indicator.
2. On your Bluetooth-enabled device (e.g., smartphone, tablet), enable Bluetooth and search for available devices.
3. Select "KLIM B3" from the list of devices. Once paired, a confirmation sound may play, and the Bluetooth indicator on the boombox will become solid.
4. Start playing audio on your connected device. The sound will be streamed through the boombox.
5. Use the boombox's **Play/Pause** and **Skip** buttons, or your connected device, to control playback.

USB Playback

1. Insert a USB flash drive into the USB port on the front panel.
2. Press the **Mode** button until "USB" appears on the display. The unit will automatically begin playing audio files from the USB drive.
3. Use the **Play/Pause** and **Skip** buttons to control playback.

AUX Input

1. Connect one end of a 3.5mm audio cable (not included) to the AUX IN port on the front panel of the boombox.
2. Connect the other end of the cable to the headphone jack or audio output of your external audio device (e.g., MP3 player, smartphone).
3. Press the **Mode** button until "AUX" appears on the display.
4. Start playing audio on your external device. The sound will be routed through the boombox.
5. Control playback (play/pause, skip) directly from your external device. Volume can be adjusted on both the boombox and the external device.

MAINTENANCE

Cleaning

- Wipe the exterior of the unit with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- For the CD lens, use a specialized CD lens cleaner if necessary. Avoid touching the lens directly.

Storage

When not in use for extended periods, store the boombox in a cool, dry place. Remove batteries if storing for a long duration to prevent leakage.

TROUBLESHOOTING

If you encounter issues with your KLIM B3 Boombox, please refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Unit does not power on.	Ensure the AC power cord is securely connected to both the unit and the wall outlet. If using batteries, check that they are inserted correctly with the correct polarity and are not depleted. Press the Power button briefly. Holding it down for too long may not register the command.
No sound from speakers.	Increase the volume using the Volume + button. Ensure the correct mode (CD, FM, BT, USB, AUX) is selected. If using AUX, check the connection cable and the volume on the external device. If headphones are connected, sound will be routed to them. Disconnect headphones to hear from speakers.
CD does not play or skips.	Ensure the protective cardboard has been removed from the CD lens. Check if the CD is clean and free of scratches or smudges. Clean with a soft, lint-free cloth if necessary. Ensure the CD is inserted correctly with the label side facing up. The CD format might not be supported (e.g., some data CDs).
FM radio reception is poor.	Fully extend and adjust the position of the FM antenna. Relocate the unit to an area with better signal reception, away from other electronic devices that may cause interference.
Bluetooth device cannot pair.	Ensure the boombox is in Bluetooth mode and discoverable. Make sure your Bluetooth device is within range (typically 10 meters or 33 feet). Turn off and on Bluetooth on your device, then try pairing again. If previously paired, try "forgetting" the device on your phone and re-pairing.

SPECIFICATIONS

Model	KLIM B3
Product Dimensions (L x W x H)	10.63 x 8.5 x 4.65 inches
Item Weight	2.49 pounds
Power Supply	AC 100-240V ~ 50/60Hz or 4 x C-size (R14) batteries (6V DC)
Connectivity	Bluetooth, USB, AUX, FM Radio
Speaker Type	Stereo
Supported CD Formats	CD, CD-R/RW, HDCD, WMA, MP3 CDs, audiobook CDs
FM Preset Stations	Up to 20

WARRANTY AND CUSTOMER SUPPORT

5-Year Assurance

Your KLIM B3 Portable CD Player Boombox is backed by a 5-year assurance. This warranty covers manufacturing defects and ensures the quality of your product.

Customer Support

For any questions, technical assistance, or warranty claims, please contact our dedicated customer support team. We offer 24/7 access to product specialists to assist you.

Please refer to the contact information provided on the KLIM official website or your product packaging for the most up-to-date support channels.

© 2025 KLIM Technologies. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D979X5TX>

More documents and user manuals: <https://manuals.plus/>