

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Edillas](#) /
- › [Edillas Digital Watch Model 869LB User Manual](#)

Edillas 869LB

Edillas Digital Watch Model 869LB User Manual

Your guide to setting up and using your Edillas Digital Watch.

1. INTRODUCTION

Thank you for choosing the Edillas Digital Watch Model 869LB. This watch is designed for active children, featuring a durable construction, multiple functions, and a vibrant LED backlight. Please read this manual carefully to ensure proper use and maintenance of your watch.

2. PRODUCT FEATURES

- **Digital Display:** Clear and easy-to-read time display.
- **7 Colorful LED Backlight:** Press the LIGHT button to illuminate the display with various colors.
- **50M Water Resistance:** Suitable for hand washing, rain, and swimming. *Not recommended for hot water activities or diving.*
- **Stopwatch Function:** Accurate timing for sports and activities.
- **Alarm Clock:** Set daily alarms.
- **12/24 Hour Format:** Switch between standard and military time.
- **Date and Day Display:** Keeps track of the current date and day of the week.
- **Durable Construction:** Features an ABS hard watch case, soft TPU strap, and stainless steel bottom cover.



Image: The Edillas Digital Watch displaying its various 7-color LED backlight options.

3. WATCH COMPONENTS



Image: A diagram illustrating the watch's buttons and their functions: Light, Alarm Chrono (Mode), Start, and Reset.

- **LIGHT Button:** Activates the LED backlight.
- **MODE Button:** Cycles through different modes (Time, Alarm, Stopwatch).
- **START Button:** Used to start/stop stopwatch, adjust settings.
- **RESET Button:** Used to reset stopwatch, adjust settings.

4. SETUP INSTRUCTIONS

4.1 Setting Time and Date

1. From the normal time display, press the **MODE** button three times to enter time setting mode. The seconds will start flashing.
2. Press the **RESET** button to set the seconds to zero.
3. Press the **START** button to move to the next setting (hours).
4. Press the **RESET** button to adjust the hours. Pay attention to AM/PM for 12-hour format.
5. Continue pressing **START** to cycle through minutes, month, date, and day of the week.

6. Use the **RESET** button to adjust each value.
7. Once all settings are correct, press the **MODE** button to exit setting mode and return to the normal time display.

4.2 Setting the Alarm

1. From the normal time display, press the **MODE** button twice to enter alarm setting mode. The hour digits will flash.
2. Press the **RESET** button to adjust the alarm hour.
3. Press the **START** button to move to the alarm minutes.
4. Press the **RESET** button to adjust the alarm minutes.
5. Press the **MODE** button to exit alarm setting mode.
6. To turn the alarm ON/OFF, press and hold the **RESET** button, then press the **START** button. An alarm icon will appear/disappear.

4.3 Using the Stopwatch

1. From the normal time display, press the **MODE** button once to enter stopwatch mode. The display will show "0:00:00".
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. Press the **RESET** button to reset the stopwatch to "0:00:00".
5. To return to normal time display, press the **MODE** button.

Your browser does not support the video tag.

Video: Demonstrates how to set the date, time, stopwatch, and alarm functions on a similar digital watch.

5. OPERATING THE WATCH

5.1 Using the Backlight

Press the **LIGHT** button (top-left) to activate the 7-color LED backlight. The light will stay on for a few seconds, making the display visible in low-light conditions.

5.2 Switching 12/24 Hour Format

In normal time display, press the **RESET** button to toggle between 12-hour (AM/PM) and 24-hour (military) time formats.

6. MAINTENANCE

6.1 Water Resistance

The Edillas Digital Watch is 50M water resistant. This means it can withstand splashes, rain, and brief immersion in water, such as during hand washing or swimming. **Do not press any buttons while the watch is wet or submerged. Avoid hot water, saunas, or diving, as this can compromise the water resistance.**

50M Water Resistant

Wash Hand Swimming Raining

Image: A child playing with a water gun, illustrating the watch's 50M water resistance for activities like hand washing, swimming, and rain.

6.2 General Care

- Clean the watch regularly with a soft, dry cloth.
- Avoid exposing the watch to extreme temperatures or strong magnetic fields.
- Do not attempt to open the watch case or replace the battery yourself, as this may void the warranty and damage the watch.
- Store the watch in a cool, dry place when not in use.

7. TROUBLESHOOTING

- **Time keeps changing by accident:** Ensure buttons are not accidentally pressed during wear or activity. Review the time setting instructions to re-adjust if needed.
- **Alarm chime cannot be disabled:** Refer to section 4.2 "Setting the Alarm" to properly turn the alarm ON/OFF. Ensure the alarm icon is not displayed if you wish for the alarm to be off.

- **Display is dim or blank:** The battery may be low. Contact customer support for battery replacement.
- **Water appears inside the watch:** Immediately stop using the watch and contact customer support. Water resistance may have been compromised.

8. SPECIFICATIONS

Model Number	869LB
Display Type	Digital
Watch Movement Type	Japanese Automatic
Power Source Type	Battery Powered
Water Resistance Depth	50 Meters
Case Material Type	Acrylonitrile Butadiene Styrene (ABS)
Band Material Type	Resin (TPU)
Case Diameter	44.5 mm / 1.75 Inches
Case Thickness	17 mm / 0.67 Inches
Band Width	16 mm / 0.63 Inches
Band Length	24 cm / 9.44 Inches
Item Weight	18 g



Case Diameter:44.5mm/1.75in	Max Fit Wrist: 22cm/8.66in
Band Length:24cm/9.45in	Min Fit Wrist:15cm/5.9in
Band Width:16mm/0.63in	Case Thickness:17mm/0.67in
Product Weight:43g/1.5oz	

Image: Detailed measurements and dimensions of the Edillas Digital Watch.

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This Edillas Digital Watch comes with a **Limited Warranty**. Please refer to the warranty card included in your product packaging for specific terms and conditions.

9.2 Customer Support

For any questions, technical support, or warranty claims, please contact the manufacturer at: yadelaiaftersale@163.com.



