

Aideepen BLM-30A

Aideepen PWM DC Motor Speed Controller User Manual

Model: BLM-30A | Brand: Aideepen

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your Aideepen PWM DC Motor Speed Controller. Please read this manual thoroughly before installation and use, and retain it for future reference. This device is designed for precise control of DC motor speeds within a 6V-60V range, offering stable performance and a wide range of applications.

2. PRODUCT FEATURES

- Durability and Stability:** Constructed from durable PCB material, ensuring stable product performance and a long operational lifespan. Features a digital encoder knob for high precision control.
- High Performance:** Supports an input voltage range of DC 6V-60V. Provides a maximum output current of 30A, with a continuous output current of 20A. The duty cycle is continuously adjustable from 0% to 100%.
- User-Friendly Installation:** Designed with a grid terminal block and a button interface for ease of use. Allows for setting slow start and stop times, limiting upper and lower speed thresholds, and adjusting the control frequency from 1-100KHz.
- Versatile Applications:** Ideal for controlling the speed of various DC-powered devices, including DC motors, fans, aquarium oxygen pumps, and other products operating within the 6V-60V DC range.

3. PACKAGE CONTENTS

Upon opening the package, please verify that all items are present and undamaged:

- 1x Aideepen PWM DC Motor Speed Controller (Model: BLM-30A)
- 1x Instruction Manual

4. SPECIFICATIONS

Parameter	Value
Product Dimensions	9.6 x 6.1 x 3.4 cm
Weight	100 grams

Parameter	Value
Input Voltage Range	DC 6V-60V
Output Voltage	Linear load
Maximum Output Current	30A
Continuous Output Current	20A
Speed Adjustment Range	0% to 100%
Adjustment Method	Potentiometer (Digital Encoder Knob)
Control Type	Current control
Control Frequency	15KHz (Adjustable 1-100KHz)
Wiring Type	Screw Terminal

Note: Specifications are subject to change without prior notice.

5. SAFETY INFORMATION

Please read and adhere to the following safety warnings to prevent damage to the device or personal injury:

- **Input Voltage:** The input voltage must be DC 6V-60V. It is crucial to distinguish between the positive and negative poles.
- **DO NOT Input 220V AC:** Connecting 220V AC power will severely damage the controller and may pose a safety hazard.
- **Voltage Matching:** The input voltage supplied to the controller should match the rated voltage of the DC motor being controlled (within the 6V-60V range).
- **Polarity:** Always ensure correct polarity when connecting power and motor leads. Incorrect wiring can cause malfunction or damage.
- **Environment:** Operate the controller in a dry, well-ventilated area, away from flammable materials, moisture, and extreme temperatures.
- **Professional Installation:** If you are unsure about wiring or installation, seek assistance from a qualified electrician or technician.

6. SETUP AND INSTALLATION

Follow these steps for proper installation of the motor speed controller:

1. **Prepare Wiring:** Ensure all power is disconnected before making any connections. Prepare appropriate gauge wires for your power supply and DC motor.
2. **Identify Terminals:** The controller features screw terminals for connections. There are two sets of terminals: one for power input and one for motor output.
3. **Connect Power Input:** Connect your DC 6V-60V power supply to the input terminals. The terminal labeled 'POWER +' is for the positive lead, and 'POWER -' is for the negative lead. **Observe polarity carefully.**
4. **Connect Motor Output:** Connect your DC motor to the output terminals. The terminal labeled 'MOTOR +' is for the positive lead of the motor, and 'MOTOR -' is for the negative lead.



Figure 6.1: Wiring diagram illustrating the connection points for input power (6-60V DC) and motor positive/negative terminals.
Ensure correct polarity for both connections.



Figure 6.2: Detailed view of the green screw terminal blocks, where power input and motor output wires are securely connected.



Figure 6.3: An alternative view of the terminal block, highlighting the clear labeling for power and motor connections.

7. OPERATING INSTRUCTIONS

The Aideepen PWM DC Motor Speed Controller features a digital display, a rotary encoder knob, and a 'SET' button for operation.

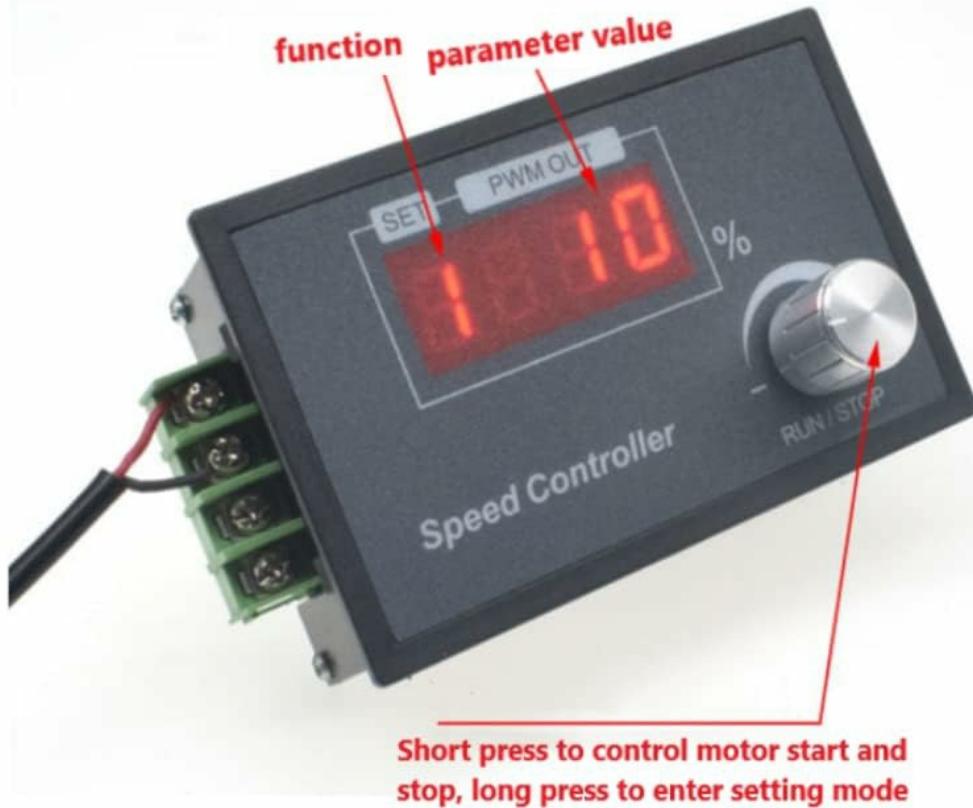


Figure 7.1: Front panel layout showing the digital display, 'SET' button for function selection, and the 'RUN/STOP' rotary knob for parameter adjustment and motor control.



Figure 7.2: Close-up of the multi-function rotary encoder knob, used for both starting/stopping the motor and adjusting speed or settings.

7.1 Basic Operation

- **Power On:** Once wired correctly, apply DC power (6V-60V). The digital display will illuminate, showing the current speed percentage or a parameter.
- **Start/Stop Motor:** A **short press** of the rotary encoder knob (labeled RUN/STOP) will start or stop the connected DC motor.
- **Adjust Speed:** Rotate the rotary encoder knob clockwise to increase the motor speed and counter-clockwise to decrease it. The digital display will show the current speed as a percentage (0-100%).

7.2 Advanced Settings (Parameter Mode)

The controller allows for advanced configuration of various parameters:

- **Enter Setting Mode:** A **long press** of the rotary encoder knob (RUN/STOP) will enter the setting mode. The display will show a parameter code (e.g., P-1, P-2).
- **Navigate Parameters:** Rotate the knob to cycle through different parameter codes.
- **Select Parameter:** Short press the 'SET' button to select the currently displayed parameter for adjustment.
- **Adjust Parameter Value:** Rotate the knob to change the value of the selected parameter.
- **Confirm Value:** Short press the 'SET' button again to confirm the new value and move to the next parameter or exit the current parameter setting.
- **Exit Setting Mode:** Long press the rotary encoder knob again to exit the setting mode and return to normal operation.

Commonly Adjustable Parameters:

- **Slow Start Time:** Configures the time it takes for the motor to reach full speed from a stop.
- **Slow Stop Time:** Configures the time it takes for the motor to come to a complete stop from full speed.
- **Upper Speed Limit:** Sets the maximum achievable speed percentage.
- **Lower Speed Limit:** Sets the minimum operational speed percentage.
- **Control Frequency:** Adjusts the PWM frequency (1-100KHz) for compatibility with different motors.

8. MAINTENANCE

To ensure the longevity and optimal performance of your Aideepen PWM DC Motor Speed Controller, follow these maintenance guidelines:

- **Keep Clean:** Regularly clean the exterior of the controller with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Avoid Moisture:** Protect the device from water, humidity, and other liquids. Moisture can cause short circuits and damage internal components.
- **Check Connections:** Periodically inspect all wiring connections to ensure they are secure and free from corrosion. Loose connections can lead to intermittent operation or overheating.
- **Ventilation:** Ensure the controller has adequate ventilation to prevent overheating, especially during prolonged operation at high loads.
- **Storage:** When not in use for extended periods, store the controller in a cool, dry place.

9. TROUBLESHOOTING

If you encounter issues with your motor speed controller, refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
Controller does not power on / Display is off	No power input; Incorrect input voltage; Incorrect polarity; Loose connection.	Check power supply (6V-60V DC). Verify input voltage and ensure correct positive/negative polarity. Secure all power connections.
Motor does not run	Motor not connected; Incorrect motor polarity; Motor damaged; Controller in 'STOP' mode; Speed set to 0%.	Check motor connections and polarity. Ensure motor is functional. Short press RUN/STOP knob to start. Increase speed using the knob.
Motor runs at incorrect speed / Speed cannot be adjusted	Speed limits set too low/high; Potentiometer malfunction; Incorrect control frequency.	Enter setting mode (long press RUN/STOP) and check upper/lower speed limits. Verify control frequency (1-100KHz) is suitable for your motor.
Motor runs erratically / Overheats	Overload; Poor ventilation; Loose connections; Incompatible motor.	Reduce motor load. Ensure adequate ventilation around the controller. Check all wiring connections. Confirm motor is compatible with PWM control and voltage/current ratings.
Display shows error code	Internal fault; Overcurrent/Overvoltage protection triggered.	Disconnect power, wait a few minutes, then reconnect. If the error persists, contact customer support.

10. WARRANTY AND SUPPORT

Aideepen products are manufactured to high-quality standards. For specific warranty information, return policies, or technical support, please refer to the documentation provided at the time of purchase or contact Aideepen customer service directly through their official channels. Please have your product model number (BLM-30A) and purchase details ready when contacting support.

For additional resources and product information, you may visit the Aideepen store on Amazon or their official website.

© 2024 Aideepen. All rights reserved.

Model: BLM-30A

Related Documents

	<p>Aideepen 1200W 20A DC-DC Boost Converter Module: Specifications and Guide</p> <p>Detailed specifications, usage guide, and troubleshooting for the Aideepen 1200W 20A DC-DC Boost Converter Module, an adjustable voltage power supply module operating from 8-60V to 12-83V.</p>
	<p>Aideepen SHT-2000 Temperature and Humidity Controller Manual</p> <p>Comprehensive guide for the Aideepen SHT-2000 Temperature and Humidity Controller. Details main functions, technical specifications, heating/cooling and humidification/dehumidification settings, wiring diagrams, error codes, and safety precautions.</p>
	<p>STC-3028 Temperature Humidity Controller - English Manual</p> <p>This document provides an English manual for the STC-3028 Temperature Humidity Controller, detailing its overview, specifications, wiring diagram, key instructions, operation, and calibration.</p>
	<p>SWM-103 Spot Welder Control Module: Instruction Manual</p> <p>Comprehensive instruction manual for the Aideepen SWM-103 spot welder control module, featuring double pulse trigger, voltage compensation, and parameter storage for DIY battery welding applications.</p>