

[Manuals.plus](#) /

> [WLIVE](#) /

> WLIVE TV Stand Instruction Manual

WLIVE AD SG617

WLIVE TV Stand Instruction Manual

Model: AD SG617

INTRODUCTION

Thank you for purchasing the WLIVE TV Stand. This manual provides detailed instructions for the assembly, operation, and maintenance of your new TV stand. Please read this manual thoroughly before assembly and retain it for future reference.



Image: The WLIVE TV Stand in white, featuring a television, decorative bird, books, and a vase with flowers. One drawer is slightly open, revealing storage space.

SAFETY INSTRUCTIONS

- Always assemble the product on a soft, clean surface to prevent scratches.
- Ensure all screws and fasteners are securely tightened before use. Do not overtighten.
- Do not exceed the maximum load capacity for the top surface (40kg) and adjustable shelves (10kg).
- Keep small parts and packaging materials away from children to prevent choking hazards.
- Avoid placing hot items directly on the surface. Use coasters or protective pads.
- Do not stand or climb on the TV stand.
- For stability, place the TV stand on a flat, level surface.

PACKAGE CONTENTS

Before beginning assembly, verify that all parts listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

Part	Description	Quantity
A	Top Panel	1
B	Bottom Panel	1
C	Side Panels	2
D	Drawer Fronts	2
E	Adjustable Shelf	1
F	Hardware Pack (Screws, Dowels, etc.)	1
G	Assembly Tools (Screwdriver, Wrench)	1
H	Instruction Manual (Japanese)	1

SETUP AND ASSEMBLY

Follow these steps carefully to assemble your WLIVE TV Stand. It is recommended to have two people for assembly.

Step 1: Prepare the Workspace

Clear an open area and lay down a blanket or cardboard to protect the parts from scratches during assembly.

Step 2: Assemble the Main Frame

Attach the side panels (C) to the bottom panel (B) using the provided screws and dowels from the hardware pack (F). Ensure they are aligned correctly.



150cm ロータイプ落ち着いた高級感 *TV stand*

Image: The assembled WLIVE TV Stand positioned in a living room, demonstrating its sleek design and how it fits into a modern home environment.

Step 3: Install the Top Panel

Carefully place the top panel (A) onto the assembled frame and secure it with the remaining screws from the hardware pack (F).

Step 4: Assemble and Insert Drawers

Assemble the two drawers using the drawer fronts (D) and other drawer components from the hardware pack. Slide the assembled drawers into their designated slots. The handle-less design ensures a flat, clean look.



TV stand

2杯引き出したっぷりの収納



Image: An aerial view of the TV stand, highlighting the two spacious drawers and open shelves. One drawer is pulled out, showing ample storage for media and accessories.

Step 5: Adjust the Shelf

The adjustable shelf (E) can be placed at three different heights or removed entirely to accommodate various AV equipment sizes. Insert the shelf pins into the desired holes and place the shelf on top.

外すことも可能

機器スペースの大きさ

は心配不要、調節できる棚



Image: A detailed view of the open storage section, illustrating the three adjustable height options for the shelf, allowing customization for different devices.

Step 6: Cable Management

The TV stand features a thoughtful design for cable management, including a 7cm gap at the back and a skirting board design, allowing the unit to be placed flush against the wall while accommodating cables.

『配線整理しやすい、^{TV stand}

タップ置き専用場、

見えない裏側も配慮』



Image: The back of the TV stand, demonstrating the integrated cable management features and the space provided for power strips and wiring.

OPERATING INSTRUCTIONS

Using the Drawers

The two drawers provide hidden storage. To open, gently pull the top or bottom edge of the drawer front. To close, push the drawer firmly until it is flush with the front of the unit.

Adjusting the Shelf

To adjust the height of the open storage shelf, remove any items from the shelf. Lift the shelf slightly and pull it out. Reinsert the shelf pins into the desired set of holes (1, 2, or 3 as shown in the assembly diagram) and place the shelf back on the pins.

MAINTENANCE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Dusting:** Regularly dust the unit to prevent accumulation, especially in the open storage areas.

- **Spills:** Clean up spills immediately to prevent staining or damage to the melamine surface.
- **Inspection:** Periodically check all fasteners to ensure they remain tight. Retighten if necessary.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit is wobbly/unstable.	Loose fasteners or uneven floor.	Ensure all screws are tightened. Move to a level surface or use shims under the feet.
Drawers do not slide smoothly.	Misaligned drawer slides or debris.	Check that drawer slides are correctly installed and clear of obstructions.
Scratches on surface.	Rough handling during assembly or use.	Use a furniture repair pen for minor scratches. Prevent future scratches by using protective pads.
Missing parts.	Packaging error.	Contact WLIVE customer support with your purchase details.

SPECIFICATIONS

Feature	Detail
Model Number	ADSG617
External Dimensions (W x D x H)	150 cm x 40 cm x 33 cm (59.1 in x 15.7 in x 13 in)
Net Weight	22.38 kg (49.34 lbs)
Load Capacity (Top Panel)	40 kg (88.2 lbs)
Load Capacity (Adjustable Shelf)	10 kg (22 lbs)
Board Thickness	12 mm (0.47 in)
Material	E1 Grade Melamine Particle Board
Color	White
Assembly Required	Yes



サイズ^{Size}

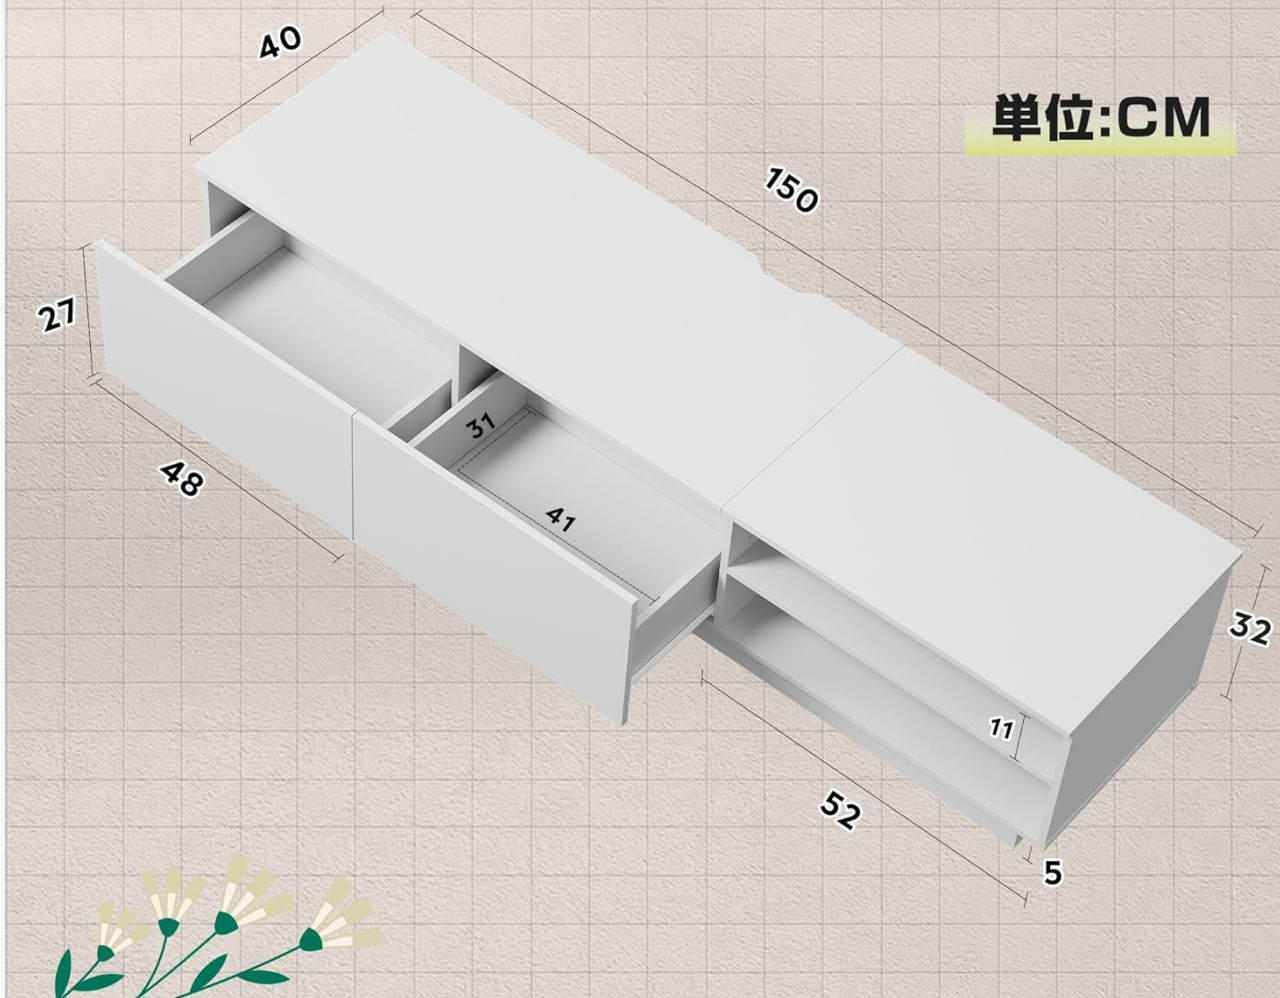


Image: A detailed technical drawing of the WLIVE TV Stand with all key dimensions labeled in centimeters, including width, depth, height, and internal drawer measurements.

WARRANTY AND SUPPORT

WLIVE provides a one-year warranty for this product. For any questions, missing parts, or issues not covered in this manual, please contact WLIVE customer support directly. Please have your purchase receipt and model number (ADSG617) ready when contacting support.

You can find more information and contact details on the official WLIVE store page: [WLIVE Official Store](#)