

[Manuals.plus](#) /

> [Kircuit](#) /

> Kircuit 5V Power Supply Adapter for Moukey MAMX3 8-Channel Mixer Instruction Manual

Kircuit MAMX3

Kircuit 5V Power Supply Adapter for Moukey MAMX3 8-Channel Mixer Instruction Manual

INTRODUCTION

This manual provides instructions for the safe and effective use of your Kircuit 5V Power Supply Adapter, designed specifically for the Moukey MAMX3 8-Channel Mixer. Please read this manual thoroughly before use and retain it for future reference.

SAFETY INFORMATION

- Ensure the power adapter is used with devices that match its voltage and current specifications (5V).
- Do not expose the adapter to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the adapter to strong impacts.
- Do not attempt to disassemble or repair the adapter. Refer to qualified personnel for service.
- Unplug the adapter from the power outlet when not in use for extended periods.
- Keep out of reach of children.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Kircuit 5V Power Supply Adapter
- 1 x Power Cable



Image showing the Kircuit 5V Power Supply Adapter, featuring the main adapter unit with its power cord and connector.

SETUP

1. **Identify the Device:** Ensure your device is the Moukey MAMX3 8-Channel Mixer. This adapter is specifically designed for this model.
2. **Connect the Power Cable:** Insert the power cable into the adapter's input port.
3. **Connect to Mixer:** Plug the adapter's output connector into the designated power input port on your Moukey MAMX3 8-Channel Mixer.
4. **Connect to Power Outlet:** Insert the power cable's plug into a standard 100V-240V AC electrical outlet.

OPERATING INSTRUCTIONS

1. Once the adapter is correctly connected to both the Moukey MAMX3 mixer and a power outlet, the mixer should

receive power.

2. Turn on your Moukey MAMX3 mixer using its power switch.
3. To disconnect power, first turn off the mixer, then unplug the adapter from the electrical outlet.

MAINTENANCE

- Keep the adapter clean by wiping it with a dry, soft cloth.
- Do not use liquid cleaners or abrasive materials.
- Store the adapter in a cool, dry place when not in use.
- Regularly inspect the cable for any signs of damage, such as fraying or cuts. If damage is found, discontinue use immediately.

TROUBLESHOOTING

No Power to Mixer

- **Check Connections:** Ensure the adapter is securely plugged into both the Moukey MAMX3 mixer and the electrical outlet.
- **Verify Outlet:** Test the electrical outlet with another device to confirm it is functioning correctly.
- **Inspect Adapter/Cable:** Look for any visible damage to the adapter or power cable. If damaged, discontinue use.
- **Device Compatibility:** Confirm that your device is indeed the Moukey MAMX3 8-Channel Mixer, as this adapter is designed for specific compatibility.

If issues persist, refer to the support information section.

SPECIFICATIONS

Brand	Kircuit
Input Voltage	100V-240V AC
Output Voltage	5V
Compatible Devices	Moukey MAMX3 8-Channel Mixer
Connector Type	USB
Included Components	1 adapter, 1 power cable
Special Feature	Built-in Dynamic IC, Charger IC & Power fuse for rapid charging and over charge protection.

WARRANTY INFORMATION

This Kircuit product is covered by a standard manufacturer's warranty against defects in materials and workmanship. Please retain your proof of purchase for warranty claims. For specific warranty terms and conditions, refer to the documentation provided at the time of purchase or contact Kircuit customer support.

SUPPORT

For technical assistance, troubleshooting, or further inquiries regarding your Kircuit 5V Power Supply Adapter, please contact Kircuit customer support. Contact information can typically be found on the product packaging or the official Kircuit website.

© 2024 Kircuit. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question