

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Peakeep](#) /

› [Peakeep Large Display Digital Alarm Clock User Manual](#)

Peakeep MHP6060

Peakeep Large Display Digital Alarm Clock User Manual

Model: MHP6060 | Brand: Peakeep

INTRODUCTION

Thank you for choosing the Peakeep Large Display Digital Alarm Clock. This manual provides detailed instructions for setting up and operating your new alarm clock. Designed for clarity and convenience, this clock features a large, dimmable display, automatic Daylight Saving Time adjustment, multiple alarm volume levels, and a USB charging port.



The Peakeep Large Display Digital Alarm Clock, featuring a clear blue time display and white day/date information.

SETUP

Power Connection


The clock is primarily powered by the included Type C adapter. Connect the Type C cable to the 'TYPE C 5V IN' port on the back of the clock and plug the adapter into a standard wall outlet. The clock will immediately power on and display the time.

Battery Backup


For backup functionality during power outages, insert 4 AAA batteries (not provided) into the battery compartment on the underside of the clock. These batteries will preserve your settings and trigger the alarm in case of a power interruption, though the display will not remain lit continuously. Pressing the top 'SNOOZE/LIGHT' button will temporarily illuminate the screen for 20 seconds during battery backup mode.

Eliminate the Hassle of Changing Time Twice A Year

Daylight Saving Time

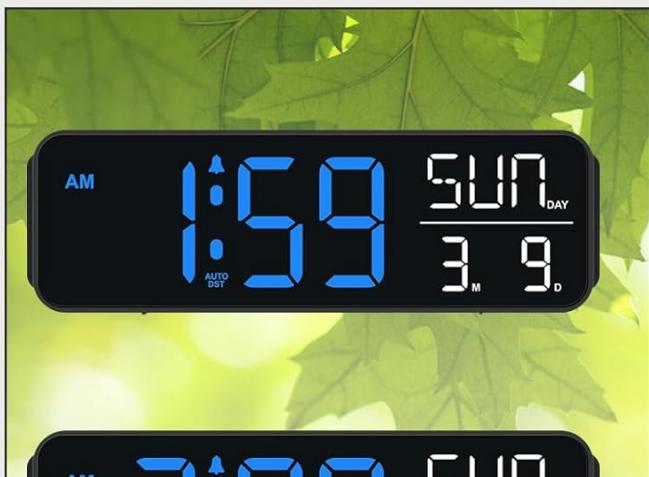

Spring Forward

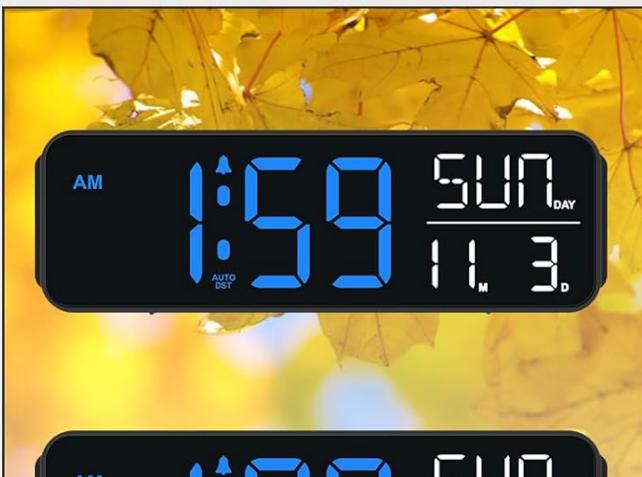

Fall Back


Illustration of the clock's power supply via Type C adapter and its battery backup feature for power outages.

OPERATING INSTRUCTIONS

The control buttons are located on the back of the clock for easy access and a clean front display.

Easy to Set

Power Source (included)

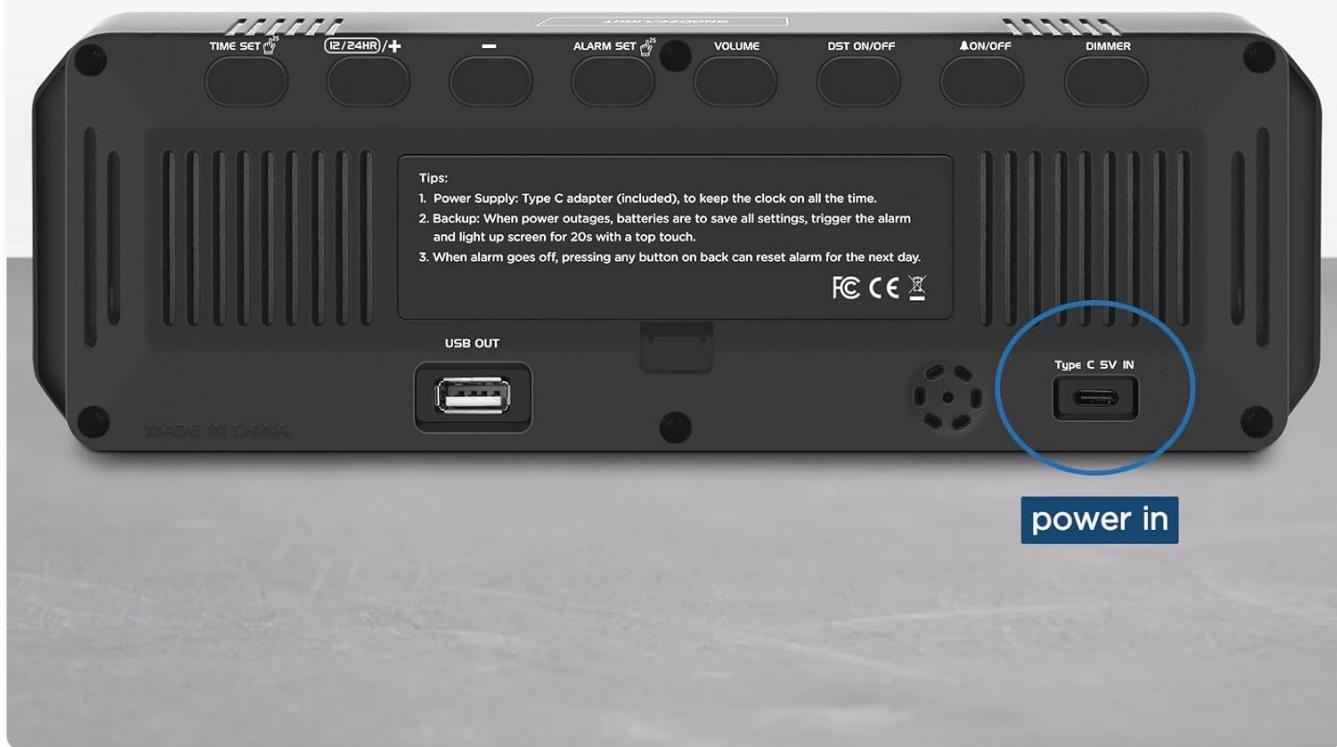

Detailed view of the clock's rear panel, highlighting the control buttons and the Type C power input and USB output ports.

Time Setting

1. Press and hold the 'TIME SET' button until the hour digits flash.
2. Use the '+' or '-' buttons to adjust the hour.
3. Press 'TIME SET' again to move to minute adjustment, then use '+' or '-' to set minutes.
4. Continue pressing 'TIME SET' to cycle through year, month, and day settings, adjusting each with '+' or '-'.
5. Press 'TIME SET' one last time to confirm and exit.

12/24 Hour Format

Press the '12/24HR' button to toggle between 12-hour (with AM/PM indicator) and 24-hour time formats.

Temperature Unit (°C/°F)

Press the '°C/F' button to switch the temperature display between Celsius and Fahrenheit.

Alarm Setting

1. Press and hold the 'ALARM SET' button until the alarm hour digits flash.
2. Use the '+' or '-' buttons to adjust the alarm hour.
3. Press 'ALARM SET' again to move to minute adjustment, then use '+' or '-' to set alarm minutes.
4. Press 'ALARM SET' one last time to confirm.
5. To activate or deactivate the alarm, press the 'ON/OFF' button next to 'ALARM SET'. An alarm icon will appear on the display when active.

Alarm Volume Adjustment

Press the 'VOLUME' button to cycle through 5 different alarm volume levels. Choose a volume suitable for your needs, from gentle to extra loud for heavy sleepers.

Electric Alarm Clock with USB Charger

The diagram shows the alarm clock with a Type C adapter connected to a power outlet. The adapter has a 60-inch cord. A separate diagram shows a battery icon with 50% charge connected to a USB port, illustrating the clock's dual power source capability.

Type C Adapter (Included)

Cord Length 60 inches

AM 6:30 WED 12.24

USB Port

Battery Backup: Alarm Still Works When Power Outages

The diagram shows the alarm clock during a power outage (blackout). The clock is shown with a red 'X' over the power cord. It is illuminated from within, with yellow lightning bolts and the word 'Beep' indicating it is still functioning on battery power. A note says: 'Pressing top will light up clock display for 20s.'

4 AAA Batteries Required (not included)

blackout

Beep

Visual representation of the five volume settings for the alarm, catering to various sleep preferences.

Daylight Saving Time (DST)

The clock features an automatic DST function. Press the 'DST ON/OFF' button to enable or disable this feature. When enabled, the clock will automatically adjust for Daylight Saving Time changes.

Display Brightness (Dimmer)

Press the 'DIMMER' button to cycle through 5 brightness levels (L1 to L5) or turn the display completely off. This allows for optimal visibility during the day and minimal disturbance at night.

Reliable Alarm Definitely Wake You Up

5 Volume Adjustable, Loud Alarm

9-min Snooze



The clock's display brightness can be adjusted through five levels or turned off completely for personalized comfort.

Date/Day Display

Press the 'DAY/TEMP' button to switch between displaying the current day of the week and the indoor temperature.

USB Charging Port

A USB-A output port is located on the back of the clock. This port can be used to charge small electronic devices, such as smartphones, while the clock is powered.

Maintenance

- Cleaning:** Wipe the clock with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- Battery Replacement:** Replace the 4 AAA backup batteries annually or when the battery backup function appears weak.

Ensure correct polarity when inserting new batteries.

- **Storage:** If storing the clock for an extended period, remove the AAA batteries to prevent leakage.

TROUBLESHOOTING

- **Display is blank:** Ensure the Type C adapter is securely plugged into both the clock and a working power outlet. If using battery backup, the display will only light up for 20 seconds when the 'SNOOZE/LIGHT' button is pressed.
- **Alarm does not sound:** Verify that the alarm is activated (alarm icon visible on display) and the volume is not set to the lowest level or muted. Check battery backup if power was interrupted.
- **Time is incorrect:** Manually reset the time using the 'TIME SET' button. If Auto DST is enabled, ensure the current date is correctly set.
- **USB charging not working:** Confirm the clock is powered by the Type C adapter. The USB output port requires the main power supply to function.

SPECIFICATIONS

Brand	Peakeep
Model Number	MHP6060
Display Type	Digital LED
Power Source	Corded Type C Adapter (included)
Battery Backup	4 AAA batteries (not included)
Product Dimensions	9"W x 2.6"H
Special Features	Large Display, Date, Day of Week, Auto DST, 5-level Dimmable Display, 5-level Loud Alarm, 1 USB Charging Port
Item Weight	9.6 ounces

WARRANTY AND SUPPORT

For any product inquiries, technical support, or warranty claims, please contact Peakeep customer service. You can reach us via email at sales@us-myhome.com.

Please retain your proof of purchase for warranty purposes.

Related Documents - MHP6060

PEAKEEP Digital Clock, Alarm Clock <small>(Model: MHP6010-DC)</small>	 <u>Peakeep MHP6010-DC Digital Alarm Clock User Manual</u> User manual for the Peakeep MHP6010-DC digital alarm clock. Covers setup, time/alarm setting, snooze, dimmer, USB port, troubleshooting, and warranty information. Features include a large display, adjustable alarm volume, and battery backup. QUESTIONS? Contact: sales@us-myhome.com
PEAKEEP Battery Operated Digital Clock, Alarm Clock <small>(Model: MHP6010-B)</small>	 <u>Peakeep MHP6010-B Battery Operated Digital Alarm Clock User Manual</u> This manual provides instructions for setting up and using the Peakeep MHP6010-B Battery Operated Digital Alarm Clock, including features like voice activation, adjustable brightness, and alarm volume. QUESTIONS? Contact: sales@us-myhome.com
 PEAKEEP Night Light Digital Alarm Clock User Manual MHP3235 <small>(Model: MHP3235)</small>	 <u>PEAKEEP Night Light Digital Alarm Clock User Manual MHP3235</u> Comprehensive user manual for the PEAKEEP MHP3235 Night Light Digital Alarm Clock, covering setup, time/date setting, alarm functions, snooze, volume, DST, display dimmer, night light, USB charging, time format conversion, safety, maintenance, and troubleshooting. QUESTIONS? Contact: sales@us-myhome.com