

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [ROBUD](#) /
- › [ROBUD Wooden Play Kitchen Set WCF31 User Manual](#)

ROBUD WCF31

ROBUD Wooden Play Kitchen Set WCF31 User Manual

Model: WCF31



1. INTRODUCTION

This manual provides essential information for the assembly, operation, and maintenance of your ROBUD Wooden Play Kitchen Set WCF31. Please read these instructions carefully before assembly and use to ensure safe and enjoyable play. Keep this manual for future reference.



Image 1.1: Overview of the ROBUD Wooden Play Kitchen Set WCF31.

2. SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

- Suitable for children aged 3 years and above.
- Contains small parts; do not ingest to avoid choking hazards.
- Do not climb on the product to prevent falling and injury.
- Adult assembly is required.
- Ensure all screws and fasteners are securely tightened before use. Periodically check for loose parts.
- Place the play kitchen on a flat, stable surface.
- Keep away from open flames or direct heat sources.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. Refer to the detailed parts list included in your assembly guide for specific quantities and identification.

- Wooden Play Kitchen Structure Components
- Assembly Hardware (screws, dowels, hinges, etc.)
- Instruction Manual
- Accessories: Pot (x1), Pan (x1), Utensils (x3), Cups (x2), Portafilter (x1), Ice Cubes (x1 set), Coffee Pod (x1), Salt & Pepper Shakers (x1 set), Hooks (x6), Cloth (x1), Pot Holder (x1)

COMES WITH VARIOUS ACCESSORIES



X1



X1



X1



X2



X1



X1



X1



X1



X6



X1



X1

Image 3.1: Included accessories for the ROBUD Play Kitchen.

4. SETUP AND ASSEMBLY

The ROBUD Wooden Play Kitchen Set is designed for straightforward assembly. A detailed instruction manual with step-by-step diagrams and all necessary installation tools are included in the package.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.

2. **Identify Parts:** Match each component to the corresponding labels in the assembly guide.
3. **Follow Instructions:** Assemble the kitchen by following the numbered steps in the provided instruction manual. Pay close attention to the orientation of each piece.
4. **Secure Fasteners:** Ensure all screws and connectors are tightened firmly but do not overtighten to avoid damaging the wood.
5. **Install Anti-Tip Device:** For safety, it is crucial to install the included anti-tip device. Attach the straps to the back of the play kitchen and secure them to a wall stud using the provided hardware. This prevents the unit from tipping over, enhancing safety.

ANTI-TIP DEVICE

Prevents the product from tipping over,
enhancing safety



Image 4.1: Installation of the anti-tip device for enhanced stability.

Assembly typically takes a few hours. If you encounter any difficulties, refer to the troubleshooting section or contact customer support.

5. OPERATING INSTRUCTIONS

The ROBUD Play Kitchen features several interactive elements designed to simulate a real kitchen experience.

5.1. Ice Maker

The integrated ice maker allows for pretend ice dispensing. Place the included ice cubes into the dispenser and press the lever to simulate ice delivery.



Image 5.1: Detail of the functional ice maker.

5.2. Coffee Machine

The coffee machine simulator includes a portafilter and cups. Insert the portafilter, turn the knob, and place a cup underneath to mimic brewing coffee.



Image 5.2: Detail of the coffee machine simulator.

5.3. Oven

The oven features a pull-down door and rotating knobs. Open the door to place play food inside and turn the knobs to simulate temperature settings.



Image 5.3: The oven with its pull-down door.

5.4. Microwave

The microwave oven includes a door that opens and closes, along with rotating knobs to simulate power and time settings for realistic play.

INTERACTIVE FEATURES



Image 5.4: Detail of the microwave oven with control knobs.

5.5. Range Hood

The range hood features a movable slider to mimic ventilation control, adding to the realistic kitchen experience.

INTERACTIVE FEATURES



Image 5.5: Detail of the range hood with its slider control.

5.6. Dual Hob

The dual hob stovetop allows for pretend cooking with pots and pans. The knobs can be turned to simulate heat control.

INTERACTIVE FEATURES



Image 5.6: Detail of the dual hob stovetop.

5.7. Faucet and Sink

The sink area includes a gold-colored faucet with turnable handles, allowing for pretend washing of dishes or play food.

INTERACTIVE FEATURES



Image 5.7: Detail of the faucet and sink area.

5.8. Storage

The play kitchen includes various storage options such as drawers and cabinets for organizing play food and accessories.




INTERACTIVE FEATURES



Oven



Ice Maker

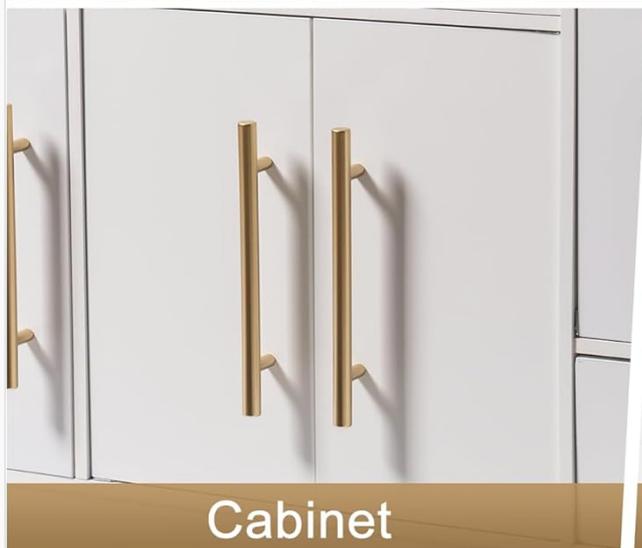

Cabinet



Coffee Machine

Image 5.8: The play kitchen with various storage compartments.

6. MAINTENANCE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Storage:** Store the play kitchen in a dry environment, away from extreme temperatures or direct sunlight, to prevent warping or fading.
- **Damage:** If any part becomes damaged, discontinue use immediately and contact customer support for replacement parts or guidance.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your ROBUD Play Kitchen.

- **Parts do not fit during assembly:** Double-check the part numbers against the assembly manual diagrams.

Ensure components are oriented correctly. Do not force parts together.

- **Missing hardware or damaged parts:** Review the package contents list. If items are missing or damaged upon arrival, contact ROBUD customer support immediately for assistance.
- **Doors or drawers do not close properly:** Check hinges and runners for proper alignment and secure attachment. Ensure no foreign objects are obstructing the movement.
- **Play kitchen feels unstable:** Verify that all assembly screws are tightened. Ensure the anti-tip device is correctly installed and secured to a wall stud.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions	14.2 x 39.4 x 39.8 inches (36 x 100 x 101 cm)
Item Weight	48.5 pounds (22 kg)
Model Number	WCF31
Manufacturer Recommended Age	3 years and up
Material	Wood
Color	White with Gold Accents

PERFECTLY FOR 1-3 KIDS
TO ENJOY TOGETHER

Weight:
22kg/48.5lb

3+



Image 8.1: Product dimensions for the ROBUD Play Kitchen.

9. WARRANTY AND SUPPORT

For warranty information, replacement parts, or any other inquiries, please contact ROBUD customer support. Refer to the contact information provided with your purchase or visit the official ROBUD website.

Manufacturer: ROBUD

Release Date: July 10, 2024