

Peakeep MHP6060

Peakeep MHP6060 Large Display Digital Alarm Clock User Manual

Model: MHP6060 | Brand: Peakeep

1. PRODUCT OVERVIEW

The Peakeep MHP6060 Digital Alarm Clock features a large, easy-to-read display, showing time, date, and day of the week. It includes adjustable brightness, multiple alarm volume settings, automatic Daylight Saving Time (DST) adjustment, a USB charging port, and battery backup for power outages.



Image 1.1: Front view of the Peakeep MHP6060 Digital Alarm Clock, displaying time, day, and date.

2. PACKAGE CONTENTS

- Peakeep MHP6060 Digital Alarm Clock
- Type-C Power Adapter (included)

- User Manual

Video 2.1: Unboxing the Peakeep Digital Alarm Clock, showing the clock, user manual, and power adapter.

3. SETUP

3.1 Powering the Clock

The clock operates via a corded electric connection using the included Type-C adapter. For continuous operation and to retain settings during power outages, install 4 AAA batteries (not included) as a backup.

1. Connect the Type-C power adapter to the 'Type C 5V IN' port on the back of the clock.
2. Plug the adapter into a standard 120V AC power outlet.
3. Open the battery compartment on the back and insert 4 AAA batteries (not included), observing polarity. These batteries will save your settings and trigger the alarm during a power interruption.

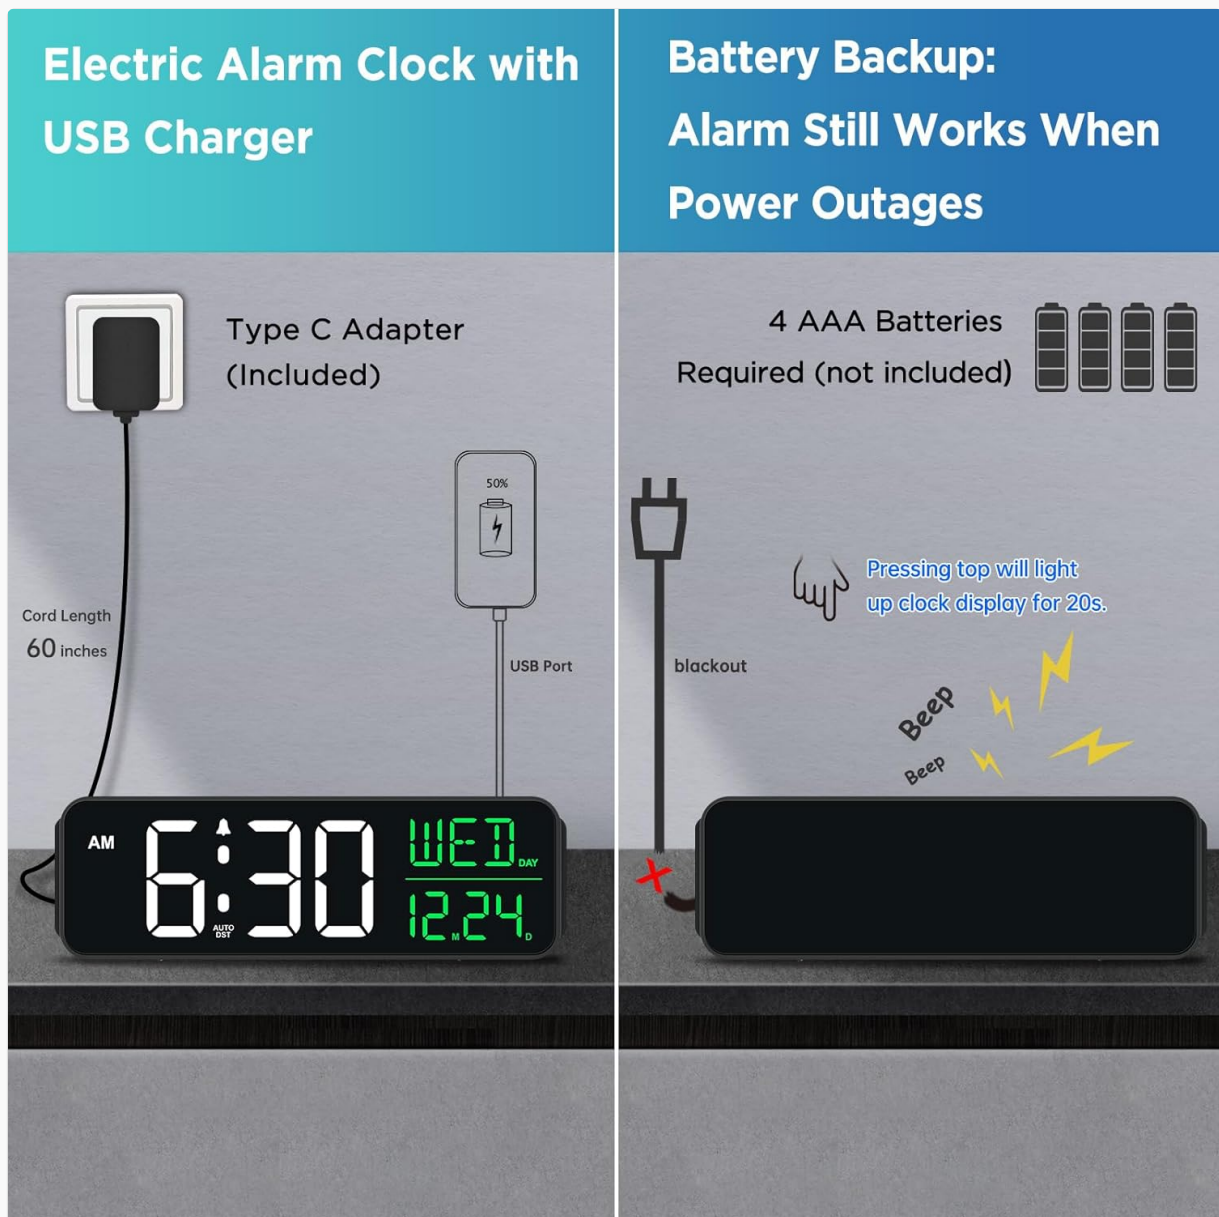


Image 3.1: Illustration of connecting the Type-C power adapter and the battery backup feature.

3.2 Initial Time and Date Setting

Upon first power-up or after a full power loss without battery backup, you may need to set the time and date.

1. **Set Hour:** Hold the 'TIME SET' button for 2 seconds until the hour digits blink. Release the button, then use the '+' or '-' buttons to adjust the hour.
2. **Set Minute:** Press 'TIME SET' again. The minute digits will blink. Use the '+' or '-' buttons to adjust the minutes.
3. **Set Year:** Press 'TIME SET' again. The year digits will blink. Use the '+' or '-' buttons to set the current year (e.g., 2025).
4. **Set Month:** Press 'TIME SET' again. The month digits will blink. Use the '+' or '-' buttons to set the current month.
5. **Set Day:** Press 'TIME SET' again. The day digits will blink. Use the '+' or '-' buttons to set the current day.
6. Press 'TIME SET' one last time to confirm all settings and exit time setting mode. The day of the week will synchronize automatically once the year, month, and day are set.

Video 3.2: Demonstrates setting the time, year, month, and day on the Peakeep Digital Alarm Clock.

4. OPERATING INSTRUCTIONS

4.1 Display Modes (Day/Temperature)

The clock can display either the day of the week or the indoor temperature. Press the 'DAY/TEMP' button on the back to toggle between these two display modes.

4.2 Brightness Adjustment

The display brightness can be adjusted to 5 levels or turned completely off. Press the 'DIMMER' button on the back repeatedly to cycle through the brightness levels (L5 to L1) and off.

6 Customize Brightness, Visible and Comfort



Image 4.1: Visual representation of the 6 customizable brightness settings for the clock display.

4.3 Alarm Setting and Volume

The alarm features 5 adjustable volume levels and a 9-minute snooze function.

1. **Set Alarm Time:** Hold the 'ALARM SET' button for 2 seconds until the alarm hour digits blink. Use the '+' or '-' buttons to set the desired alarm hour. Press 'ALARM SET' again to set the minutes.
2. **Adjust Alarm Volume:** While in alarm setting mode, or when the alarm is sounding, press the 'VOLUME' button to cycle through 5 volume levels (U01 to U05).
3. **Turn Alarm On/Off:** Press the 'ON/OFF' button to activate or deactivate the alarm. An alarm icon will appear on the display when active.
4. **Snooze Function:** When the alarm sounds, press the 'SNOOZE/LIGHT' button on top to activate a 9-minute snooze.
5. **Stop Alarm:** To stop the alarm for the day, press any button on the back of the clock. The alarm will reset for the next day.

Reliable Alarm Definitely Wake You Up

5 Volume Adjustable, Loud Alarm

9-min Snooze



Image 4.2: Depicts the 5 adjustable volume levels for the alarm, catering to different sleep preferences.

4.4 Automatic Daylight Saving Time (DST)

The clock features an automatic DST function, eliminating the need for manual adjustments.

1. Press the 'DST ON/OFF' button on the back to toggle the automatic DST feature. When active, 'AUTO DST' will be displayed.
2. When 'AUTO DST' is enabled, the clock will automatically adjust for Spring Forward and Fall Back time changes.

Eliminate the Hassle of Changing Time Twice A Year

Daylight Saving Time



Image 4.3: Shows how the clock automatically adjusts for Daylight Saving Time changes.

4.5 USB Charging Port

A USB-A output port is located on the back of the clock, allowing you to charge small electronic devices like smartphones or smartwatches.

- Connect your device's USB charging cable to the 'USB OUT' port on the back of the clock.
- Ensure the clock is powered via the Type-C adapter for the USB charging port to function.

5. MAINTENANCE

- Clean the clock with a soft, dry cloth. Avoid abrasive cleaners or solvents.
- Keep the clock away from direct sunlight, extreme temperatures, and high humidity.
- Ensure proper ventilation around the clock to prevent overheating.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Clock display is blank or dim.	No power, power outage, or brightness set to OFF.	Check power connection. Ensure batteries are installed for backup. Press 'DIMMER' button to adjust brightness.
Alarm does not sound.	Alarm is not activated or volume is too low.	Press 'ON/OFF' to activate alarm. Adjust 'VOLUME' to a higher setting.
Clock does not adjust for DST automatically.	Auto DST feature is turned off.	Press 'DST ON/OFF' to enable the automatic DST feature. Ensure the year, month, and day are correctly set.
USB charging port not working.	Clock is not powered by the Type-C adapter.	Ensure the clock is properly connected to the power outlet via the Type-C adapter.




7. SPECIFICATIONS

- **Brand:** Peakeep
- **Model Number:** MHP6060
- **Display Type:** Digital LED
- **Power Source:** Corded Electric (Type-C adapter included)
- **Battery Backup:** 4 AAA batteries (not included)
- **Product Dimensions:** 9"W x 2.6"H
- **Special Features:** Large Display with Date Day of Week, Auto DST, 6 Dimmer levels (including OFF), 5 Alarm Volume levels, 1 USB-A Charging Port
- **Material:** Plastic
- **Input Voltage:** 120 Volts (AC)

8. WARRANTY AND SUPPORT

For product support or warranty inquiries, please contact Peakeep customer service at: sales@us-myhome.com.

Related Documents - MHP6060

<div><div>PEAKEEP</div><div>Digital Clock, Alarm Clock (Model: MHP6010-DC)</div><div></div><div>QUESTIONS? Contact: sales@my-mphome.com</div></div>	<p>Peakeep MHP6010-DC Digital Alarm Clock User Manual</p> <p>User manual for the Peakeep MHP6010-DC digital alarm clock. Covers setup, time/alarm setting, snooze, dimmer, USB port, troubleshooting, and warranty information. Features include a large display, adjustable alarm volume, and battery backup.</p>
<div><div>PEAKEEP</div><div>Battery Operated Digital Clock, Alarm Clock (Model: MHP6010-B)</div><div></div><div>QUESTIONS? Contact: sales@my-mphome.com</div></div>	<p>Peakeep MHP6010-B Battery Operated Digital Alarm Clock User Manual</p> <p>This manual provides instructions for setting up and using the Peakeep MHP6010-B Battery Operated Digital Alarm Clock, including features like voice activation, adjustable brightness, and alarm volume.</p>
<div><div>PEAKEEP Night Light Digital Alarm Clock (Model: MHP3235)</div><div><div>WARNING/NOTICE</div><div><ol style="list-style-type: none">1. Before using the battery compartment cover, please check the battery type and voltage. The battery must be the same as the one in the battery compartment cover. Do not use the battery compartment cover with the wrong battery type and voltage.2. Do not use the battery compartment cover with the wrong battery type and voltage. The battery must be the same as the one in the battery compartment cover.3. Do not use the battery compartment cover with the wrong battery type and voltage. The battery must be the same as the one in the battery compartment cover.</div><div><div>SAFETY</div>1. Before using the battery compartment cover, please check the battery type and voltage. The battery must be the same as the one in the battery compartment cover. Do not use the battery compartment cover with the wrong battery type and voltage.2. Do not use the battery compartment cover with the wrong battery type and voltage. The battery must be the same as the one in the battery compartment cover.3. Do not use the battery compartment cover with the wrong battery type and voltage. The battery must be the same as the one in the battery compartment cover.</div><div><div>REPAIR/MAINTENANCE</div>1. Before using the battery compartment cover, please check the battery type and voltage. The battery must be the same as the one in the battery compartment cover. Do not use the battery compartment cover with the wrong battery type and voltage.2. Do not use the battery compartment cover with the wrong battery type and voltage. The battery must be the same as the one in the battery compartment cover.3. Do not use the battery compartment cover with the wrong battery type and voltage. The battery must be the same as the one in the battery compartment cover.</div></div></div>	<p>PEAKEEP Night Light Digital Alarm Clock User Manual MHP3235</p> <p>Comprehensive user manual for the PEAKEEP MHP3235 Night Light Digital Alarm Clock, covering setup, time/date setting, alarm functions, snooze, volume, DST, display dimmer, night light, USB charging, time format conversion, safety, maintenance, and troubleshooting.</p>
<div><div>PEAKEEP</div><div>Digital Clock, Alarm Clock (Model: MHP6010-DC)</div><div></div><div>QUESTIONS? Contact: sales@my-mphome.com</div></div>	<p>Peakeep MHP6010-DC Digital Alarm Clock User Manual</p> <p>User manual for the Peakeep MHP6010-DC digital alarm clock. Covers setup, time/alarm setting, snooze, dimmer, USB port, troubleshooting, and warranty information. Features include a large display, adjustable alarm volume, and battery backup.</p>

QUESTIONS? Contact: sales@us-myelhome.com

This manual provides instructions for setting up and using the Peakeep MHP6010-B Battery Operated Digital Alarm Clock, including features like voice activation, adjustable brightness, and alarm volume.

- To save your adjustments, press and release the "SET" button to adjust the rest preference. The preference set order is as follows:
- CALL SEAR SEAR
 - CALL SEAR MORTN
 - CALL SEAR SEAT
 - CLUSE HCLM

Comprehensive user manual for the PEAKEEP MHP3235 Night Light Digital Alarm Clock, covering setup, time/date setting, alarm functions, snooze, volume, DST, display dimmer, night light, USB charging, time format conversion, safety, maintenance, and troubleshooting.