

[Manuals.plus](#) /

> [OPPO](#) /

> Oppo Reno 12 5G CPH2625 User Manual

OPPO CPH2625

Oppo Reno 12 5G CPH2625 User Manual

Model: CPH2625

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Oppo Reno 12 5G CPH2625 smartphone. Please read this manual thoroughly before operating the device to ensure optimal performance and to prevent damage.



Figure 1: Oppo Reno 12 5G CPH2625. This image displays the front of the phone with its vibrant display and a punch-hole camera, alongside the rear panel featuring a triple camera setup and the OPPO logo.

2. SETUP

2.1. SIM Card Installation

The Oppo Reno 12 5G CPH2625 supports dual SIM cards. Follow these steps to install your SIM cards:

1. Locate the SIM card tray on the side of the device.
2. Insert the SIM ejector tool into the small hole next to the tray and push gently until the tray pops out.
3. Place your Nano-SIM cards into the designated slots on the tray, ensuring the gold contacts face downwards.
4. Carefully reinsert the tray into the device until it is flush with the side.

2.2. Initial Power On and Setup Wizard

Press and hold the Power button until the OPPO logo appears. Follow the on-screen instructions to complete the initial setup, including language selection, Wi-Fi connection, Google account setup, and security settings.

2.3. Battery Charging

Connect the USB Type-C cable to the phone's charging port and the other end to a compatible power adapter. Plug the adapter into a power outlet. The battery indicator will show charging status. For optimal battery life, use the original charger and cable.

3. OPERATING YOUR DEVICE

3.1. Basic Navigation

- **Power Button:** Press to turn the screen on/off. Press and hold to power off or restart.
- **Volume Buttons:** Adjust media volume, call volume, and ringtone volume.
- **Touchscreen Gestures:**
 - *Tap:* Select an item or open an application.
 - *Swipe:* Scroll through screens or lists.
 - *Pinch:* Zoom in or out on images and web pages.

3.2. Calls and Messaging

To make a call, open the Phone app and dial the number or select a contact. To send a message, open the Messages app, tap to compose a new message, enter the recipient and your text.

3.3. Camera Usage

Open the Camera app. Tap the shutter button to take a photo. Swipe left or right to switch between modes (e.g., Photo, Video, Portrait). Tap on the screen to focus on a specific area.

3.4. Connectivity

- **Wi-Fi:** Go to Settings > Wi-Fi to connect to available networks.
- **Bluetooth:** Go to Settings > Bluetooth to pair with other Bluetooth devices.
- **Mobile Data:** Ensure mobile data is enabled in Quick Settings or Settings > Mobile Network for internet access via your SIM card.

4. MAINTENANCE

4.1. Cleaning Your Device

Use a soft, lint-free cloth to clean the screen and body of the phone. Avoid using harsh chemicals or abrasive materials. Do not expose the device to excessive moisture.

4.2. Software Updates

Regularly check for software updates to ensure your device has the latest features and security patches. Go to Settings > About device > Up to date to check for updates.

4.3. Battery Care

To prolong battery life, avoid extreme temperatures. Do not let the battery completely drain frequently. Unplug the charger once the battery is fully charged.

4.4. Storage Management

Periodically clear cache, delete unnecessary files, and uninstall unused applications to free up storage space and maintain optimal performance. Go to Settings > Storage to manage your device's storage.

5. TROUBLESHOOTING

Problem	Solution
Device not turning on	Ensure the battery is charged. Press and hold the Power button for at least 10 seconds to force restart.
Poor network signal	Check SIM card installation. Move to an area with better network coverage. Restart the device.
Applications crashing	Clear the app's cache (Settings > Apps > [App Name] > Storage > Clear cache). Update the app. If issues persist, reinstall the app.
Device running slow	Close background apps. Clear storage space. Restart the device.

5.1. Factory Reset

If troubleshooting steps do not resolve the issue, a factory reset may be necessary.**Warning:** This will erase all data on your device. Back up important data before proceeding. Go to Settings > System settings > Back up and reset > Reset phone > Erase all data.

6. SPECIFICATIONS

Feature	Detail
Brand	OPPO
Model	CPH2625
Memory Storage Capacity	12 GB RAM, 512 GB Internal Storage (as per product title)
SIM Type	Dual SIM
Wireless Service Provider	Unlocked
Country/Region of Origin	China

7. WARRANTY AND SUPPORT

Your Oppo Reno 12 5G CPH2625 comes with a manufacturer's warranty. Please refer to the warranty card included in the product packaging for detailed terms and conditions. For technical support, service, or further inquiries, please visit the official OPPO website or contact their customer service.

Return Policy: This product typically has a 15-day return/replacement policy from the date of purchase, as per seller terms. Please verify with your retailer for specific return conditions.

© 2024 OPPO. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question