

## Sheawasy C1-W

# Sheawasy Digital Camera C1-W User Manual

Model: C1-W

## 1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your Sheawasy Digital Camera C1-W. Designed for ease of use, this compact camera captures 4K videos and high-resolution 64MP photos, making it suitable for travel, vlogging, and everyday photography. Please read this manual thoroughly before using your camera to ensure proper function and longevity.

## 2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Sheawasy Digital Camera C1-W x 1
- 32GB Micro SD Memory Card (pre-installed) x 1
- Rechargeable Lithium-Ion Battery x 2
- USB Data Cable x 1
- Lanyard x 1

# Great gift idea for beginners!



## What you will receive:

- Digital Camera x 1
- 32GB Memory card(installed) x 1
- USB data cable x 1
- Lanyard x 1

Image: Sheawasy Digital Camera C1-W with its accessories.

### 3. CAMERA COMPONENTS

---

Familiarize yourself with the camera's physical components:



Image: Front and rear view of the Sheawasy Digital Camera C1-W.

- **Lens:** Main optical component for capturing images.
- **Built-in Flash:** Provides illumination in low-light conditions.
- **Power Button:** Turns the camera on or off.
- **Shutter Button:** Press halfway to focus, fully to capture a photo or start/stop video recording.
- **Zoom Buttons (+/-):** Adjusts digital zoom.
- **OK/Menu Button:** Confirms selections and accesses the camera menu.
- **Mode Button:** Switches between photo, video, and playback modes.
- **Playback Button:** Enters playback mode to view captured media.
- **Music Button:** Activates the music playback function.
- **2.8-inch LCD Display:** For framing shots, viewing menus, and playing back media.
- **USB Port:** For charging and data transfer.
- **Micro SD Card Slot:** For inserting the memory card.
- **Battery Compartment:** Holds the rechargeable battery.
- **Tripod Mount:** Standard thread for attaching to a tripod.
- **3.5mm Audio Jack:** For connecting headphones for music playback.

## 4. SETUP

---

### 4.1. Inserting the Battery

1. Open the battery compartment cover on the bottom of the camera.
2. Insert the rechargeable battery, ensuring the contacts align correctly.
3. Close the battery compartment cover until it clicks securely.
4. Charge the battery fully before first use using the provided USB cable.

### 4.2. Inserting the Memory Card

1. Locate the Micro SD card slot, typically on the side or bottom of the camera.
2. Insert the 32GB Micro SD card with the gold contacts facing the camera's front until it clicks into place.
3. To remove, gently press the card inward until it springs out.

## 5. BASIC OPERATION

---

### 5.1. Power On/Off

Press and hold the **Power Button** for a few seconds to turn the camera on or off.

### 5.2. Taking Photos

1. Ensure the camera is in photo mode (indicated on the display). If not, press the **Mode Button** to switch.
2. Frame your shot using the 2.8-inch LCD display.
3. Press the **Shutter Button** halfway down to activate autofocus. The focus indicator will confirm focus.
4. Press the **Shutter Button** fully down to capture the photo.

### 5.3. Recording Videos

1. Press the **Mode Button** to switch to video recording mode. A video icon will appear on the screen.
2. Press the **Shutter Button** to start recording. A red 'REC' indicator will appear.
3. Press the **Shutter Button** again to stop recording.





Image: Camera in use, demonstrating 4K video and 64MP photo capture.

#### 5.4. Zoom Function

Use the **Zoom +** and **Zoom -** buttons to digitally zoom in or out on your subject. The camera features up to 16x digital zoom.

#### 5.5. Flash Settings

Access flash settings through the camera menu to select between Auto, On/Fill, or Off modes, depending on lighting conditions.

### 6. ADVANCED FEATURES

#### 6.1. LED Fill Light

The camera includes a built-in LED fill light to enhance brightness in dimly lit environments. Activate this feature via the camera's menu settings.



## LED Fill light

With the built-in fill light, you can capture stunning photos and videos day or night.

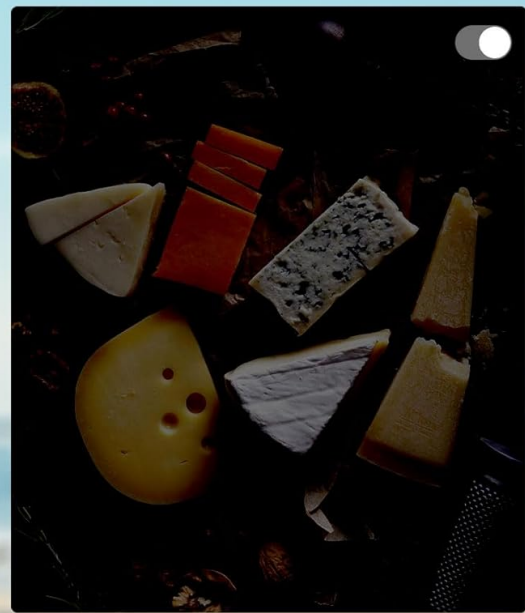


Image: Effect of the LED fill light on image brightness.

### 6.2. Filter Effects

The camera offers various filter effects to add creative touches to your photos. These can be selected from the camera's menu before capturing an image.

### 6.3. Self-Timer and Continuous Shooting

Set a self-timer for delayed shots or enable continuous shooting to capture a series of photos rapidly. Both options are available in the camera's menu.





Image: Demonstrations of autofocus, digital zoom, and various filter effects.

#### 6.4. Music Playback Function

The camera can play MP3 audio files. Transfer music files to the camera's memory card via a computer. Connect headphones to the 3.5mm audio jack and press the **Music Button** to access playback controls.

# Music Function

- Dedicated music key for one-touch music playback
- 3.5mm headphone jack for private listening

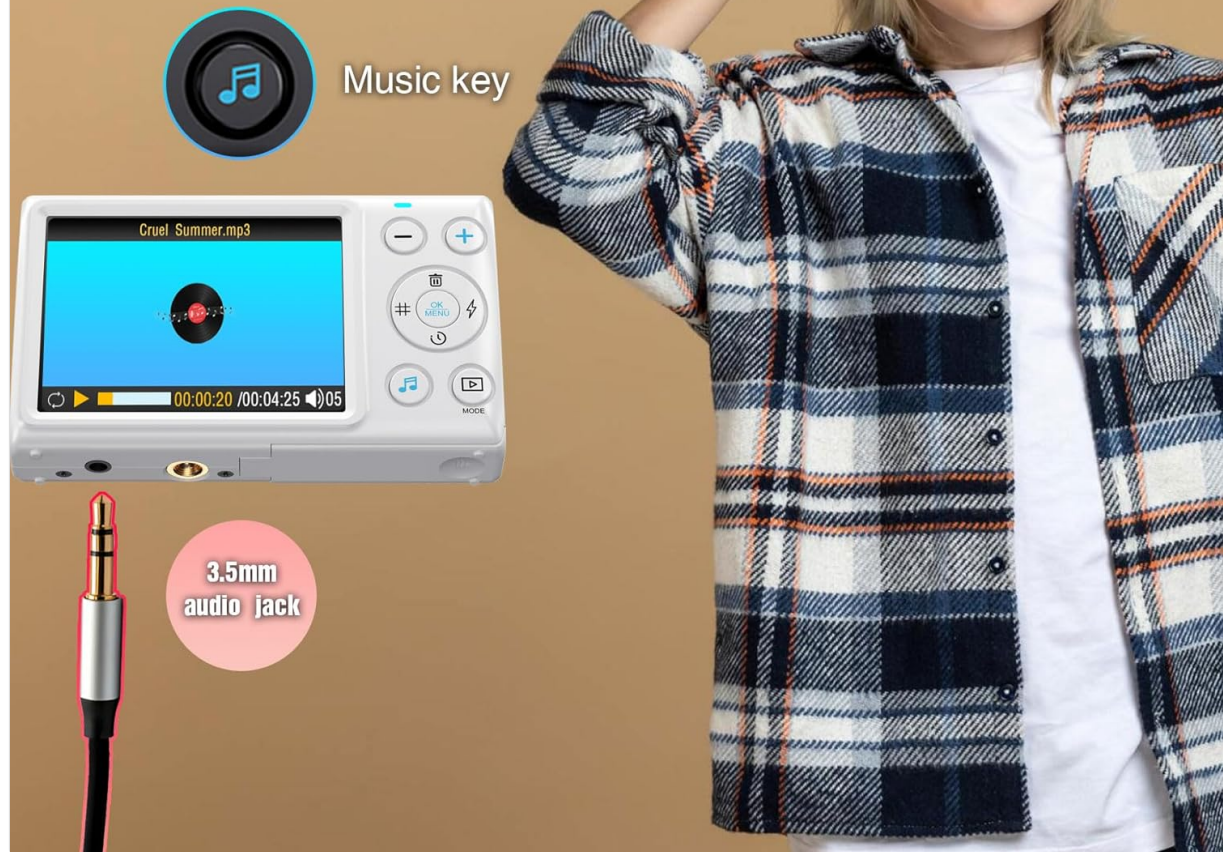


Image: Using the camera's music playback feature with headphones.

## 7. CONNECTING TO A COMPUTER

To transfer photos and videos to your computer:

1. Ensure the camera is powered off.
2. Connect the camera to your computer using the provided USB data cable.
3. Power on the camera. It should appear as a removable disk or mass storage device on your computer.
4. Open the camera's folder to access and transfer your files.

## 8. PLAYBACK

To view your captured photos and videos on the camera:

1. Press the **Playback Button** to enter playback mode.
2. Use the navigation buttons (often the zoom +/- or directional buttons) to scroll through your media.
3. Press the **OK Button** to view a photo or play a video.



## 9. MAINTENANCE

- **Cleaning the Lens:** Use a soft, lint-free cloth specifically designed for camera lenses. Avoid harsh chemicals.
- **Cleaning the Body:** Wipe the camera body with a soft, dry cloth.
- **Battery Care:** Store batteries in a cool, dry place. Do not expose them to extreme temperatures. Remove the battery if the camera will not be used for an extended period.
- **Storage:** Store the camera in a dry, dust-free environment, away from direct sunlight and moisture.

## 10. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is depleted or incorrectly inserted.	Charge the battery fully. Reinsert the battery correctly.
Cannot take photos/videos.	Memory card is full, locked, or not inserted.	Check memory card status. Ensure it is unlocked and has free space. Reinsert the card.
Images are blurry.	Camera shake, subject too close, or lens is dirty.	Hold the camera steady. Ensure proper distance to subject. Clean the lens.
Poor audio quality in videos.	Microphone obstructed or environmental noise.	Ensure microphone is clear. Record in quieter environments.
Camera screen appears blurry during framing.	Low refresh rate of the LCD screen during live view.	This is a characteristic of the display. Captured photos and videos will appear clear upon review.

## 11. SPECIFICATIONS


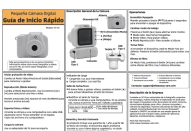

Feature	Specification
Model Name	C1-W
Maximum Webcam Image Resolution	64 MP
Effective Still Resolution	56 MP
Video Resolution	2160p (4K)
Frame Rate	30 FPS
Digital Zoom	16x
Screen Size	2.8 Inches
Display Type	LCD




Feature	Specification
Memory Storage Capacity	32 GB (Micro SD)
Battery Type	Lithium Ion / Lithium Polymer
Connectivity Technology	USB
Image Stabilization	Digital
Auto Focus Technology	Contrast Detection
Supported File Format	MP4 (Video), JPEG (Image), MP3 (Audio)
Item Weight	111 Grams
Color	White
Water Resistance Level	Not Water Resistant

## 12. WARRANTY AND SUPPORT

The Sheawasy Digital Camera C1-W comes with a **1-year warranty** from the date of purchase. For warranty claims, technical support, or any inquiries, please refer to the contact information provided with your product packaging or visit the official Sheawasy website.

### Related Documents - C1-W

	<p><a href="#">Mini Cámara Digital GL-X2: Guía de Inicio Rápido Sheawasy</a></p> <p>Guía de inicio rápido para la cámara digital Sheawasy GL-X2. Aprenda a encender, cambiar modos, tomar fotos, grabar video, reproducir y exportar archivos. Incluye información sobre carga, garantía y la empresa Sheawasy.</p>
	<p><a href="#">Sheawasy FC-4K Digital Camera Quick Start Guide</a></p> <p>A concise guide to operating the Sheawasy FC-4K digital camera, covering setup, photo and video capture, file management, and warranty information.</p>
	<p><a href="#">HJD-02 Mini Digital Camera Quick Start Guide   Sheawasy</a></p> <p>Get started quickly with your HJD-02 Mini Digital Camera. This guide covers setup, operations, taking photos and videos, transferring files, FAQs, and warranty information from Sheawasy.</p>

	<p><a href="#">Control Remoto Inteligente Sheawasy: Manual de Usuario y Características</a></p> <p>Guía completa del Control Remoto Inteligente Sheawasy. Aprenda a conectarlo vía Bluetooth, usarlo como disparador de cámara y controlador multimedia. Incluye especificaciones técnicas, compatibilidad y detalles de soporte.</p>
	<p><a href="#">Sheawasy OI-4000 Mini Digital Camera Quick Start Guide</a></p> <p>Learn how to use your Sheawasy OI-4000 mini digital camera with this quick start guide. Covers basic operations, charging, photo taking, and exporting files.</p>
	<p><a href="#">HJD-02 4K Mini Digital Camera Quick Start Guide</a></p> <p>Quick start guide for the HJD-02 4K Mini Digital Camera by Sheawasy, covering setup, operation, photography, video recording, playback, and troubleshooting.</p>