

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ALLIMITY](#) /

› [Allimity R14-CE Replacement Remote Control User Manual for Carrier AC Air Conditioners](#)

ALLIMITY R14-CE

Allimity R14-CE Replacement Remote Control User Manual

Brand: ALLIMITY

Model: R14-CE (Compatible with R14/CE, R14E, R14CE, R14A/E, R14A)

1. INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your Allimity R14-CE replacement infrared remote control. This remote is designed to be compatible with various Carrier AC Air Conditioner models. Please read this manual thoroughly before using the remote control to ensure optimal performance and longevity.

2. PRODUCT OVERVIEW

The Allimity R14-CE is an infrared replacement remote control for Carrier AC Air Conditioners. It features a clear display and ergonomically designed buttons for easy control of your air conditioning unit's functions.



Figure 2.1: The Allimity R14-CE remote control in use with a compatible Carrier AC unit. This image illustrates the remote's design and its intended application.

PRODUCT SIZE

6.61in / 16.8cm

2.52in / 6.4cm

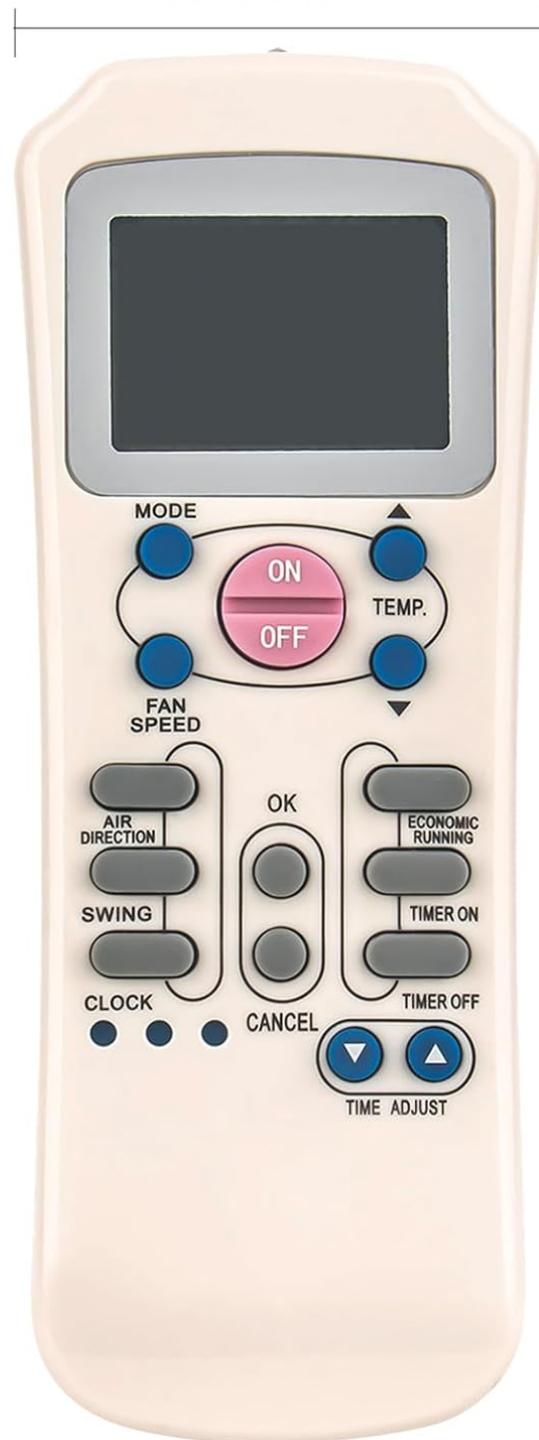


Figure 2.2: Dimensions of the Allimity R14-CE remote control. The remote measures approximately 6.61 inches (16.8 cm) in length and 2.52 inches (6.4 cm) in width.

3. SETUP

3.1 Battery Installation

The remote control requires two AAA alkaline batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.

4. Slide the battery compartment cover back into place until it clicks securely.

Important: Always use new alkaline batteries. Do not mix old and new batteries, or different types of batteries. Remove batteries if the remote will not be used for an extended period.



Figure 3.1: Open battery compartment of the remote control. Insert two AAA batteries according to polarity markings.

4. OPERATION

4.1 Basic Usage

The Allimity R14-CE is an infrared remote control. For proper operation, ensure a clear line of sight between the remote control and the infrared sensor on your Carrier AC Air Conditioner unit. Avoid any obstacles that may block the signal.

- **Power On/Off:** Press the **ON** or **OFF** button to power the AC unit on or off.
- **Temperature Adjustment:** Use the **TEMP ▲** and **TEMP ▼** buttons to increase or decrease the desired temperature.
- **Mode Selection:** Press the **MODE** button to cycle through available operating modes (e.g., Cool, Heat, Fan, Dry, Auto).
- **Fan Speed:** Use the **FAN SPEED** button to adjust the fan's intensity.
- **Air Direction/Swing:** The **AIR DIRECTION** and **SWING** buttons control the airflow direction and oscillation.
- **Timer Functions:** Use **TIMER ON** and **TIMER OFF** buttons to set scheduled operation times.
- **Clock:** The **CLOCK** button allows you to set the current time on the remote's display.
- **Economic Running:** Activates energy-saving modes if supported by your AC unit.
- **OK/Cancel:** Used for confirming or canceling settings, particularly for timer functions.
- **Time Adjust:** Used in conjunction with timer or clock settings.

Note: Specific functions and their availability may vary depending on your Carrier AC Air Conditioner model. Refer to your AC unit's original manual for detailed explanations of each function.

5. MAINTENANCE

5.1 Cleaning

To clean the remote control, wipe it gently with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these can damage the remote's surface or internal components.

5.2 Battery Replacement

Replace the batteries when the remote's response becomes sluggish or the display fades. Follow the battery installation steps outlined in Section 3.1. Always dispose of used batteries responsibly according to local regulations.

5.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

6. TROUBLESHOOTING

6.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are correctly installed with the correct polarity and are not depleted. Replace with new AAA alkaline batteries if necessary.
- **Line of Sight:** Make sure there are no obstructions between the remote control and the AC unit's infrared sensor.
- **Distance:** Ensure you are within the effective operating range of the AC unit's sensor.
- **Compatibility:** Verify that your AC unit model is listed as compatible (R14-CE, R14/CE, R14E, R14CE, R14A/E, R14A). If your model is not listed, this remote may not be compatible.
- **AC Unit Power:** Confirm that your AC unit is powered on and functioning correctly.

If the issue persists after performing these checks, please contact customer support for further assistance.

7. SPECIFICATIONS

Feature	Specification
Brand	ALLIMITY
Model Number	ZCM-M-1730-R14-CE (Primary compatible model: R14-CE)
Compatible Models	R14-CE, R14/CE, R14E, R14CE, R14A/E, R14A (for Carrier AC Air Conditioners)
Product Dimensions	5 x 2 x 0.6 inches (12.7 x 5.08 x 1.52 cm)
Item Weight	1 ounce (28.35 grams)
Color	BLACK
Special Feature	Ergonomic design
Max Number of Supported Devices	1
Power Source	2 x AAA Alkaline Batteries (not included)

8. WARRANTY AND SUPPORT

For any questions regarding the Allimity R14-CE replacement remote control, or if you encounter issues not covered in this manual, please contact ALLIMITY customer support. Please have your product model number and purchase information ready when contacting support.

Specific warranty details may vary. Refer to your purchase documentation or contact the seller for information on warranty coverage.