

ALLIMITY AA59-00607A

ALLIMITY AA59-00607A Replacement Remote Control User Manual

For Samsung HD LED TVs

INTRODUCTION

This manual provides instructions for the ALLIMITY AA59-00607A replacement infrared remote control. It is designed to operate various Samsung HD LED TV models. Please read this manual carefully to ensure proper setup and operation of your new remote control.

SETUP

Battery Installation

The remote control requires two AAA alkaline batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Figure 1: Battery compartment with batteries. Ensure correct polarity when inserting batteries.

Basic Usage

This remote control is an infrared (IR) type. For optimal performance, ensure a clear line of sight between the remote control and the IR sensor on your television.

- **Power Button:** Press to turn the TV on or off.
- **Number Buttons (0-9):** Use to directly enter channel numbers.
- **Volume Up/Down (+/-):** Adjust the sound volume.
- **Channel Up/Down (CH List):** Change TV channels sequentially.
- **Mute:** Mute or unmute the TV sound.
- **Source:** Select input sources (e.g., HDMI, AV).
- **Menu:** Access the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right, Enter):** Navigate through TV menus and selections.
- **Return/Exit:** Go back to the previous screen or exit a menu.

Aiming the Remote Control

Always point the remote control directly towards the infrared sensor on your television. Obstacles between the remote and the TV sensor will block the signal and prevent the remote from functioning correctly.



Figure 2: The remote control in use with a compatible Samsung TV.

COMPATIBLE MODELS

This ALLIMITY AA59-00607A replacement remote control is compatible with a wide range of Samsung HD LED TV models, including but not limited to:

- UA22ES4003, UA22ES4003R, UA22ES4003RLXL

- UA22ES5000, UA22ES5000R, UA22ES5000RLXL, UA22ES5000RMSG, UA22ES5000RMXL
- UA22ES5005, UA22ES5005R, UA22ES5005RLSG, UA22ES5005RLXL, UA22ES5005RMXL
- UA26EH4000, UA26EH4000R, UA26EH4000RLXL, UA26EH4000RMSG, UA26EH4000RMXL, UA26EH4000RXXL
- UA32EH4000, UA32EH4000R, UA32EH4000RLXL, UA32EH4000RMSG, UA32EH4000RMXL
- UA32EH4003, UA32EH4003R, UA32EH4003RLSG, UA32EH4003RLXL, UA32EH4003RMSG, UA32EH4003RMXL
- UA32EH4030
- UA32EH5000, UA32EH5000R, UA32EH5000RLXL, UA32EH5000RXXL
- UA32EH5030
- UA32EH5080
- UA32FH4003, UA32FH4003R, UA32FH4003RMXL
- UA39EH5003, UA39EH5003R, UA39EH5003RLXL
- UA40EH5000, UA40EH5000R, UA40EH5000RLSG, UA40EH5000RLXL
- UA40EH5030
- UA40EH5080
- UA42EH5000
- UA46EH5000, UA46EH5000R, UA46EH5000RMXL

If your specific TV model is not listed, please verify compatibility with the seller before purchase.

SPECIFICATIONS

Feature	Detail
Model Number	AA59-00607A (ZCM-AA59-00607A-UA)
Brand	ALLIMITY
Compatible Devices	Samsung HD LED Televisions
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Alkaline Batteries (not included)
Product Dimensions	5 x 2 x 0.6 inches (approximately 18 x 4.5 cm)
Item Weight	1 ounce
Special Feature	Ergonomic design
Color	Black



7in/ 18cm



TROUBLESHOOTING

- **Remote not responding:**

- Ensure new AAA alkaline batteries are correctly installed with proper polarity.
- Check if there are any obstacles between the remote control and the TV's IR sensor.
- Verify that the remote is pointed directly at the TV's IR sensor.
- Test the remote with another compatible TV if available to rule out a TV issue.

- **Some buttons not working:**

- This remote is a direct replacement. If specific functions are not working, ensure your TV model is fully compatible with the original AA59-00607A remote.
- Clean the remote's surface and buttons to ensure no debris is interfering with button presses.

MAINTENANCE

To ensure the longevity and proper functioning of your remote control:

- Keep the remote control clean by wiping it with a soft, dry cloth.
- Avoid exposing the remote to extreme temperatures, humidity, or direct sunlight.
- Do not drop the remote control or subject it to strong impacts.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

SUPPORT

For further assistance or if you encounter issues not covered in this manual, please contact the seller or manufacturer directly. Provide your product model number (AA59-00607A) and a detailed description of the problem for efficient support.

© 2024 ALLIMITY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question