

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Beko](#) /
- › [Beko CEG7304X Automatic Coffee Machine User Manual](#)

Beko CEG7304X

Beko CEG7304X Automatic Coffee Machine User Manual

Model: CEG7304X | Brand: Beko

1. INTRODUCTION

This user manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Beko CEG7304X Automatic Coffee Machine. Please read this manual thoroughly before using the appliance and keep it for future reference.

2. SAFETY INSTRUCTIONS

- Always ensure the appliance is unplugged before cleaning or maintenance.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children.
- Use only cold, fresh water in the water tank.
- Do not operate the appliance if it has a damaged cord or plug, or if it malfunctions or has been damaged in any way.
- Place the appliance on a stable, flat, heat-resistant surface.
- Avoid contact with hot surfaces, especially the coffee spout and steam wand.

3. PRODUCT OVERVIEW

The Beko CEG7304X is an automatic bean-to-cup coffee machine designed to deliver barista-quality coffee at home. It features a 19-bar pressure system, an integrated grinder with 13 grind settings, and an intuitive LED touch control panel.



Figure 3.1: Front view of the Beko CEG7304X coffee machine, showing the control panel, coffee spouts, and milk frother with two cups of espresso.



Figure 3.2: Front-right perspective of the Beko CEG7304X coffee machine, highlighting its sleek design and accessible controls.



Figure 3.3: Side view of the Beko CEG7304X coffee machine, showing the water tank on the right side.



Figure 3.4: Rear view of the Beko CEG7304X coffee machine, illustrating its compact form factor.



Figure 3.5: Top-down view of the Beko CEG7304X coffee machine, showing the bean hopper and cup warming tray.

4. SETUP

4.1 Unpacking

1. Carefully remove the coffee machine from its packaging.
2. Remove all packing materials, including protective films and stickers.
3. Check for any damage during transit. If damaged, do not use and contact customer support.

4.2 Initial Cleaning

- Wash the water tank, milk container, drip tray, and coffee grounds container with warm soapy water. Rinse thoroughly and dry.
- Wipe the exterior of the machine with a damp cloth.

4.3 Filling the Water Tank

1. Remove the water tank from the machine.
2. Fill the tank with fresh, cold water up to the MAX indicator.
3. Place the water tank back into the machine securely.

4.4 Filling the Bean Hopper

1. Open the lid of the bean hopper located on top of the machine.
2. Pour fresh coffee beans into the hopper. Do not overfill.
3. Close the lid to maintain bean freshness.

4.5 First Use Cycle

Before making your first coffee, perform a rinsing cycle to prime the system and clean internal components.

1. Ensure the water tank is filled.
2. Place a large container under the coffee spouts.
3. Turn on the machine. The machine will automatically perform a rinsing cycle.
4. Wait for the machine to complete the cycle and indicate it is ready for use.

5. OPERATING INSTRUCTIONS

5.1 Adjusting Grind Settings

The integrated grinder offers 13 settings. Adjust the grind fineness according to your preference and coffee type. Finer grind for stronger espresso, coarser for lighter coffee.

- Locate the grind adjustment dial inside the bean hopper.
- Adjust the dial only when the grinder is operating to prevent damage.

5.2 Making Coffee

1. Ensure the water tank is filled and the bean hopper contains coffee beans.
2. Place a cup under the coffee spouts.
3. On the LED touch control panel, select your desired coffee beverage (e.g., Espresso, Double Espresso, Americano, Lungo).
4. The machine will automatically grind the beans, brew, and dispense the coffee.

5.3 Using the Milk Frother (for models with milk container)

For beverages like Cappuccino or Latte Macchiato, use the integrated milk frother.

1. Fill the milk container with cold milk.
2. Attach the milk container to the machine as per the diagram.
3. Place a cup under the milk spout and coffee spouts.
4. Select a milk-based beverage from the LED touch control panel (e.g., Cappuccino, Latte Macchiato).
5. The machine will automatically froth the milk and dispense it, followed by the coffee.



Figure 5.1: The Beko CEG7304X dispensing frothed milk, demonstrating the automatic milk system.

6. MAINTENANCE

6.1 Daily Cleaning

- Empty and rinse the drip tray and coffee grounds container daily.
- Wipe the coffee spouts and milk frother (if applicable) with a damp cloth after each use.
- If using the milk frother, perform the milk system cleaning cycle after each use to prevent blockages.

6.2 Weekly Cleaning

- Remove the brewing unit (infuser group) and rinse it thoroughly under running water. Allow it to air dry before reinserting.

- Clean the water tank and bean hopper.

6.3 Descaling

The machine will indicate when descaling is required. Use a descaling solution specifically designed for coffee machines. Follow the instructions provided with the descaling agent.

1. Empty the water tank and fill it with the descaling solution as instructed by the descaler manufacturer.
2. Place a large container under the coffee spouts.
3. Initiate the descaling program via the control panel.
4. After the descaling cycle, rinse the water tank and perform several rinsing cycles with fresh water to remove any descaler residue.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No coffee dispensed.	Water tank empty; coffee beans empty; brewing unit clogged.	Fill water tank; fill bean hopper; clean brewing unit.
Coffee is too weak.	Grind setting too coarse; insufficient coffee dose.	Adjust grind to a finer setting; check coffee intensity settings.
Milk not frothing properly.	Milk container or frother clogged; milk not cold enough.	Clean milk system thoroughly; use cold milk.
Machine leaks water.	Water tank not seated correctly; drip tray full.	Ensure water tank is properly inserted; empty drip tray.

If the problem persists after attempting these solutions, please contact Beko customer support.

8. SPECIFICATIONS

Brand: Beko

Model Number: CEG7304X

Color: Inox (Stainless Steel look)

Dimensions (L x W x H): 27.5 x 40.5 x 34 cm

Weight: 9.9 kg

Water Tank Capacity: 2 Liters

Power: 1350 Watts

Voltage: 220 Volts

Material: Plastic

Pressure: 19 Bar

Bean Hopper Capacity: 250 g

Special Features: Mechanical cup lamp, Automatic pre-infusion, Milk frother, Digital touch control panel, Integrated coffee grinder.

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This Beko CEG7304X coffee machine comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions. Spare parts availability is indicated for 2 years.

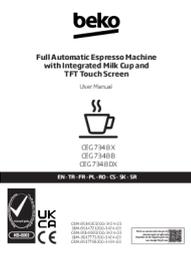
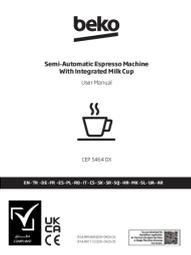
9.2 Customer Support

For technical assistance, spare parts, or service, please contact Beko customer support. Visit the official Beko website for contact details specific to your region.



© 2024 Beko. All rights reserved.

Related Documents - CEG7304X

	<p>Beko CEG 7348 Series Full Automatic Espresso Machine User Manual</p> <p>Comprehensive user manual for the Beko CEG 7348 Series Full Automatic Espresso Machine with Integrated Milk Cup and TFT Touch Screen, covering installation, operation, cleaning, and troubleshooting.</p>
	<p>Beko CEP 5464 DX Semi-Automatic Espresso Machine User Manual</p> <p>User manual for the Beko CEP 5464 DX Semi-Automatic Espresso Machine with Integrated Milk Cup, providing instructions for operation, cleaning, safety, and troubleshooting.</p>
	<p>Beko CEG 7404 C Fully Automatic Espresso Machine User Manual</p> <p>User manual for the Beko CEG 7404 C Fully Automatic Espresso Machine with Integrated Milk Cup. Provides instructions on setup, operation, cleaning, and troubleshooting for optimal coffee preparation.</p>
	<p>Beko Semi-Automatic Espresso Machine with Integrated Milk Cup User Manual</p> <p>Comprehensive user manual for the Beko Semi-Automatic Espresso Machine with Integrated Milk Cup (CEP 5304 X, CEP 5303 B). Provides detailed safety instructions, operating procedures, technical specifications, cleaning guides, troubleshooting tips, and warranty information.</p>

 <p>Fully Automatic Espresso Machine With Integrated Milk Cup User Manual</p>  <p>CEG 7304 X</p> <p>GB DE FR PL HU ES RU CZ SK IT NL UA</p> 	<p>Beko CEG 7304 X Fully Automatic Espresso Machine User Manual</p> <p>User manual for the Beko CEG 7304 X Fully Automatic Espresso Machine with Integrated Milk Cup, providing detailed instructions, safety guidelines, and troubleshooting tips for optimal operation.</p>
 <p>Fully Automatic Espresso Machine With Integrated Milk Cup User Manual</p>  <p>CEG 7304 X CEG 7304 B</p> <p>GB DE FR PL HU ES RU CZ SK IT NL UA</p> 	<p>Beko CEG 7304 X/B Fully Automatic Espresso Machine User Manual</p> <p>User manual for the Beko CEG 7304 X and CEG 7304 B Fully Automatic Espresso Machine with Integrated Milk Cup. Includes safety instructions, product information, and intended use.</p>