

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Farberware](#) /

› [Farberware BBQ Turner Model 5293120 Instruction Manual](#)

## Farberware 5293120

# Farberware BBQ Turner Instruction Manual

Model: 5293120

## 1. PRODUCT OVERVIEW

---

The Farberware BBQ Turner is a versatile tool designed for both grilling and general kitchen use. Constructed from durable stainless steel with a comfortable nylon handle, it is engineered for flipping and serving a variety of foods, including heavier meats.

### Key Features:

- **Durable Construction:** Stainless steel head for longevity and frequent use.
- **Slotted Design:** Perforations allow excess juices and fats to drain away from food.
- **Tapered Edge:** Designed to easily slide under foods for efficient flipping.
- **Long Handle:** Measures approximately 18 inches (45.7 cm) to keep hands safely away from heat sources.
- **Comfortable Grip:** Nylon handle provides a secure and comfortable hold.
- **Convenient Storage:** Includes a hanging ring for easy storage when not in use.
- **Dishwasher Safe:** For easy and thorough cleaning.



Image 1.1: The Farberware BBQ Turner, showcasing its stainless steel head and black nylon handle with a hanging ring.

## 2. SETUP

---

The Farberware BBQ Turner requires no assembly. It is ready for immediate use upon removal from its packaging.

- Before first use, wash the turner thoroughly with warm, soapy water and rinse completely.
- Dry the turner before storing or using.

## 3. OPERATING INSTRUCTIONS

---

This turner is designed for efficient handling of food on grills, griddles, and in pans.

### 3.1 Flipping and Turning Food

1. Position the tapered edge of the turner under the food item you wish to flip or move.
2. Gently slide the turner completely under the food. The tapered edge facilitates this action.
3. Lift and turn the food as needed. The long handle helps maintain a safe distance from hot surfaces.
4. The slotted design allows any excess liquids or oils to drain away, preventing sogginess and flare-ups on the grill.

FARBERWARE

## FAR REACHING

The elongated head and extended handle keep hands away from heat



Image 3.1: The Farberware BBQ Turner in action, demonstrating its long reach and effectiveness in flipping food on a grill.

### 3.2 Serving Food

The broad head of the turner is also suitable for serving larger portions of food directly from the cooking surface to a plate.

**FARBERWARE**



## **OVERSIZED HEAD**

Perfect for flipping larger cuts of meat and fish on the grill or stovetop and slotted to drain liquids from food when lifting or serving

Image 3.2: The oversized head of the turner is effective for handling larger food items, both on the grill and in the kitchen.

## **4. CARE AND MAINTENANCE**

---

Proper care ensures the longevity and performance of your Farberware BBQ Turner.

### **4.1 Cleaning**

- The Farberware BBQ Turner is dishwasher safe. Place it in the dishwasher for convenient cleaning.
- Alternatively, hand wash with warm, soapy water. Use a non-abrasive sponge or cloth to prevent scratching the stainless steel.
- Rinse thoroughly and dry immediately after washing to prevent water spots and maintain shine.

### **4.2 Storage**

Utilize the integrated hanging ring on the handle for easy and accessible storage. Hang it on a hook near your grill or in your kitchen.

## **5. SAFETY INFORMATION**

---

- Always use caution when handling hot food and cooking surfaces.
- The long handle is designed to keep your hands away from heat, but exercise care to avoid burns.

- Do not leave the turner resting on hot surfaces for extended periods, as this may damage the nylon handle.
- Keep out of reach of children.

## 6. TROUBLESHOOTING

---

For a simple utensil like the Farberware BBQ Turner, troubleshooting is minimal.

- **Food sticking to turner:** Ensure cooking surfaces are adequately oiled and heated. For stubborn residue on the turner, soak in warm, soapy water before cleaning.
- **Rust spots:** While made of stainless steel, prolonged exposure to moisture or harsh chemicals can cause surface rust. Clean immediately after use and dry thoroughly. If rust appears, it can often be removed with a stainless steel cleaner.

## 7. SPECIFICATIONS

---

<b>Model Number</b>	5293120
<b>Material</b>	Stainless Steel (Head), Nylon (Handle)
<b>Color</b>	Black/Stainless Steel
<b>Product Dimensions</b>	16.5"L x 4"W (41.9 cm L x 10.2 cm W)
<b>Item Weight</b>	0.41 Kilograms (14.4 ounces)
<b>Dishwasher Safe</b>	Yes
<b>UPC</b>	024131486038

**FARBERWARE**



Image 7.1: Dimensional diagram of the Farberware BBQ Turner, indicating its overall length and head width.

## 8. WARRANTY AND SUPPORT

Specific warranty information for the Farberware BBQ Turner is not provided in this manual. Please refer to the product packaging or the official Farberware website for details regarding warranty coverage.

For customer support or inquiries, please visit the official Farberware website or contact their customer service department through the contact information provided on their website or product packaging.