

## Canicom Beeper One GPS

# Beeper One GPS Dog Locator User Manual

Model: Beeper One GPS

## INTRODUCTION

The Beeper One GPS Dog Locator is designed to revolutionize your hunting experience by providing silent and precise tracking of your dog. With integrated GPS technology, you can manage all collar functions directly from the intuitive, easy-to-read remote control. This device allows you to accurately determine your dog's distance and direction, offering clear and precise indications. Customize your hunting experience by adjusting volume, activating sounds, vibrations, and acoustic localization of the collar remotely. The system offers two operating modes to adapt to various situations.

## PRODUCT OVERVIEW

The Beeper One GPS system consists of a remote control unit and a GPS collar, designed for reliable dog tracking and control. Key features include:

- **Absolute Silence:** Enables hunting without disturbing wildlife through precise GPS localization.
- **Total Control:** All collar functions can be managed from the remote control's intuitive screen.
- **Guaranteed Precision:** Instantly provides your dog's exact distance and direction.
- **Full Customization:** Allows adjustment of volume, activation of sounds, and vibrations for optimal control.
- **Maximum Flexibility:** Offers two distinct operating modes to suit different needs and environments.



Image: The Beeper One GPS system, showing the remote control, the GPS collar, and its charging base.

## PACKAGE CONTENTS

---

Verify that all the following items are included in your package:

- 1 x Charging base for collar and remote control
- 1 x Beeper One GPS Collar
- 1 x Yellow Strap
- 1 x Beeper One GPS Remote Control
- 1 x User Manual (this document)



Image: A complete view of all items included in the Beeper One GPS package, including the remote, collar, charger, strap, and cables.

## SETUP

---

### 1. Charging the Devices

Before first use, fully charge both the Beeper One GPS collar and the remote control. Use the provided charging base and power adapter.

1. Connect the charging base to a power outlet using the supplied adapter.
2. Place the Beeper One GPS collar onto the designated slot on the charging base.
3. Place the Beeper One GPS remote control onto its designated slot on the charging base.
4. Ensure the charging indicators on both devices illuminate, indicating they are charging.
5. Allow devices to charge until the indicators show a full charge (refer to device display for battery status).

### 2. Attaching the Collar

Attach the Beeper One GPS collar to your dog using the yellow strap provided.

1. Thread the yellow strap through the collar unit's loops.
2. Secure the collar around your dog's neck, ensuring it is snug but not too tight. You should be able to fit two fingers comfortably between the collar and your dog's neck.
3. Ensure the collar unit is positioned correctly for optimal GPS signal reception.

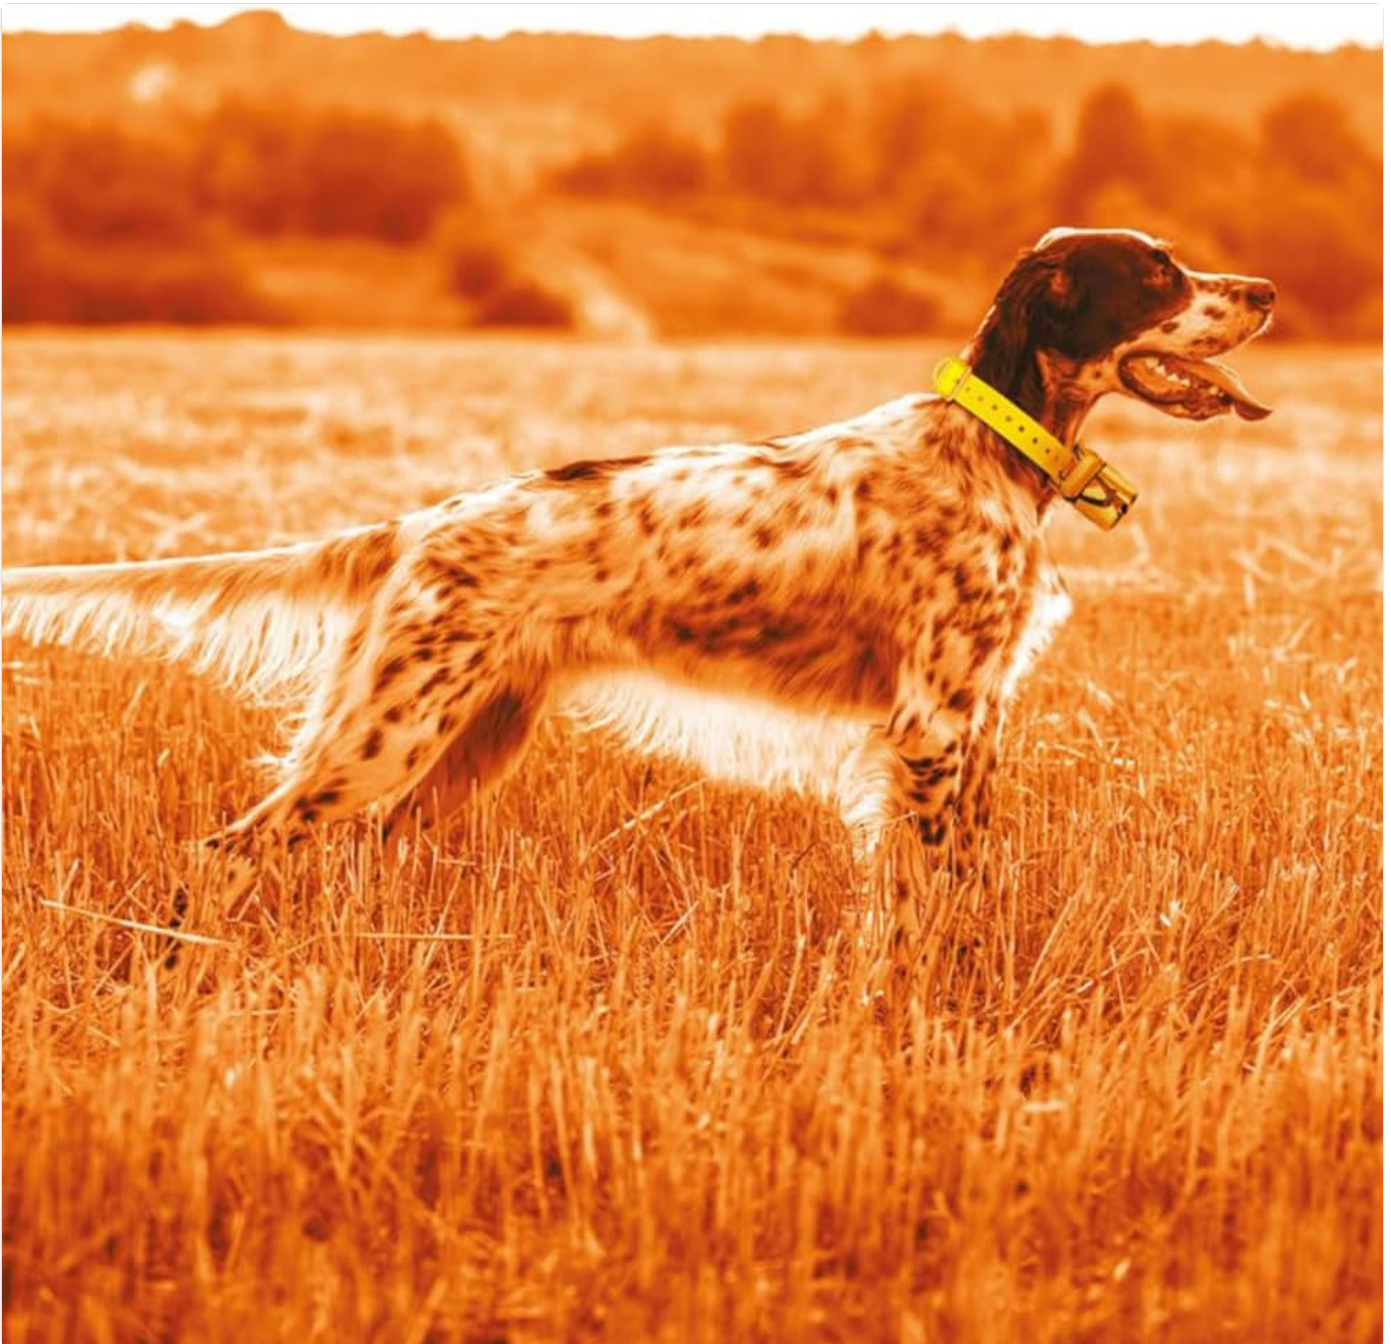


Image: A dog wearing the Beeper One GPS collar, demonstrating proper fit and use in an outdoor environment.

## OPERATING INSTRUCTIONS

---

### 1. Powering On/Off

- To power on the remote control: Press and hold the 'OK' button until the screen illuminates.
- To power on the collar: Press the power button located on the collar unit.
- To power off: Repeat the power-on steps, holding the button until the device shuts down.

### 2. Using the Remote Control

The remote control features a large, intuitive screen and several buttons for managing the collar's functions.

- **Display:** Shows real-time information such as dog's distance, direction, battery status, and selected operating mode.
- **Navigation Buttons:** Use the arrow buttons to navigate through menus and options on the screen.
- **OK Button:** Confirms selections or activates functions.

- **BACK Button:** Returns to the previous screen or cancels an action.
- **Function Buttons:** Dedicated buttons for activating sounds, vibrations, and acoustic localization.



Image: A detailed view of the Beeper One GPS remote control, highlighting its screen and control buttons for easy operation.

### 3. GPS Tracking and Direction

The remote control displays your dog's distance and direction relative to your position.

- The screen will show an arrow indicating the direction your dog is in.
- A numerical value will display the approximate distance to your dog (up to 2.5 km coverage).
- For best accuracy, ensure both the remote and collar have a clear line of sight to the sky for GPS signal acquisition.

### 4. Acoustic Localization and Vibration

You can activate sounds and vibrations on the collar remotely.

- Press the dedicated sound button on the remote to activate an acoustic signal from the collar.
- Press the dedicated vibration button to activate a vibration on the collar.
- Adjust the volume of the acoustic signal through the remote control's settings menu.

### 5. Operating Modes

The Beeper One GPS offers two operating modes to suit different hunting scenarios. Refer to the remote control's menu for selecting and customizing these modes.

- Specific details on each mode can be found in the remote control's on-screen manual or quick start guide.

## MAINTENANCE

---

### 1. Cleaning

- Wipe the collar and remote control with a soft, damp cloth.
- Do not use harsh chemicals or abrasive cleaners.
- Ensure devices are dry before charging or storing.

### 2. Battery Care

- Charge devices regularly, even if not in frequent use, to maintain battery health.
- Avoid extreme temperatures during charging and storage.
- Do not attempt to replace the internal batteries yourself. Contact support if battery issues arise.

### 3. Storage

- Store the Beeper One GPS system in a cool, dry place away from direct sunlight.
- Keep out of reach of children and pets.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Device not powering on.	Low or no battery charge.	Charge the device fully using the provided charging base.
No GPS signal or inaccurate tracking.	Obstruction to sky view; device indoors or under heavy cover.	Move to an open area with a clear view of the sky. Wait for signal acquisition.
Remote not connecting to collar.	Devices out of range; collar not powered on; interference.	Ensure both devices are powered on and within operating range. Check for obstacles.
Acoustic signal or vibration not working.	Collar battery low; function disabled in settings; device malfunction.	Check collar battery. Verify settings on the remote. If issue persists, contact support.

## SPECIFICATIONS

---

- **Brand:** Canicom
- **Model:** Beeper One GPS
- **Connectivity Technology:** Bluetooth
- **Compatible Devices:** Smartphone (for potential future app integration, though not explicitly stated for current model)
- **Specific Uses:** Hunting
- **Material:** Plastic
- **Manufacturer:** Midland Europe
- **ASIN:** B0D98VM25S
- **GPS Coverage:** Up to 2.5 km (approx. 1.55 miles)

## WARRANTY AND SUPPORT

---

For technical assistance, product inquiries, or warranty information, please contact Canicom customer support. You can often find contact details on the manufacturer's official website or through your point of purchase. For immediate assistance, refer to the contact information provided with your product packaging or visit the Canicom website.



Image: The official Canicom brand logo.