

[Manuals.plus](#) /

› [Timco](#) /

› Timco BSKA635 Electric Shaver User Manual

Timco BSKA635

Timco BSKA635 Electric Shaver User Manual

Model: BSKA635 | **Brand:** Timco

1. INTRODUCTION

Thank you for choosing the Timco BSKA635 Electric Shaver. This device is designed to provide a smooth and precise shaving experience, suitable for both wet and dry use. Featuring advanced rotary blades, a powerful battery, and a digital display, this shaver offers convenience and efficiency. Please read this manual thoroughly before first use to ensure proper operation and maintenance.



Image 1: The Timco BSKA635 Electric Shaver, showcasing its sleek design and digital display.

2. SAFETY INFORMATION

- Keep out of reach of children.
- Keep away from heat sources.
- Do not disassemble the device beyond routine cleaning as described in this manual.
- Ensure the charging port is dry before connecting the USB Type-C cable.
- Do not use if the shaver or charging cable is damaged.
- This appliance is water-resistant (IPX6) and can be rinsed under running water, but should not be submerged for extended periods.

3. PACKAGE CONTENTS

Please check that all items are present in the package:

- Timco BSKA635 Electric Shaver

- USB Type-C Charging Cable
- Protective Head Cover
- Cleaning Brush

4. PRODUCT FEATURES

- **Long-lasting Battery:** 90 minutes of continuous use on a 90-minute full charge, powered by a 700 mAh Lithium-Ion battery.
- **Dual Speed Settings:** Choose between two shaving speeds for personalized comfort and efficiency.
- **Water Resistance (IPX6):** Designed for both wet and dry shaving, allowing for use under the shower and easy cleaning.
- **Travel Lock:** Prevents accidental activation during travel.
- **Advanced Shaving System:** Features 3 floating, double-ring oscillating blades with a self-sharpening stainless steel cutting net.
- **360° Dynamic Movement:** The shaving head adapts to the contours of your face and neck for a close and comfortable shave.
- **Digital Display:** Provides clear information on battery level, active speed, and travel lock status.
- **Ergonomic Design:** Smooth, ergonomic body for a comfortable grip.
- **Magnetic Head Attachment:** Ensures easy and secure attachment of the shaving head.



Image 2: Close-up of the shaver head, illustrating the 360° dynamic movement of the floating blades for adaptive shaving.



Image 3: An exploded view showing the internal mechanism of the shaver head, highlighting the self-sharpening blades and cutting net.

5. SETUP

5.1 Initial Charge

1. Before first use, fully charge the shaver.
2. Ensure the shaver is turned off.
3. Connect the USB Type-C charging cable to the shaver's charging port.
4. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a computer's USB port.
5. The digital display will show the charging progress. A full charge takes approximately 90 minutes.
6. Once fully charged, disconnect the cable.

6. OPERATION

6.1 Power On/Off

- To turn on the shaver, press the power button once.
- To turn off the shaver, press the power button again.

6.2 Speed Adjustment

- While the shaver is on, press the power button twice quickly to switch between the two available speeds. The digital display will indicate the current speed setting.

6.3 Wet and Dry Shaving

- **Dry Shaving:** For a quick and convenient shave, use the shaver on dry skin.
- **Wet Shaving:** For a more comfortable and refreshing shave, apply shaving foam or gel to your face before use. The IPX6 water resistance allows for safe use under the shower.

6.4 Travel Lock

- To activate the travel lock, press and hold the power button for 3 seconds while the shaver is off. A lock icon will appear on the digital display.
- To deactivate the travel lock, press and hold the power button for 3 seconds again. The lock icon will disappear.

7. MAINTENANCE

7.1 Cleaning

Regular cleaning ensures optimal performance and hygiene. Clean the shaver after each use.

1. Turn off the shaver.
2. Gently pull the shaving head upwards to detach it from the shaver body. The magnetic attachment makes this easy.
3. Rinse the shaving head under running water to remove hair clippings and residue.
4. Use the provided cleaning brush to remove any stubborn hair from the blades and inner chamber.
5. Allow the shaving head and shaver body to air dry completely before reattaching the head and storing.
6. Place the protective head cover back on the shaver head when not in use.



Image 4: The detachable shaver head being rinsed under water, demonstrating its washable design for easy cleaning.



Image 5: Illustrates the magnetic attachment of the shaver head, allowing for easy removal and reattachment for cleaning.

7.2 Blade Replacement

The self-sharpening blades are designed for long-lasting performance. However, for optimal shaving results, it is recommended to replace the shaving head unit every 12-18 months, depending on usage. Replacement heads can be purchased separately from authorized Timco retailers.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted or travel lock is active.	Charge the shaver for 90 minutes. Deactivate travel lock by pressing and holding the power button for 3 seconds.
Poor shaving performance.	Shaving head is dirty or blades are worn.	Clean the shaving head thoroughly. Consider replacing the shaving head unit if performance does not improve.
Shaver stops during use.	Battery is low.	Recharge the shaver.

9. SPECIFICATIONS

Model Number	BSKA635
Brand	Timco
Power Source	Rechargeable Battery
Battery Type	1 Lithium Ion (included)
Battery Capacity	700 mAh
Charging Time	Approx. 90 minutes
Operating Time	Up to 90 minutes
Water Resistance	IPX6 (Washable)
Blade Material	Stainless Steel
Dimensions (L x W x H)	6 x 6 x 16 cm
Weight	162 Grams
Country of Origin	China
Special Features	Dry Shave, Low Noise, Travel Lock, Floating Head, Washable
Recommended Uses	Beard, Moustache, Face

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Timco website. Keep your purchase receipt as proof of purchase.

If you encounter any issues not covered in this manual, please contact Timco customer service for assistance.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question