

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Lubluelu](#) /

› [Lubluelu Cordless Vacuum Cleaner User Manual](#)

## Lubluelu GX-2206-US

# Lubluelu Cordless Vacuum Cleaner User Manual

Model: GX-2206-US

## INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Lubluelu Cordless Vacuum Cleaner. Please read this manual thoroughly before first use and retain it for future reference.

## SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using an electrical appliance, including the following:

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Unplug before connecting hose.

## PACKAGE CONTENTS

---

Verify that all components are present and in good condition:

- Main Motor Unit
- Extension Wand
- Motorized Floor Brush with LED lights
- Crevice Tool
- 2-in-1 Brush Tool
- Wall Mount Bracket
- Power Adapter
- User Manual
- Extra HEPA Filter



Image: The Lubluelu Cordless Vacuum Cleaner main unit, extension wand, motorized floor brush, wall mount, and various attachments.

## PRODUCT OVERVIEW

Familiarize yourself with the main components of your vacuum cleaner:

- **Main Motor Unit:** Contains the 260W brushless motor, dustbin, and LED display screen.
- **LED Display Screen:** Clearly shows battery power, suction performance (Min, Mid, Max), and troubleshooting indicators.
- **Extension Wand:** Connects the main unit to the floor brush or other attachments, adjustable for height.
- **Motorized Floor Brush:** Features an upgraded V-shaped anti-tangle roller brush and bright LED lights for enhanced

visibility under furniture. It offers 0° to 180° lateral and 0° to 90° vertical flexibility.

- **Dustbin:** 600ml capacity, easy to empty.
- **HEPA Filter System:** Double HEPA design with a 5-layer high-efficiency filtration system.

## 10cm Extra Large LED Touch Screen Display



Image: A detailed view of the 10cm extra-large LED touch screen display, showing battery indicator, speed adjustment, and entanglement reminder icons.

# Flexible LED Floor Brush



Image: The flexible LED floor brush demonstrating its 160-degree lateral and 90-degree vertical movement capabilities, with LED lights illuminating the floor.

# 25W High Cleaning Efficiency V Roller Brush



Image: An illustration of the 25W high cleaning efficiency V roller brush, designed to reduce hair tangles.

## SETUP

---

### Assembly

1. Insert the extension wand into the main motor unit until it clicks securely.
2. Attach the motorized floor brush to the other end of the extension wand, ensuring it clicks into place.
3. For handheld use, attach desired accessories (crevice tool, 2-in-1 brush) directly to the main motor unit.

### Charging the Battery

- Connect the power adapter to the charging port on the main motor unit.
- Plug the adapter into a wall outlet. The LED display will indicate charging status.
- A full charge provides up to 50 minutes of runtime, depending on the suction mode. The battery is removable for convenient charging.

## OPERATING INSTRUCTIONS

### Power On/Off and Suction Modes

- Press the power button to turn the vacuum on.
- Use the "Speed" button on the LED display to cycle through suction modes: Min (10kPa), Mid (17kPa), and Max (25kPa).
- Select the appropriate mode for your cleaning task. Max mode is ideal for deep cleaning carpets and stubborn debris.



Image: The vacuum in use on a hard floor, demonstrating its 25kPa super suction power and 62dB ultra-low noise operation.

### Using Attachments

- **Motorized Floor Brush:** Best for hard floors, carpets, and rugs. The LED lights illuminate dust and debris.
- **Crevice Tool:** Ideal for narrow gaps, corners, and edges.
- **2-in-1 Brush Tool:** Use the brush for delicate surfaces like upholstery and curtains, or retract the bristles for a wider

nozzle for general cleaning.



## Different Brushes and Nozzle for Versatile Use



Image: The vacuum configured with different brushes and nozzles for versatile use, including handheld mode for sofas and extended mode for high areas.



Make Your Daily Cleaning Easy

We are a technologically innovative company specializing in the field of floor cleaning.

We are committed to providing every customer with smart, simple and efficient products to let them enjoy the joy of housework.

Image: A user demonstrating the handheld configuration of the vacuum for cleaning a sofa.



Image: The vacuum being used to clean stairs, highlighting its maneuverability.

## Professional Services and Guarantees



Image: The vacuum in action, cleaning a sofa with its main unit and appropriate attachment.

## MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

### Emptying the Dustbin

1. Ensure the vacuum is turned off.
2. Press the dustbin release button to detach the dustbin from the main motor unit.
3. Hold the dustbin over a trash can and press the bottom release button to open the lid and empty debris.
4. Close the dustbin lid and reattach it to the main unit until it clicks.



Image: A hand demonstrating the easy emptying process of the vacuum's dustbin.

## Cleaning the Filters

It is recommended to clean the filters regularly, especially if suction power decreases.

1. Twist and pull out the filter assembly from the dustbin.
2. Separate the HEPA filter and the metal mesh filter.
3. Tap off loose dirt. Rinse both filters under cold running water until the water runs clear.
4. Allow filters to air dry completely for at least 24 hours before reassembling and placing back into the vacuum. Do not use a dryer or other heating device.



Image: An exploded view illustrating the 5-layer high-efficiency filtration system, including the double HEPA filters.

## Cleaning the Roller Brush

- Turn off the vacuum and detach the motorized floor brush.
- Unlock the brush roll cover (usually by sliding a latch or pressing a button).
- Remove the V-shaped roller brush.
- Use scissors or a cleaning tool to cut and remove any tangled hair or debris from the brush roll.
- Reinsert the brush roll and secure the cover.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or improperly installed.	Charge the battery fully. Ensure the battery is securely inserted.
Low suction power.	Dustbin is full, filters are clogged, or brush roll is tangled.	Empty the dustbin. Clean or replace filters. Remove tangled hair from the brush roll. Check for blockages in the wand or attachments.

Problem	Possible Cause	Solution
Brush roll not spinning.	Hair or debris tangled around the brush roll, or brush roll is not properly installed.	Clean the brush roll. Ensure it is correctly reinserted and locked into place.
Vacuum stops suddenly during use.	Battery is depleted, or motor is overheated due to blockage.	Recharge the battery. Check for and clear any blockages, then allow the motor to cool down before resuming use.

## SPECIFICATIONS

---

Feature	Detail
Brand	Lubluelu
Model Name	GX-2206-US
Special Feature	Cordless
Filter Type	HEPA Filter (Double HEPA Design)
Included Components	Light kit included (LED on floor brush)
Capacity	600 Milliliters (Dustbin)
Wattage	220 watts (Motor)
Runtime	Up to 50 minutes
Form Factor	Stick
Color	Lavenda
Product Dimensions	6" L x 6" W x 6" H
Battery Type	Lithium-Ion (6 Lithium Polymer batteries included)
Noise Level	69 dB
Item Weight	4.62 pounds
Suction Power	Up to 25,000Pa



Image: An illustration of the vacuum's battery, highlighting its 7x2200mAh capacity and estimated runtimes for different suction levels (15-20min at 25kPa, 25-30min at 17kPa, 45-50min at 10kPa).

## WARRANTY AND SUPPORT

Lubluelu provides dedicated after-sales support for its products.

- **Warranty:** The product comes with a 24-month warranty.
- **Return Policy:** 90-Day Full Refund.
- **Customer Service:** If you have any questions or require accessories, please contact Lubluelu customer service. They aim to resolve issues within 24 hours.

For further assistance, please visit the official Lubluelu Store:[Lubluelu Store](#)

## Related Documents - GX-2206-US

 <p><b>Instruction Manual</b> Handy Cordless Vacuum Cleaner Manual Model Number: P1 ① Clean contact us if you need any help or feedback ② Technical support ③ Product feedback ④ Self-cleaning ⑤ Make Your Life a Breeze</p>	<p><a href="#"><u>P1 Handy Cordless Vacuum Cleaner Instruction Manual</u></a></p> <p>This manual provides detailed instructions for the P1 Handy Cordless Vacuum Cleaner, covering safety, assembly, operation, maintenance, and troubleshooting. Learn how to use and care for your device effectively.</p>
 <p><b>lubluelu</b> Instruction Manual Handy Cordless Vacuum Cleaner Manual Model Number: VC2206 Make Your Daily Cleaning Easy</p>	<p><a href="#"><u>Lubluelu Handy Cordless Vacuum Cleaner VC2206 Instruction Manual</u></a></p> <p>Instruction manual for the Lubluelu Handy Cordless Vacuum Cleaner, Model Number: VC2206. Covers important safety instructions, product and accessory details, operation, assembly, maintenance, troubleshooting, and warranty information.</p>
 <p><b>lubluelu</b> Instruction Manual Self-standing Cordless Vacuum Cleaner Manual Model Number: 202 Make Your Daily Cleaning Easy</p>	<p><a href="#"><u>Lubluelu Cordless Vacuum Cleaner Model 202 Instruction Manual</u></a></p> <p>Comprehensive instruction manual for the Lubluelu Cordless Vacuum Cleaner Model 202, covering important safety instructions, product operation, assembly, maintenance, and troubleshooting.</p>
 <p><b>Safety Warnings</b> Application &amp; Use Maintenance &amp; Cleaning Disposal &amp; Recycling Transportation &amp; Storage Emergency &amp; Safety Maintenance &amp; Cleaning Disposal &amp; Recycling Transportation &amp; Storage Emergency &amp; Safety</p>	<p><a href="#"><u>Lubluelu Robot Vacuum User Manual: Safety, Installation, and Operation</u></a></p> <p>Comprehensive user manual for the Lubluelu robot vacuum, covering safety warnings, application restrictions, battery and charging instructions, packing list, machine components, sensor details, installation steps, and mopping module setup.</p>
 <p><b>Lubluelu 202 Main Brush: Instructions and Safety Guide</b> Detailed instructions and safety recommendations for the Lubluelu 202 vacuum cleaner main brush. Learn about its features, intended use, and proper handling.</p>	
 <p><b>Lubluelu SL68 Vacuum Cleaner Dust Container Filter - User Manual</b> User manual for the Lubluelu SL68 vacuum cleaner dust container filter, including product description, intended use, safety instructions, and specifications. This filter effectively captures dust, allergens, and pollen for cleaner air.</p>	