Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > SISIGAD /
- > SISIGAD Self-Balancing Scooter User Manual (Model HY-A02I)

SISIGAD HY-A02I

SISIGAD Self-Balancing Scooter User Manual

Model: HY-A02I

1. Introduction

Thank you for choosing the SISIGAD Self-Balancing Scooter. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your scooter. Please read it thoroughly before use to ensure a safe and enjoyable experience. This scooter is designed for recreational use and is suitable for users aged 6 and above



Image 1.1: SISIGAD Self-Balancing Scooter (Model HY-A02I)

2. SAFETY INFORMATION

Your safety is paramount. Always adhere to the following guidelines:

- Age Recommendation: This scooter is intended for users aged 6 and above.
- Weight Limit: Do not exceed the maximum rider weight of 230 pounds (approximately 104 kg).
- Protective Gear: Always wear a helmet, knee pads, and elbow pads when riding.
- **Operating Environment:** Ride on smooth, dry surfaces away from traffic. Avoid wet conditions, steep inclines, and uneven terrain.
- Certification: SISIGAD Scooters are certified, complying with safety standards to ensure worry-free riding.
- Supervision: Children should always be supervised by an adult while riding.
- Awareness: Be aware of your surroundings and other people or obstacles.

3. PACKAGE CONTENTS

Upon opening the package, please verify that all items are present:

- SISIGAD Self-Balancing Scooter (Model HY-A02I)
- · Charging Adapter
- User Manual (this document)

4. PRODUCT FEATURES

4.1. Self-Balancing Technology

The scooter incorporates a state-of-the-art self-balancing control system, making it easy to learn and operate. This technology assists in maintaining balance, providing a stable riding experience for users of all skill levels.

4.2. Bluetooth 5.0 & LED Lights

Enhance your riding experience with integrated features:

- **Bluetooth 5.0 Speakers:** Connect your smartphone or other Bluetooth-enabled device to the built-in speakers to play music or audiobooks during your ride. The Bluetooth name for connection is typically 'Hoverboard-HY'.
- Colorful LED Lights: The scooter features vibrant LED lights on the wheels, headlights, and fenders. These lights not only add visual appeal but also improve visibility, especially during nighttime use.
- Status Indicator Lights: Real-time battery status and scooter operational status are displayed via indicator lights.



Image 4.1: Bluetooth Music Speaker Functionality



Image 4.2: Bright LED Lights for Visibility and Style

4.3. Superior Battery

The scooter is equipped with a rechargeable low self-discharge rate lithium-ion battery. The safety shield battery enclosure is designed to prevent fires and overheating.

- Charging Time: Approximately 3 to 5 hours for a full charge.
- Maximum Range: Up to 8.5 miles (approximately 13.7 km) on a single charge.

SISICAD Scooter Coltant Available SISICAD Scooter State Affectment State Affectmen

Image 4.3: Efficient Lithium Battery System

4.4. High-Performance Design

Built for durability and performance:

- Wheels: 6.5-inch solid rubber wheels provide a stable and durable ride.
- Foot Pads: Anti-slip foot pads ensure secure footing during operation.
- Motors: Powered by dual 300W brushless motors for efficient and quiet operation.
- **Speed:** Reaches speeds up to 7.5 mph (approximately 12 km/h).
- Incline: Capable of handling a maximum incline angle of 20 degrees.



Image 4.4: Powerful Dual Brushless Motors



Image 4.5: Scooter Suitable for Various Terrains

5. SETUP

5.1. Initial Charging

Before first use, fully charge the scooter's battery. Connect the charging adapter to the scooter's charging port and then to a power outlet. The indicator light on the charger will typically turn green when fully charged. Refer to the 'Charging' section for more details.

5.2. Power On/Off

To power on the scooter, press the power button located on the device. To power off, press and hold the power button until the lights turn off.

6. OPERATING INSTRUCTIONS

6.1. Riding the Scooter

- 1. **Mounting:** Place one foot firmly on a foot pad. Once the scooter stabilizes, quickly place your other foot on the second foot pad.
- 2. Balancing: The self-balancing system will assist you. Keep your body upright and relaxed.
- 3. Movement: Lean slightly forward to move forward, and lean backward to slow down or move in reverse.
- 4. Turning: To turn left, gently press your right foot down. To turn right, gently press your left foot down.
- 5. **Dismounting:** When ready to stop, slow down to a complete halt. Step off one foot at a time, preferably backward.

Warning: Always practice in a safe, open area until you are comfortable with the controls.

6.2. Connecting Bluetooth

- 1. Ensure the scooter is powered on.
- 2. On your smartphone or device, enable Bluetooth.
- 3. Search for available devices. The scooter's Bluetooth name is typically 'Hoverboard-HY'.
- 4. Select 'Hoverboard-HY' to pair. Once connected, you can play audio through the scooter's speakers.

7. CHARGING

Proper charging ensures optimal battery life and performance.

- Charging Port: Locate the charging port on the scooter.
- **Connection:** Plug the charging adapter into the scooter's charging port, then plug the adapter into a standard wall outlet.
- **Indicator:** The charging adapter typically has an indicator light. It will be red during charging and turn green when the battery is fully charged.
- Charging Time: A full charge takes approximately 3 to 5 hours. Do not overcharge.
- **Storage:** If storing the scooter for an extended period, charge it to about 50% every 3 months to maintain battery health.

8. MAINTENANCE

8.1. Cleaning

Wipe the scooter with a damp cloth to remove dirt and dust. Do not use harsh chemicals or abrasive cleaners. Avoid direct water spray to prevent damage to electronic components.

8.2. Storage

Store the scooter in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the battery is partially charged before long-term storage.

9. TROUBLESHOOTING

If you encounter issues with your SISIGAD scooter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Scooter does not power on	Low battery; Power button not pressed correctly	Charge the battery fully; Press and hold the power button firmly.
Scooter not balancing properly	Calibration needed; Uneven surface	Ensure you are on a flat surface. Power off, then power on and allow it to self-calibrate before stepping on. If issues persist, consult support.
Battery not charging	Charger not connected; Faulty charger/port	Ensure charger is securely connected to both scooter and outlet. Check charger indicator light. If still not charging, contact customer service.
Bluetooth not connecting	Bluetooth off on device; Incorrect device selected	Ensure Bluetooth is enabled on your phone. Search for 'Hoverboard-HY' and select it. Restart both devices if necessary.
Reduced range or speed	Low battery; Overweight rider; Steep incline; Rough terrain	Charge battery fully. Ensure rider weight is within limits. Ride on smooth, flat surfaces.

10. SPECIFICATIONS

Feature	Detail
Model Name	HY-A02I
Brand	SISIGAD
Wheel Size	6.5 inches
Motor Power	Dual 300W Brushless Motors
Max Speed	Up to 7.5 mph (12 km/h)
Max Range	Up to 8.5 miles (13.7 km)
Battery Type	Rechargeable Lithium-ion
Charging Time	3-5 hours
Max Load	230 pounds (104 kg)

Feature	Detail
Max Incline Angle	20 degrees
Item Dimensions (LxWxH)	23.2 x 7.5 x 7.5 inches (58.9 x 19.05 x 19.05 cm)
Item Weight	Approximately 13.16 lbs (5.97 kg)
Special Features	Built-In Bluetooth speaker, LED Lights, Light Up Wheels, Self-Balancing
Material	Rubber (wheels)



Image 10.1: Key Product Specifications Overview



Image 10.2: Scooter Component Breakdown

11. WARRANTY AND SUPPORT

11.1. Warranty Information

SISIGAD offers a 3-month return and refund guarantee for your scooter. This warranty covers manufacturing defects and issues arising from normal use.

11.2. Customer Support

For any questions, concerns, or technical assistance, please contact SISIGAD customer service. We provide lifetime post-purchase support and 24/7 online customer service.

Please refer to the product packaging or the official SISIGAD website for the most current contact information.

© 2024 SISIGAD. All rights reserved.

Related Documents - HY-A02I

Section of the sectio	SISIGAD Electric Self-Balancing Hoverboard User Manual (Model B01B) Comprehensive user manual for the SISIGAD Electric Self-Balancing Hoverboard, Model B01B. Covers safe operation, charging, maintenance, specifications, and warnings.
	SISIGAD Electric Self-Balancing Hoverboard User's Manual (Model A01) Comprehensive user's manual for the SISIGAD Model A01 Electric Self-Balancing Hoverboard. Covers safe operation, charging, maintenance, and specifications.
Section and the section of the secti	SISIGAD A02 Electric Self-Balancing Hoverboard User Manual Comprehensive user manual for the SISIGAD A02 Electric Self-Balancing Hoverboard, covering safe operation, charging, maintenance, and specifications.
S STATE AND AND A STATE AN	SISIGAD Electric Self-Balancing Hoverboard User's Manual - Safety, Operation, and Maintenance Guide Comprehensive user manual for the SISIGAD Electric Self-Balancing Hoverboard (models A01B, A02B, A12B). Learn about safe operation, charging, maintenance, specifications, and troubleshooting.
STATE OF THE STATE	SISIGAD A26 Electric Self-Balancing Hoverboard User Manual - Safe Operation & Specifications Your guide to the SISIGAD A26 hoverboard. Learn about safe riding, charging, maintenance, and technical specifications. Ensure a fun and safe experience with this electric self-balancing scooter.
SO NOTES AND SO	SISIGAD B02B Electric Self-Balancing Hoverboard User Manual Comprehensive user manual for the SISIGAD B02B Electric Self-Balancing Hoverboard, covering safe operation, maintenance, charging, specifications, and important warnings.