

[Manuals.plus](#) /

› [Highttoy](#) /

› Children's Electronic Money Box Safe User Manual

Highttoy HH918

User Manual: Highttoy Children's Electronic Money Box Safe

Model: HH918

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Highttoy Children's Electronic Money Box Safe. This electronic piggy bank features a touchscreen, fingerprint lock, automatic banknote feeder, and music mode, designed to encourage saving habits.



Image 1.1: Highttoy Electronic Money Box Safe in use, demonstrating banknote and coin insertion.

The money box is constructed from durable ABS plastic, ensuring longevity and safety for children. It offers a high storage capacity, capable of holding approximately 600 coins or 100 paper banknotes.

2. SAFETY INFORMATION

- This product is intended for children aged 3 years and older.
- Keep small parts, such as batteries, out of reach of young children to prevent choking hazards.
- Do not expose the device to water or excessive moisture.
- Use only the specified battery type (3x AA batteries). Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries responsibly according to local regulations.

- Do not attempt to disassemble or modify the money box, as this may cause damage or injury.



Image 2.1: Product packaging displaying safety warnings and battery installation guide.

3. PACKAGE CONTENTS AND PRODUCT OVERVIEW

Please ensure all items are present in the package:

- Highttoy Electronic Money Box Safe (Model HH918)
- Mini Screwdriver (for battery compartment)
- User Manual (this document)

Familiarize yourself with the key components of the money box:



Image 3.1: Labeled components of the Electronic Money Box Safe.

- **Coin Port:** Slot for inserting coins.
- **Automatic Note Feeder:** Slot for automatically drawing in banknotes.
- **Indicator Light:** Displays status (e.g., green for open, red for incorrect password).
- **Touchscreen Keypad:** For entering passwords.
- **Fingerprint Lock:** For confirming password and opening the safe.
- **Music/Mute Switch:** Located inside the door, for controlling sound.

4. SETUP

4.1. Battery Installation

1. Locate the battery compartment on the bottom of the money box.
2. Use the provided mini screwdriver to open the battery compartment cover.
3. Insert 3x AA batteries (not included), ensuring correct polarity (+/-).
4. Close the battery compartment cover and secure it with the screw.

4.2. Initial Password and Opening the Safe

The default password for the money box is "0000".

1. Enter the default password "0000" on the touchscreen keypad.
2. Press the fingerprint sensor to confirm.
3. The indicator light will turn green, and the door will automatically open.

Usage Method



**1.Put in 3 x AA Batteries
(not included).**



2.Put in Coins or Cash.



**3.Input the Code(The Original
Password is "0000")**



**4.Confirm by fingerprint and
the door will open automatically.**

5. OPERATION

5.1. Depositing Money

- **Coins:** Insert coins into the coin slot located at the top of the money box.
- **Banknotes:** Place banknotes into the automatic note feeder slot. The money box will automatically roll the banknote inside.

5.2. Changing the Password

1. Open the safe door using the current password and fingerprint.
2. While the door is open, press and hold the "*" key on the keypad.
3. Enter your new 4-digit password.
4. Press the "#" key to confirm the new password.
5. Close the safe door. Your new password is now set.

Note: If you forget your password, you can reset it by removing and reinserting the batteries. This will revert the password to the default "0000".

5.3. Music Mode

The money box features a music mode for added enjoyment.

1. Press the "#" button on the keypad to enter Music Switching Mode.
2. Press any number from **0-9** to select and play a music rhyme.

Music Switching Mode



Image 5.1: Activating and selecting music in Music Switching Mode.

5.4. Mute Function

To turn off the sound effects and music:

- Open the safe door.
- Locate the Music/Mute switch inside the door.
- Toggle the switch to the "Mute" position to disable sounds.

6. MAINTENANCE

- **Cleaning:** Wipe the exterior of the money box with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.
- **Battery Replacement:** Replace batteries when the device's functions become sluggish or unresponsive. Always replace all three AA batteries at the same time.

- **Storage:** When not in use for extended periods, remove the batteries to prevent leakage and damage. Store in a cool, dry place.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Money box does not power on.	Batteries are dead or incorrectly installed.	Check battery polarity. Replace with new AA batteries.
Door does not open after entering password.	Incorrect password entered.	Ensure the correct 4-digit password is entered. If forgotten, remove and reinsert batteries to reset to "0000".
Banknotes are not automatically fed.	Banknote is creased or inserted incorrectly.	Ensure banknotes are flat and inserted straight into the feeder. Do not force banknotes.
No sound or music.	Mute switch is activated.	Open the safe door and check the Music/Mute switch. Toggle it to the "Music" position.

8. SPECIFICATIONS

Model: HH918

Brand: Highttoy

Material: Durable ABS Plastic

Power Source: 3x AA Batteries (not included)

Product Dimensions: 7.87 x 5.71 x 5.71 inches (20 x 14.5 x 14.5 cm)

Item Weight: 1.45 pounds (0.66 kg)

Storage Capacity: Approximately 600 coins or 100 banknotes

Recommended Age: 3+ Years

ASIN: B0D9BC2VYQ

Date First Available: February 5, 2025

9. WARRANTY AND SUPPORT

For warranty information or technical support, please contact the manufacturer, Highttoy, directly through their official website or the retailer where the product was purchased. Please have your model number (HH918) and purchase details ready when contacting support.

For more information, you may visit the product page on [Amazon.com](#).

© 2025 Highttoy. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question