



Manuals.plus /

- › Dghrti /
- › Dghrti TAB30 Android 14 Tablet User Manual

Dghrti TAB30

Dghrti TAB30 Android 14 Tablet User Manual

Model: TAB30

Brand: Dghrti

1. INTRODUCTION

This manual provides comprehensive instructions for the Dghrti TAB30 Android 14 Tablet. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance and user experience. The TAB30 is a versatile 2-in-1 tablet designed for both productivity and entertainment, featuring an Octa-Core CPU, ample memory, and a long-lasting battery.

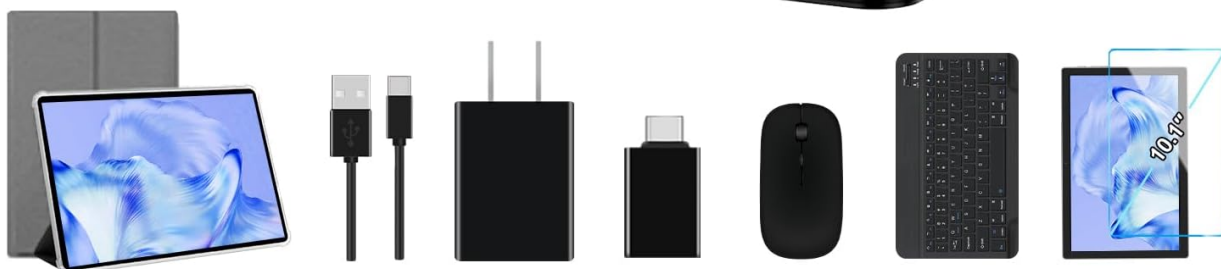 


Figure 1.1: Dghrti TAB30 Tablet and Included Accessories.

2. WHAT'S IN THE BOX

Verify that all items are present in the package:

- A 10.1-inch Tablet
- A wireless mouse and a Bluetooth keyboard
- A protective case
- A US Power Adapter and Type-C Data Cable
- A Plastic Protective Film and a User's Manual

3. SETUP GUIDE

3.1 Initial Charging

Before first use, fully charge the tablet. Connect the provided Type-C data cable to the tablet's charging port and the US Power Adapter to a wall outlet. The charging indicator will show the charging status.

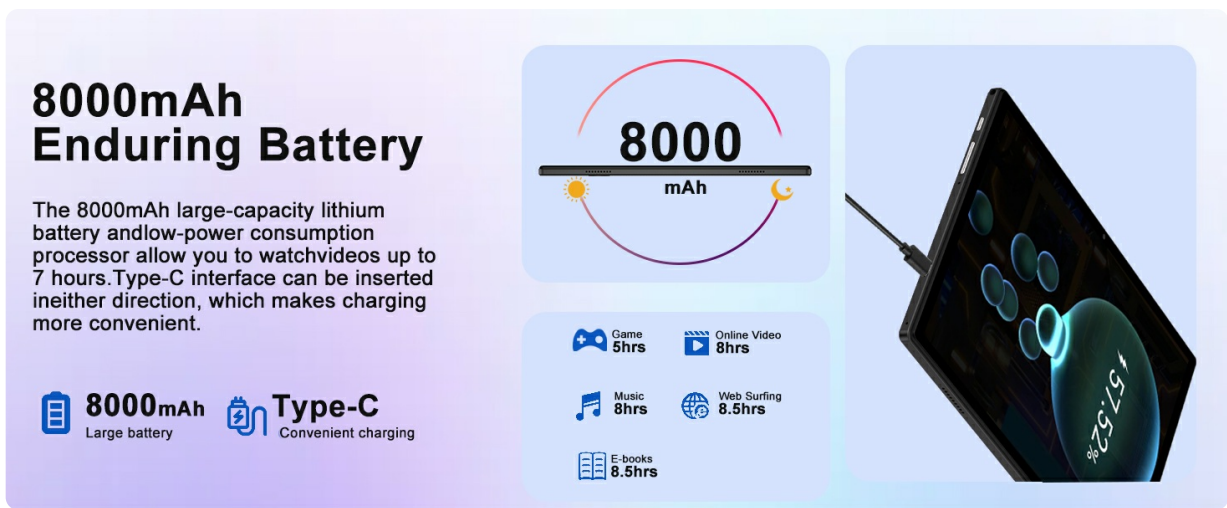 


Figure 3.1: Tablet Charging Illustration.

3.2 Powering On/Off

- To power on: Press and hold the Power button until the screen lights up.
- To power off: Press and hold the Power button, then select "Power off" from the options.
- To restart: Press and hold the Power button, then select "Restart" from the options.

3.3 Connecting Keyboard and Mouse

The Dghrti TAB30 supports external Bluetooth keyboard and wireless mouse for enhanced productivity.

- **Bluetooth Keyboard:** Turn on the keyboard and put it into pairing mode (refer to keyboard's specific instructions). On the tablet, go to *Settings > Connected devices > Bluetooth*, turn on Bluetooth, and select the keyboard from the list to pair.
- **Wireless Mouse:** Insert the USB receiver of the wireless mouse into the tablet's USB-C port using an OTG adapter if necessary. The tablet should automatically detect the mouse.

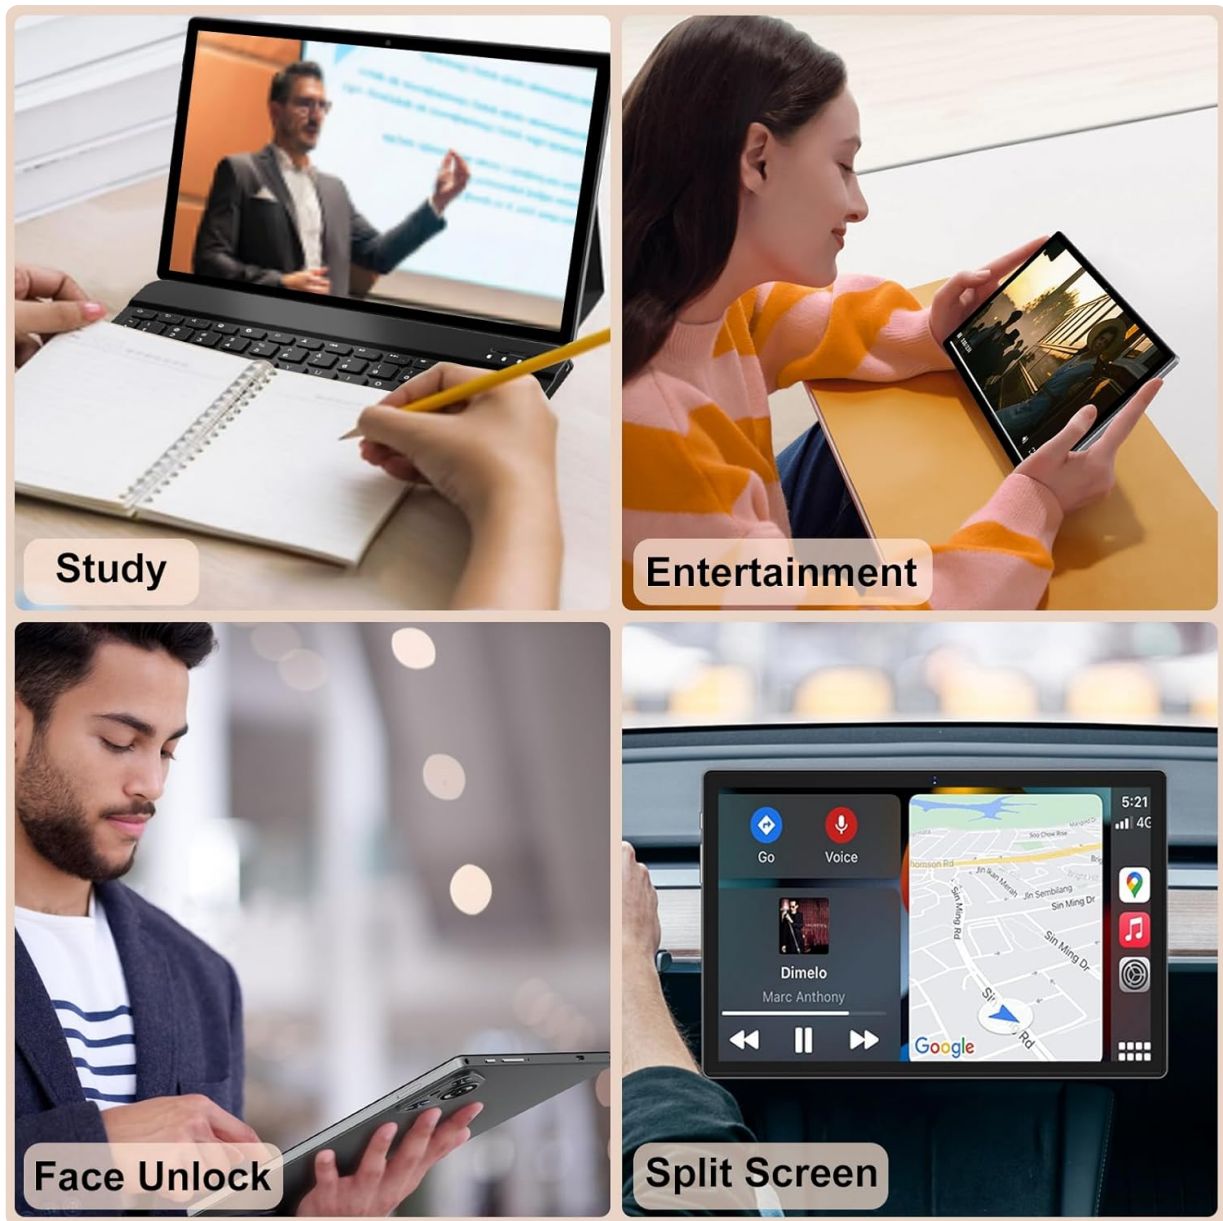 


Figure 3.2: Tablet with Keyboard and Mouse Setup.

3.4 Wi-Fi and Network Setup

To connect to the internet:

1. Go to *Settings > Network & internet > Wi-Fi*
2. Turn on Wi-Fi.
3. Select your desired Wi-Fi network from the list.
4. Enter the password if prompted and tap "Connect".

4. OPERATING INSTRUCTIONS

4.1 Basic Navigation

The tablet features a 10.1-inch touchscreen for intuitive interaction:

- **Tap:** Select items, open apps, or press buttons.
- **Swipe:** Scroll through pages, home screens, or menus.
- **Pinch-to-Zoom:** Zoom in or out on images, web pages, or maps.
- **Long Press:** Access contextual menus or move icons.

4.2 Android 14 Features

The tablet runs on Android 14, offering enhanced performance and privacy features:

- **Multitasking:** Utilize split-screen mode for running two apps simultaneously.
- **Privacy and Security:** Manage app permissions and data access through the Privacy Dashboard in Settings.
- **UI Customization:** Personalize your interface with new themes and widgets.



Figure 4.1: Android 14 Key Features.

4.3 Camera Usage

The tablet is equipped with 8MP rear and 5MP front cameras.

- Open the Camera app from the home screen or app drawer.
- Switch between front and rear cameras using the camera icon.
- Tap the shutter button to take photos or start/stop video recording.



Figure 4.2: Camera Features and Usage.

4.4 Media Consumption

Enjoy videos, music, and games with the tablet's vibrant display and dual stereo speakers.

- **Video:** Supports Widevine L1 for high-definition streaming on platforms like Netflix and YouTube.
- **Audio:** Dual stereo speakers provide clear and immersive sound.

Stereo Dual Speaker

Revitalize Your Ears With Amazing Sound, Harmonious And Clear With Stereo Dual Speakers. Lets You Sink Into It.



Figure 4.3: Stereo Dual Speaker System.

4.5 Storage Expansion

The tablet comes with 128GB ROM and supports up to 1TB additional expansion via a Micro SD card.

- Locate the Micro SD card slot on the side of the tablet.
- Insert the Micro SD card gently until it clicks into place.
- The tablet will prompt you to format the card for use.

Endless Space, Effortless Choices.

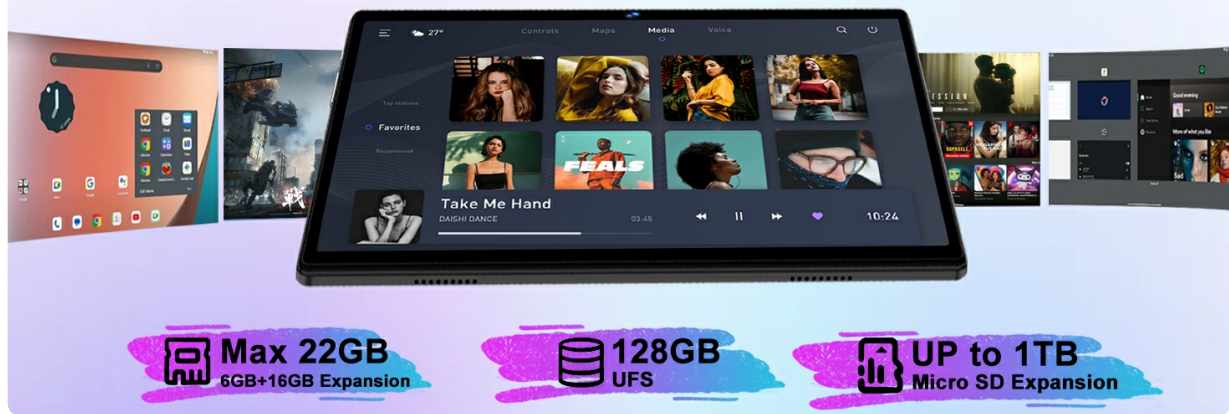 


Figure 4.4: Storage and Memory Overview.

5. MAINTENANCE

5.1 Cleaning the Tablet

- Use a soft, lint-free cloth to clean the screen and body.
- For stubborn smudges, slightly dampen the cloth with water or a screen cleaner.
- Avoid using harsh chemicals or abrasive materials.

5.2 Battery Care

- Avoid extreme temperatures, both hot and cold, as they can degrade battery life.
- Do not let the battery completely drain frequently.
- Use the original charger and cable for optimal charging.

5.3 Software Updates

Regularly check for and install software updates to ensure optimal performance, security, and access to new features.

- Go to *Settings > System > System update*
- Follow the on-screen instructions to download and install any available updates.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Tablet won't turn on	Low battery; System crash	Charge the tablet for at least 30 minutes. Press and hold the Power button for 10-15 seconds to force restart.
Wi-Fi connection issues	Incorrect password; Router issue; Tablet Wi-Fi off	Verify Wi-Fi password. Restart your Wi-Fi router. Ensure Wi-Fi is enabled in tablet settings.
Slow performance	Too many apps running; Low storage; Outdated software	Close unused apps. Clear cache. Free up storage space. Check for system updates.
Screen not responding	Temporary software glitch	Force restart the tablet by holding the Power button.

7. SPECIFICATIONS

Feature	Detail
Model Name	TAB30
Operating System	Android 14
Screen Size	10.1 Inches
Screen Resolution	1280 x 800 pixels
Processor	2 GHz Octa-Core (Unisoc T606)
RAM	22 GB (6GB + 16GB Expansion)
Internal Storage (ROM)	128 GB
Expandable Storage	Up to 1 TB (Micro SD)
Battery Capacity	8000 mAh
Rear Camera	8 MP
Front Camera	5 MP
Wireless Connectivity	802.11a/b/g/n/ac Wi-Fi, BT5.0, GPS
Dimensions (LxWxH)	9.53 x 6.34 x 0.31 inches
Item Weight	1.06 pounds

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included in your product packaging or visit the official Dghrti website. If you encounter any issues not covered in this manual, please contact Dghrti customer service for assistance.

Note on Videos: No official product videos from the seller were available for embedding in this manual. The provided video was created by a customer and therefore not included as per instructions.

