

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [MUNEFE](#) /

› [MUNEFE Manual Lubricating Oil Pump User Manual](#)

MUNEFE MUNEFEgpayxn7zse

MUNEFE Manual Lubricating Oil Pump User Manual

Model: MUNEFEgpayxn7zse

1. PRODUCT OVERVIEW

The MUNEFE Manual Lubricating Oil Pump is a robust and efficient device designed for precise lubrication in various industrial applications. Constructed from high-quality metal, it ensures durability and resistance to wear. This pump is ideal for use with punching machines, lathes, cutting machines, and milling machines, providing efficient oil distribution to enhance machine longevity and performance.

Its manual operation allows for precise control over lubrication, and it can be integrated with a throttling distributor for a comprehensive lubrication setup. The pump supports oils with viscosities ranging from N20 to N1000 and features high-quality seals to minimize leakage.

Key Features:

- Robust Construction:** Made from high-quality metal for durability and wear resistance.
- Versatile Applications:** Suitable for punching machines, lathes, cutting machines, and milling machines.
- Efficient Manual Operation:** Hand-operated plunger mechanism for precise oil expulsion and retraction.
- Customizable Lubrication:** Integrates with throttling distributors and supports a wide range of oil viscosities (N20-N1000).
- Leak-Resistant Design:** Equipped with high-quality seals to prevent leaks and ensure clean operation.
- Dual Outlet Ports:** Features two discharge ports (left and right) for flexible setup.

2. SPECIFICATIONS

Attribute	Value
Pump Material	Metal
Pump Shaft Position	Vertical Side
Impeller Suction Method	Single Suction
Drive Mode	Manual

Transmission Medium	Oil
Discharge Capacity	8 ml/min
Maximum Discharge Pressure	15 kgf/cm ²
Capacity	500 CC
Discharge Port	Two ports (Left & Right)
Weight	949 g
Package Dimensions	23 x 17 x 14 cm
Model Number	MUNEEgpayxn7zse
ASIN	B0D9BWH3XF

3. PACKAGE CONTENTS

The package includes the following items:

- 1 x Manual Lubrication Pump

Note: The manufacturer states that new and old types of this product may be sent randomly.

4. SETUP AND INSTALLATION

Proper setup is crucial for the optimal performance and longevity of your manual lubricating oil pump. Follow these steps for installation:

- 1. Choose Mounting Location:** Select a stable and accessible location on or near the machinery that requires lubrication. Ensure the pump is positioned vertically as per its design.
- 2. Secure the Pump:** Use appropriate fasteners (not included) to securely mount the pump to the chosen surface. Ensure it is firmly attached to prevent movement during operation.
- 3. Connect Outlet Hoses:** Connect the lubrication hoses (not included) to the two discharge ports (left and right) of the pump. Ensure connections are tight to prevent leaks.
- 4. Route Hoses:** Route the hoses to the lubrication points on your machinery. Ensure hoses are not kinked or obstructed.
- 5. Fill with Lubricant:** Unscrew the top cap of the pump reservoir. Carefully pour the appropriate lubricating oil (viscosity N20-N1000) into the reservoir. Do not overfill. Replace the cap securely.
- 6. Initial Priming (Optional):** Before first use, you may need to operate the handle a few times to prime the pump and ensure oil flows through the system.



Figure 4.1: Top view of the pump with the cap and filter removed, illustrating the reservoir opening for filling lubricant.



Figure 4.2: Detail of the brass fitting, which serves as an outlet port for lubrication.

5. OPERATING INSTRUCTIONS

The manual lubricating oil pump is designed for straightforward operation. Follow these steps to lubricate your machinery:

1. **Check Oil Level:** Before operation, visually inspect the oil level through the transparent sight glass on the side of the pump. Refill if necessary (refer to Section 4).
2. **Operate the Handle:** Grasp the pump handle firmly.
3. **Push Down:** Push the handle down to its full extent. This action expels oil from the cylinder through the discharge ports to the lubrication points.
4. **Release:** Release the handle. The spring mechanism will pull the plunger back, drawing more oil into the cylinder from the reservoir.
5. **Repeat:** Repeat steps 3 and 4 as many times as required to deliver the desired amount of lubricant to your machinery. The discharge capacity is approximately 8 ml per stroke.

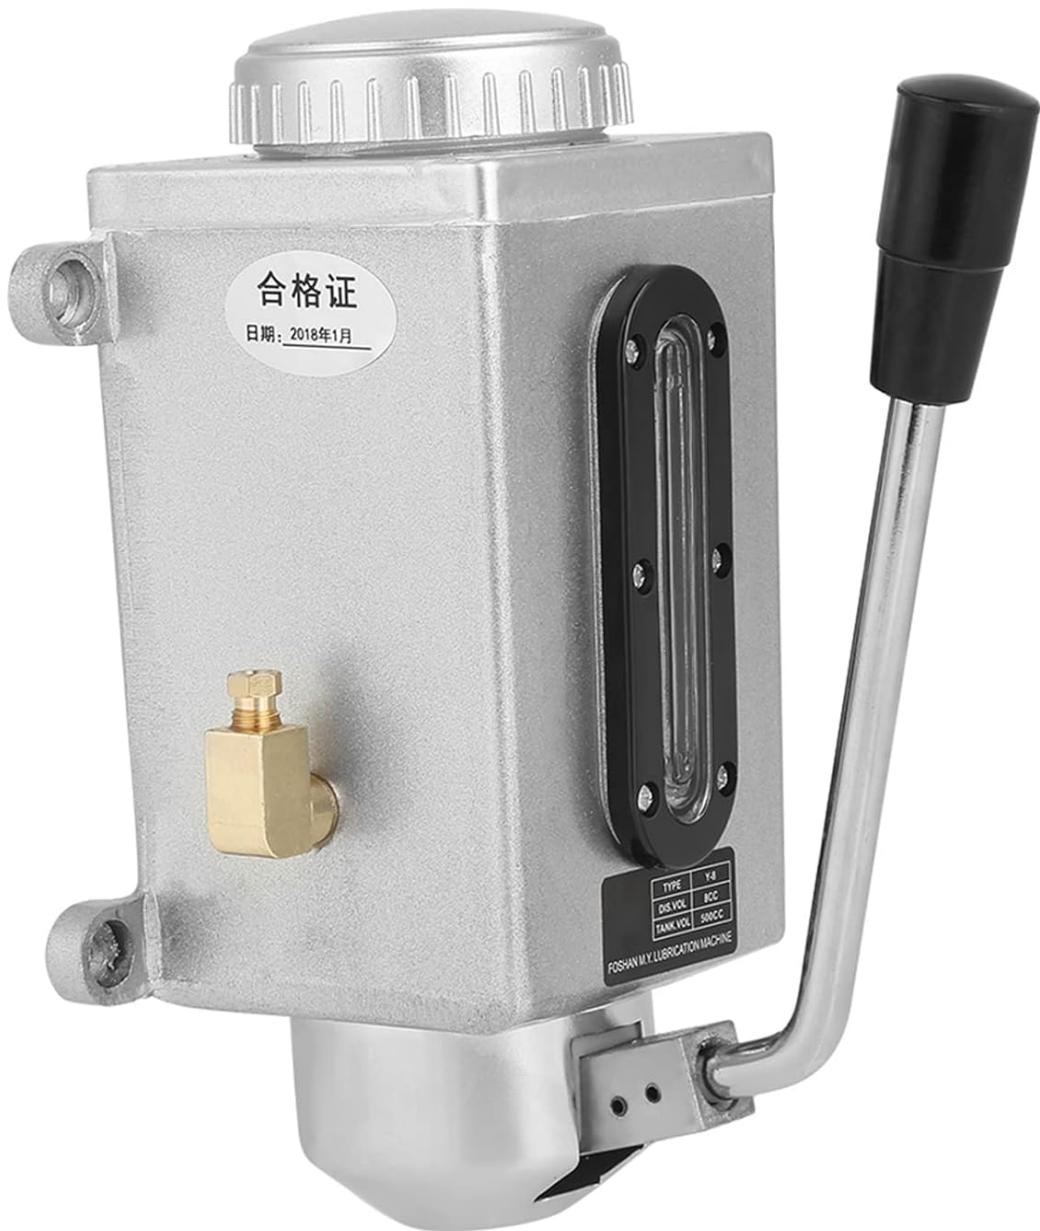


Figure 5.1: The manual oil pump, showing the handle used for operation.

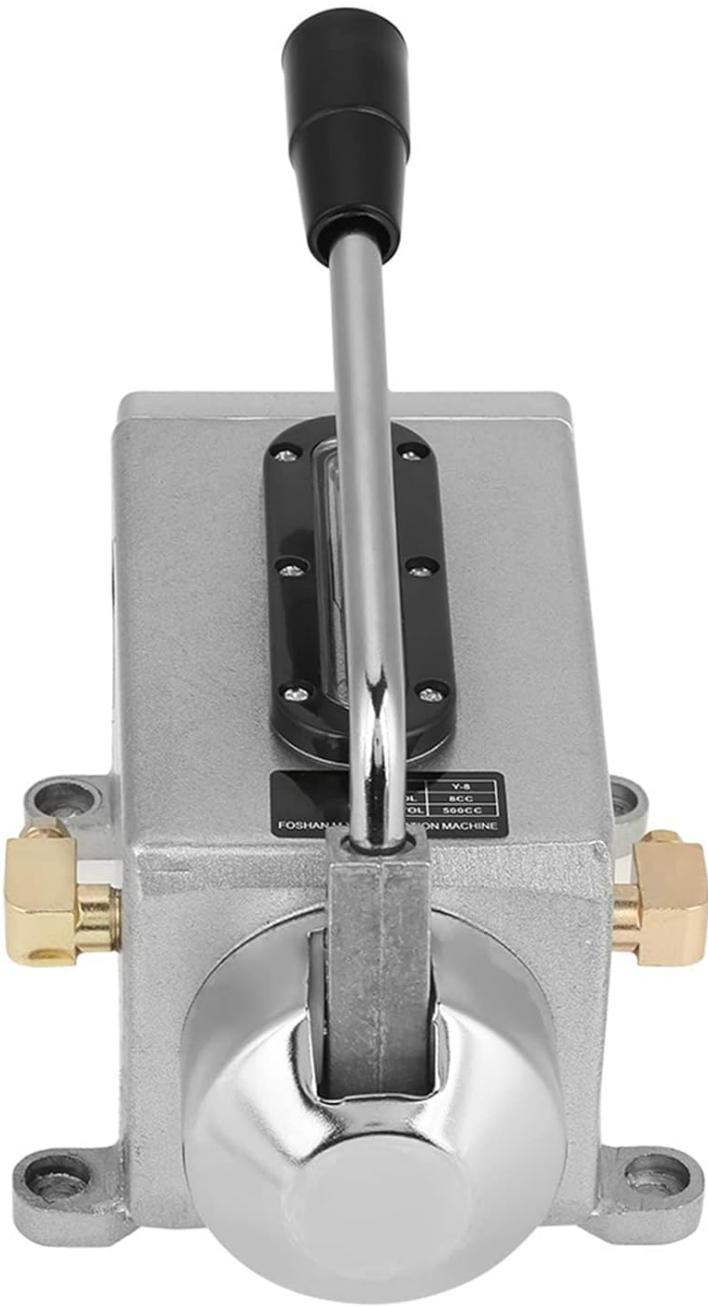


Figure 5.2: View illustrating the dual discharge ports and the handle mechanism.

6. MAINTENANCE

Regular maintenance ensures the longevity and reliable performance of your lubricating oil pump.

- **Oil Level Check:** Routinely check the oil level in the reservoir using the sight glass. Refill promptly when low to prevent air from entering the system.
- **Lubricant Quality:** Always use clean, high-quality lubricating oil within the recommended viscosity range (N20-N1000). Contaminated oil can damage the pump and the machinery it lubricates.
- **Cleanliness:** Keep the exterior of the pump clean. Wipe away any spilled oil immediately to prevent accumulation of dirt and debris.
- **Check for Leaks:** Periodically inspect all connections and seals for any signs of oil leakage. Tighten connections or replace seals if leaks are detected. The pump is designed with high-quality seals to minimize leakage, but regular checks are still important.
- **Filter Inspection:** If your pump model includes an internal filter (as shown in some images), periodically inspect and

clean or replace it to ensure proper oil flow and prevent contaminants from reaching the pump mechanism.



Figure 6.1: View showing the internal filter, which should be inspected during maintenance.

7. TROUBLESHOOTING

If you encounter issues with your manual lubricating oil pump, refer to the following common problems and their solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

No oil discharge or low pressure	<ul style="list-style-type: none"> ◦ Low oil level in reservoir ◦ Air in the system ◦ Clogged filter ◦ Kinked or blocked discharge hose ◦ Loose connections/leaks 	<ul style="list-style-type: none"> ◦ Refill reservoir to appropriate level. ◦ Operate pump handle repeatedly to purge air. ◦ Inspect and clean/replace filter. ◦ Check and clear any obstructions in hoses. ◦ Tighten all connections; inspect and replace seals if damaged.
Oil leakage from pump	<ul style="list-style-type: none"> ◦ Loose connections ◦ Damaged seals ◦ Cracked reservoir 	<ul style="list-style-type: none"> ◦ Tighten all fittings and connections. ◦ Inspect and replace any worn or damaged seals. ◦ If reservoir is cracked, the unit may need replacement.
Handle is stiff or difficult to operate	<ul style="list-style-type: none"> ◦ Incorrect oil viscosity ◦ Internal debris 	<ul style="list-style-type: none"> ◦ Ensure correct oil viscosity (N20-N1000) is used. ◦ Drain oil, clean reservoir, and refill with fresh, clean oil.

8. WARRANTY AND SUPPORT

For information regarding warranty coverage, technical support, or replacement parts, please refer to the seller's information on the product purchase page or contact the manufacturer directly. Keep your purchase receipt as proof of purchase.

Manufacturer: MUNEF

9. PRODUCT IMAGES

Manual Oil Pump

Products use high-quality seals, not easy to leak

UNIQUE BACK, MOUTH, TAILSWING, GAVELIT YOUR MA'S GRASSHOPPER ASSAULTANT. 100% HUMAN MADE. 100% HUMAN MADE. 100% HUMAN MADE.



Image 9.1: The manual oil pump in an industrial context, emphasizing its purpose.



Image 9.2: Key dimensions of the pump for installation planning.

Lubricating Oil Pump

1pc Lubricating Manual Oil Pump Hand Lubrication 500CC CNC 4mm Double Outlet Port

BENEFITS OF NINBLE BRINGS TO YOUR LINING IS MADE OF SUPER FINE, FOGASDWEET, WITH HIGHLY DURABLE, EASY TO CLEAN, EASY TO MAINTAIN, AND EASY TO USE. UNIQUE BACK-MOUTH TIMING, CAN LET YOUR AIR GRASS PAPER APPARATUS, "MIST" DROPS TO THE GROUND, EASY TO USE.



Image 9.3: Another view of the pump, highlighting its function as a lubricating oil pump.



Image 9.4: Angled perspective of the pump, showcasing its design and handle.

© 2024 MUNEF. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.