

[Manuals.plus](#) /

› [Febreze](#) /

› Febreze Plug Scent Booster Instruction Manual

Febreze P_11969

Febreze Plug Scent Booster Instruction Manual

Model: P_11969

1. INTRODUCTION AND OVERVIEW

The Febreze Plug Scent Booster is an innovative oil diffuser designed to provide continuous fragrance and enhanced scent control in your home. This device works seamlessly with all Febreze PLUG refills, offering adjustable scent intensity and a unique Boost button for an immediate burst of freshness. Its sleek design allows for flexible placement in various rooms, ensuring your space remains fresh and inviting.



Figure 1: Febreze Plug Scent Booster device and its packaging. The device is white with a textured top section and a smooth base, accompanied by its power adapter and cord.

- **Continuous Scent:** Provides consistent fragrance throughout your space.
- **Adjustable Intensity:** Features three scent intensity settings (low, medium, high) and an off setting for personalized control.
- **Boost Button:** Delivers 40 minutes of increased scent intensity when an extra burst of freshness is desired.
- **Flexible Placement:** Equipped with a 6-foot cord, allowing the device to be placed on surfaces rather than directly in an outlet.
- **Refill Compatibility:** Designed to work with all existing Febreze PLUG refills.
- **Refill Reminder Light:** Indicates when a refill is nearing empty, ensuring continuous freshness.

2. SAFETY INFORMATION

Please read and adhere to the following safety guidelines to ensure safe operation of your Febreze Plug Scent Booster:

- Do not use if the scent causes irritation. Discontinue use immediately if adverse reactions occur.

- Keep out of reach of children and pets.
- Do not immerse the device in water or any other liquid.
- Use only with Febreze PLUG refills. Using other refills may result in fire, electric shock, or injury.
- Do not place the device near heat sources or in direct sunlight.
- Ensure the device is unplugged before cleaning or replacing refills.

3. SETUP

Follow these steps to set up your Febreze Plug Scent Booster:

1. **Unpack the Device:** Carefully remove the Scent Booster device, power adapter, and cord from the packaging.
2. **Prepare the Refill:** Take your Febreze PLUG refill (not included) and remove the protective caps from both wicks.
3. **Insert Refill:** Separate the top cover from the base of the Scent Booster device. Insert the Febreze PLUG refill into the designated slots in the base. Ensure it clicks securely into place.



Figure 2: A user demonstrating how to insert a Febreze PLUG refill into the base of the Scent Booster device. The refill is shown being placed into the two openings on the base.

4. **Reassemble Device:** Place the top cover back onto the base, aligning it properly until it snaps into position.
5. **Connect Power:** Plug the power adapter into a standard electrical outlet. Connect the other end of the cord to the port on the Febreze Plug Scent Booster.

4. OPERATING INSTRUCTIONS

Your Febreze Plug Scent Booster offers customizable scent delivery:

1. **Adjust Scent Intensity:** Use the slider switch located on the side of the device to select your desired scent intensity. There are three levels: low, medium, and high. You can also slide it to the 'off' position to temporarily stop scent diffusion.

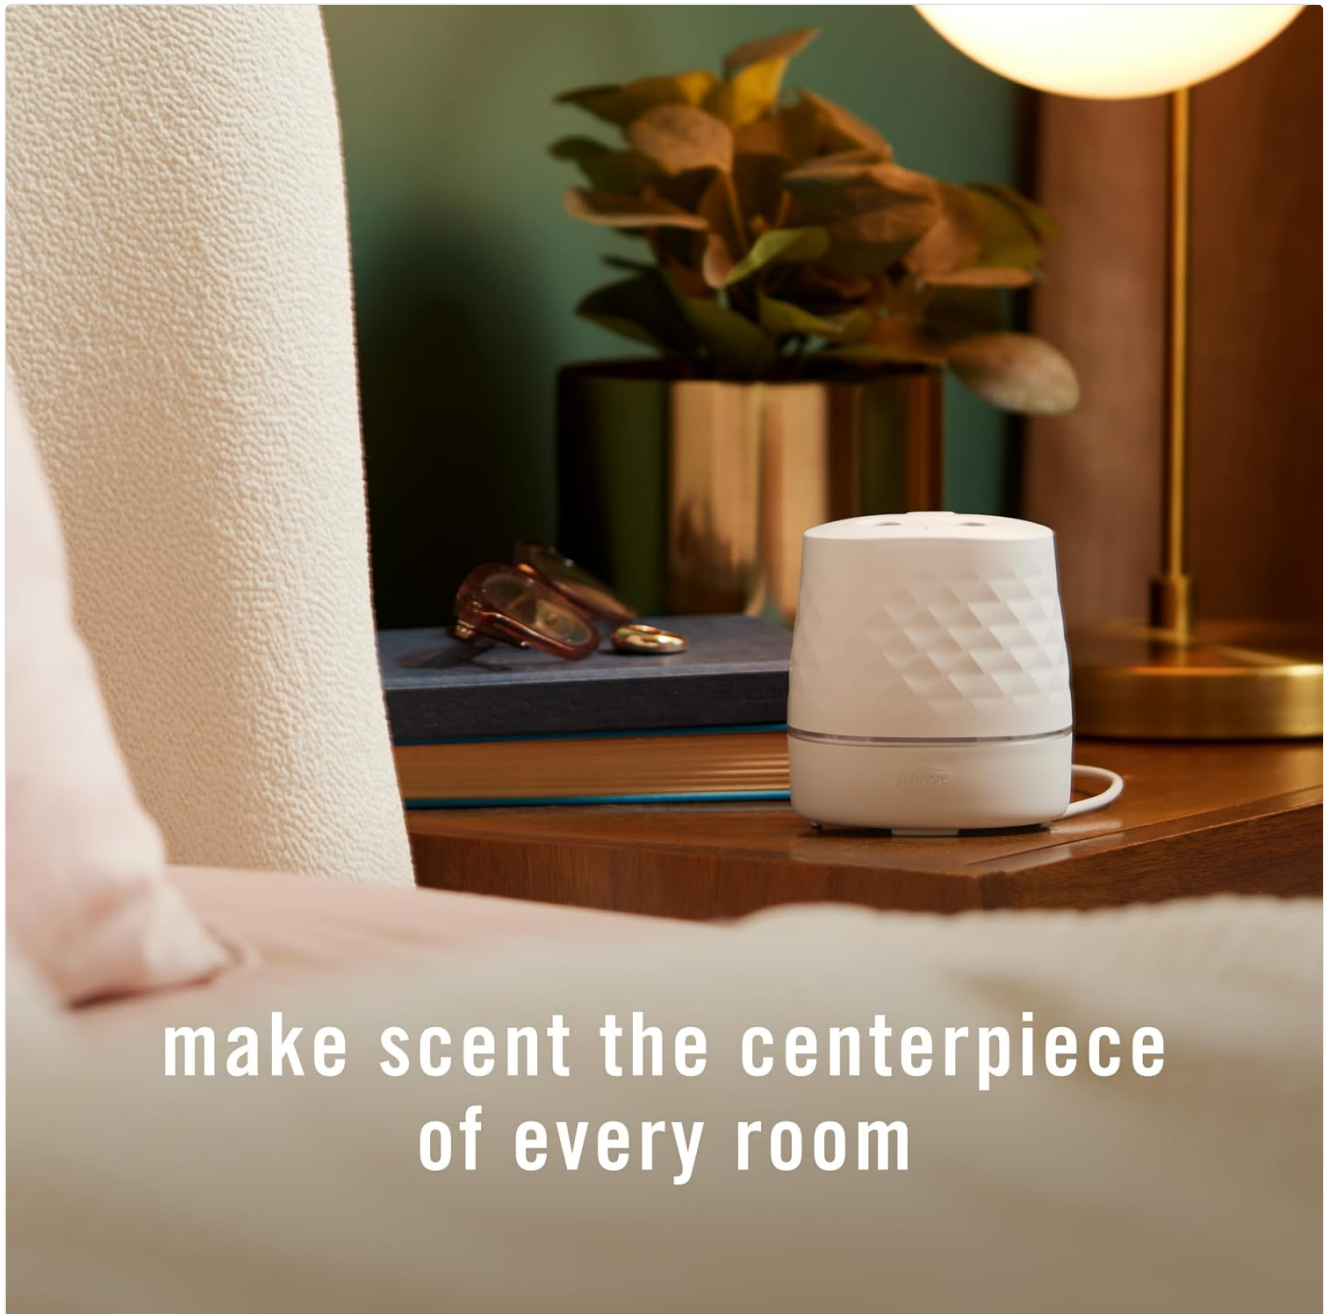


Figure 3: A close-up of the Febreze Plug Scent Booster showing the slider switch for adjusting scent intensity, with indicators for low, medium, high, and off settings.

2. **Activate Boost Mode:** For an immediate and intensified burst of freshness, press the 'BOOST' button located on the top of the device. This will release a stronger scent for approximately 40 minutes.



Figure 4: A hand pressing the 'BOOST' button on the top of the Febreze Plug Scent Booster, indicating activation of the intensified scent release.

5. MAINTENANCE

Proper maintenance ensures optimal performance and longevity of your Scent Booster:

- **Refill Reminder:** The device features a refill reminder light (a small blue light on the top surface) that will illuminate or flash when the Febreze PLUG refill is low or empty. This indicates it's time to replace the refill.

low, medium, high or even off!



Figure 5: The Febreze Plug Scent Booster showing the small indicator light on its top surface, which serves as a refill reminder.

- **Replacing Refills:** When the refill reminder light activates, unplug the device, remove the top cover, and carefully pull out the empty refill. Insert a new Febreze PLUG refill as described in the Setup section.
- **Cleaning:** To clean the exterior of the device, wipe it with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.

6. TROUBLESHOOTING

If you encounter any issues with your Febreze Plug Scent Booster, refer to the following common solutions:

- **No Scent or Weak Scent:**
 - Ensure the device is properly plugged into a working electrical outlet.
 - Check the scent intensity setting; slide it to a higher level if needed.
 - Verify that the Febreze PLUG refill is not empty. Replace if necessary (refer to the Refill Reminder light).
 - Ensure the refill caps were fully removed before insertion.
- **Device Not Turning On:**

- Confirm the power adapter is securely connected to both the device and the wall outlet.
- Try plugging the device into a different outlet to rule out an issue with the power source.

• **Scent Causes Irritation:**

- If the scent causes irritation, immediately discontinue use.
- Consider using a different Febreze PLUG scent or adjusting the intensity to a lower setting.

7. SPECIFICATIONS

Feature	Detail
Brand	Febreze
Model Number	P_11969
Product Dimensions	4.44 x 5.43 x 4.25 inches
Item Weight	12.63 ounces
Material	Plastic
Color	White
Cord Length	6 feet
Scent Control	Adjustable (Low, Medium, High, Off)
Boost Function	40 minutes of increased intensity
Refill Compatibility	All Febreze PLUG refills

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Febreze website. Keep your purchase receipt as proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question