

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Omethey](#) /

› [Omethey 7.0 Cu ft Extra Large Home Safe Box Fireproof Waterproof Digital Home Security Safe Box User Manual](#)

## Omethey KM-85

# Omethey 7.0 Cu ft Extra Large Home Safe Box

Model: KM-85

User Instruction Manual

## INTRODUCTION

Thank you for choosing the Omethey 7.0 Cu ft Extra Large Home Safe Box. This safe is designed to provide secure storage for your valuables, including documents, jewelry, cash, and firearms. It features a robust alloy steel construction, an electronic combination lock, and advanced security features such as a dual alarm system. Please read this manual thoroughly before installation and operation to ensure proper use and maximum security.



Image: The Omethey 7.0 Cu ft safe box, illustrating its dual-door design, deposit slot, and spacious interior for various valuables.



Image: Key features of the Omethey 7.0 Cu ft safe, including backlit keypad, mute mode, emergency keys, drop slot, dual doors, and dual alarm.

## SAFETY INFORMATION

- Always keep emergency keys in a secure location away from the safe and not inside the safe.
- Do not share your combination code with unauthorized individuals.
- Ensure the safe is securely mounted to a wall or floor to prevent unauthorized removal.
- Avoid exposing the safe to extreme temperatures or humidity.
- Keep children away from the safe and its contents.

## PACKAGE CONTENTS

Verify that all components are present in the package:

- 1 x Omethey 7.0 Cu ft Safe Box
- 4 x Emergency Keys
- 1 x USB Type-C Cable (for emergency power)
- 4 x Non-slip Foot Mats
- 6 x Mounting Screws (Expansion Bolts)
- 1 x User Manual (this document)



Image: A visual representation of all items included in the safe box package.

## PRODUCT OVERVIEW

The Omethey 7.0 Cu ft safe box is designed with multiple features for enhanced security and convenience:

- **Dual Door Design:** Allows separate access and operation for upper and lower compartments.
- **Electronic Combination Lock:** Secure digital keypad for setting and entering codes.
- **Backlit Keypad:** Ensures visibility and ease of use in low-light conditions.
- **Deposit Slot:** Conveniently located on the upper door for quick deposits without opening the main compartment.
- **Metal Storage Box:** An internal compartment for smaller, sensitive items.
- **Soft Lining:** Protects valuables from scratches and damage inside the safe.
- **LED Light:** Illuminates the interior when the door is opened for better visibility.
- **Solid Locking Bolts:** Five robust bolts provide strong resistance against prying attempts.
- **Adjustable Shelves:** Customizable interior space to accommodate various item sizes.

# PRODUCT DETAILS

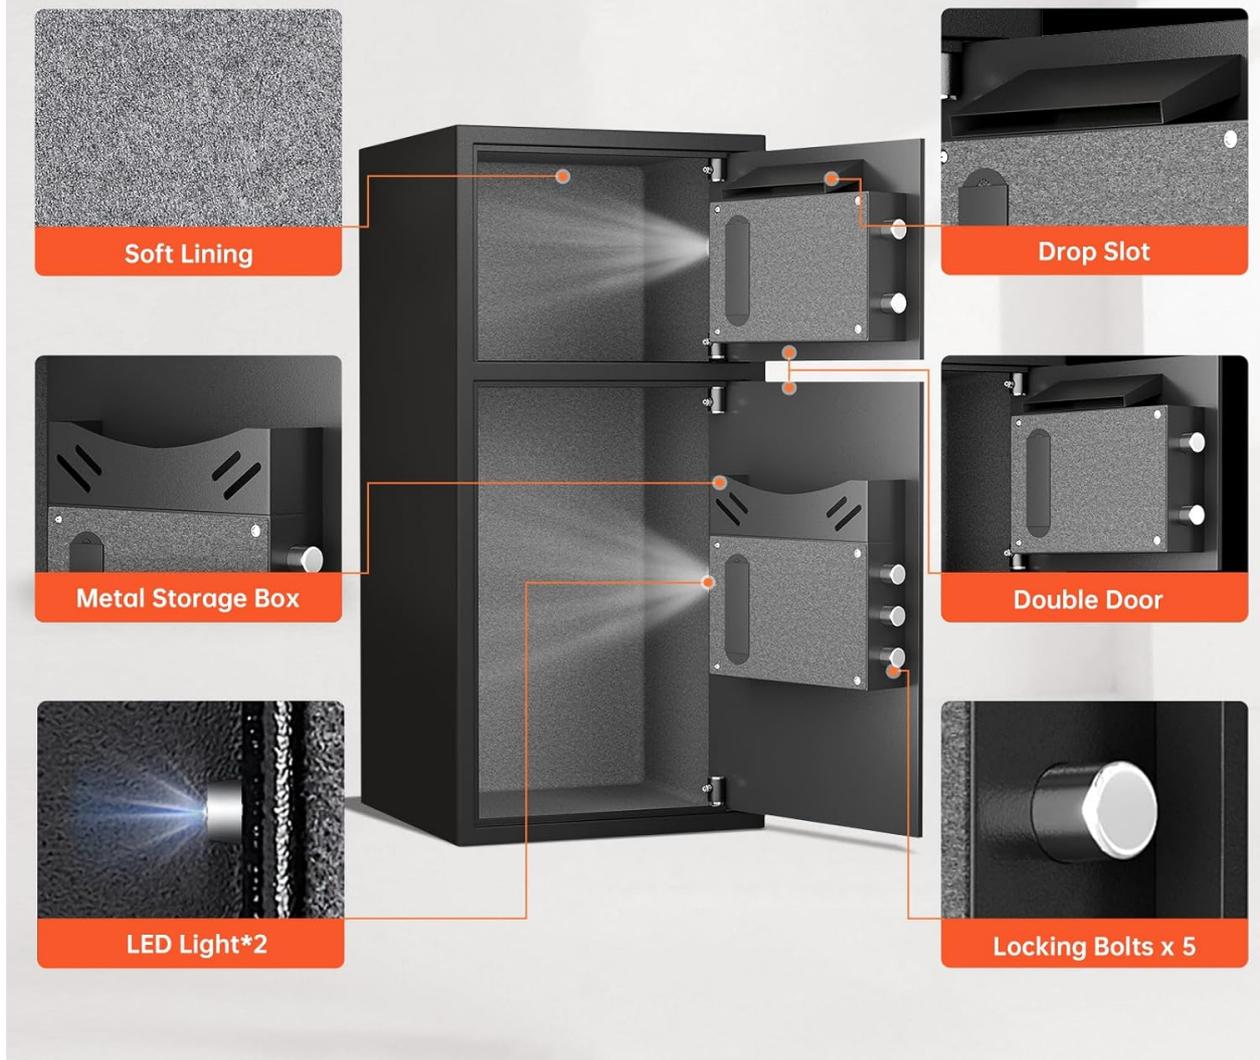


Image: Close-up views highlighting the safe's internal features and construction details.

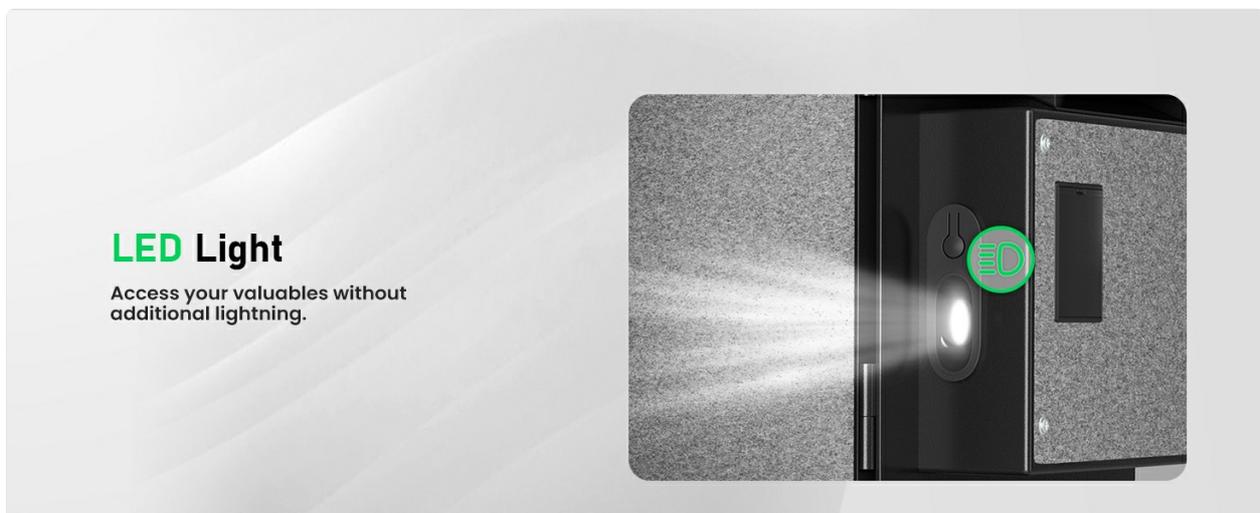


Image: The convenient drop slot feature, allowing quick deposits without opening the main safe door.

## Drop Slot

Quickly drop your money, passport, without opening the safe.



Image: The adjustable shelves inside the safe, illustrating how they can be configured to suit various storage needs.

## SETUP AND INSTALLATION

### Initial Setup

1. **Unpacking:** Carefully remove the safe from its packaging. Inspect for any damage.
2. **Battery Installation:** The safe requires 4 AA batteries (not included) for the electronic keypad. Locate the battery compartment on the back of the keypad or inside the door. Insert batteries, ensuring correct polarity.
3. **First Opening:** Use one of the emergency keys to open the safe for the first time. Insert the key into the emergency lock, turn it, and then turn the knob to open the door.
4. **Retrieve User Manual:** The user manual and other accessories are typically stored inside the safe.

### Mounting the Safe

For enhanced security, it is highly recommended to bolt the safe to a floor, wall, or inside a cabinet. Pre-drilled mounting holes are provided.

1. **Choose Location:** Select a discreet and secure location for the safe.
2. **Mark Drilling Points:** Position the safe in the desired location. Use a pencil to mark the drilling points through the pre-drilled holes at the back and/or bottom of the safe.
3. **Drill Holes:** Move the safe and drill holes at the marked points using an appropriate drill bit for your wall/floor material.
4. **Secure the Safe:** Align the safe with the drilled holes. Insert the provided expansion bolts through the safe's holes and into the drilled holes. Tighten the bolts securely.



Image: Examples of suitable locations for installing the safe, including bedrooms, offices, and closets.

## OPERATING INSTRUCTIONS

### Opening the Safe

The safe can be opened in three ways:

1. **Emergency Key:** Insert the emergency key into the keyhole, turn it clockwise, then turn the knob clockwise to open.
2. **Password:** Enter your 6-digit password on the keypad, then turn the knob clockwise to open.
3. **USB Type-C + Password:** If batteries are depleted, connect a USB Type-C cable (connected to a power bank, not included) to the port on the keypad. Enter your 6-digit password, then turn the knob clockwise to open.


# 3 WAYS OPEN




**U.S. Design Patent**  
**Registration Number:**  
**VA 2-323-750**



Emergency key+turn knob

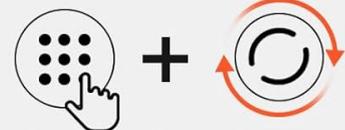

Password+turn knob

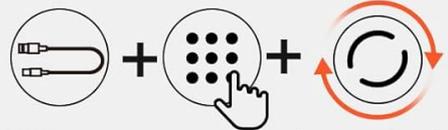

USB type-c+password+turn knob

Image: Visual guide to the three methods of opening the safe: using the emergency key, the digital password, or external USB power with the password.

## Setting/Changing Password

1. With the safe door open, press the internal reset button (usually a small red button on the inside of the door or near the hinge).
2. The keypad will beep, and the indicator light will flash.
3. Enter your new 6-digit password on the keypad.
4. Press the '#' key to confirm. The safe will beep to confirm the new password.

## Mute Function

To activate or deactivate the mute function (silence keypad beeps):

- Press the '\*' key on the keypad.
- Then press the '1' key.
- The safe will indicate whether the mute function is activated or deactivated.

## Dual Alarm System

The safe is equipped with a dual alarm system that activates under specific conditions:

- **Incorrect Password:** If 3 consecutive incorrect passwords are entered.
- **Violent Vibrations:** If the safe detects significant physical shock or movement.

When activated, the alarm will sound at approximately 70 decibels for 60 seconds. To stop the alarm, enter the correct password.



Image: Details on how to use the mute function and an explanation of the dual alarm system's activation and sound level.

## MAINTENANCE

- **Cleaning:** Wipe the safe's exterior with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the low battery indicator appears on the keypad or if the keypad becomes unresponsive. Always use new, high-quality AA batteries.
- **Keypad Care:** Keep the keypad dry and clean. Avoid pressing keys with excessive force.
- **Hinge Lubrication:** Periodically apply a small amount of lubricant to the door hinges to ensure smooth

operation.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Safe does not open with password.	Incorrect password entered; Low batteries; Keypad malfunction.	Re-enter password carefully; Replace batteries; Use emergency key; Contact customer support.
Keypad is unresponsive.	Dead or low batteries; Loose battery connection.	Replace batteries; Ensure batteries are correctly inserted; Use USB Type-C for emergency power.
Alarm sounds unexpectedly.	Incorrect password attempts; Physical shock to the safe.	Enter correct password to disarm; Avoid bumping or moving the safe.
Door is stiff or difficult to open/close.	Hinges need lubrication; Obstruction.	Lubricate hinges; Check for any obstructions around the door frame.

## SPECIFICATIONS

- **Model:** KM-85
- **External Dimensions (D x W x H):** 14.17" x 15.75" x 33.46"
- **Capacity:** 7.0 Cubic Feet
- **Material:** Alloy Steel
- **Lock Type:** Electronic Combination Lock
- **Weight:** Approximately 52.7 lbs
- **Alarm System:** Dual (Audible & Vibration), 70dB
- **Water Resistance Level:** Waterproof
- **Power:** 4 x AA Batteries (not included)

# PRODUCT SIZE



Medicine



Pistol



Document



Money



Camera



Jewelry

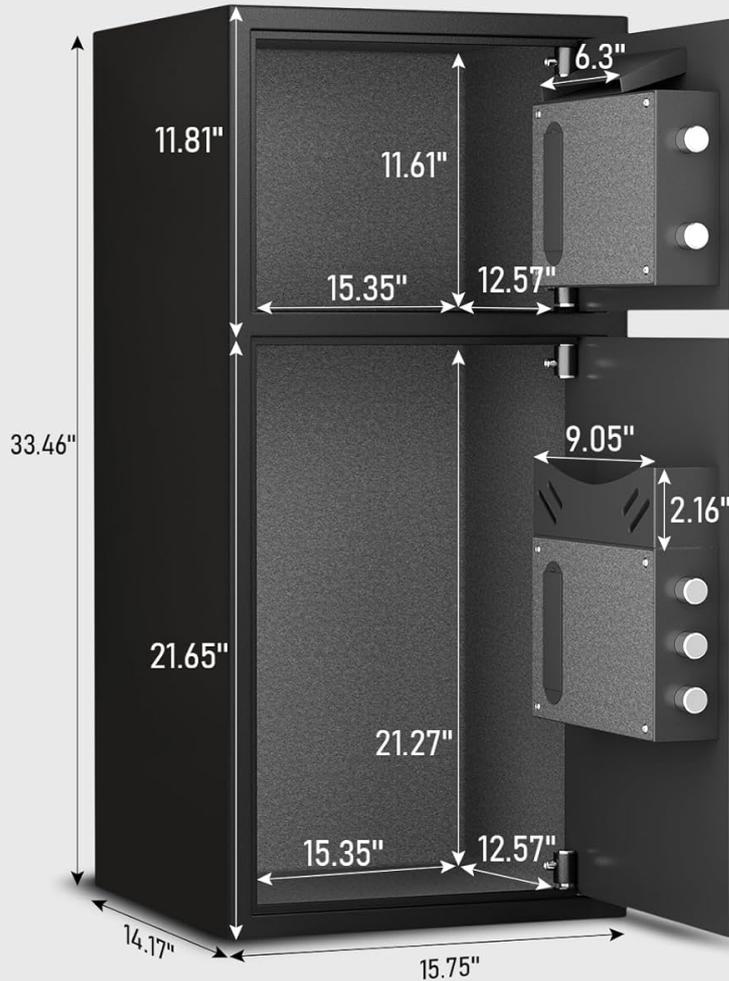


Image: Detailed dimensions of the safe, including external and internal measurements for both compartments.

## WARRANTY AND SUPPORT

Omethey provides lifetime customer service for each safe sold. If you encounter any issues or have questions regarding your Omethey safe, please do not hesitate to contact our customer service team. We are available 24/7 to assist you.

For support, please refer to the contact information provided on the Omethey official website or through your purchase platform.