

Maxima 09366100

Maxima Juicer Model 09366100 Instruction Manual

Your guide to safe and efficient operation

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Maxima Juicer Model 09366100. Please read all instructions carefully before operating the appliance and retain this manual for future reference.

The Maxima Juicer is designed for extracting juice from various fruits and vegetables, featuring two speed settings for optimal performance.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Ensure the appliance is placed on a stable, level, and dry surface.
- Do not immerse the motor base in water or any other liquid.
- Keep hands and utensils out of the feed chute during operation to prevent injury. Always use the food pusher provided.
- Unplug the juicer from the power outlet before assembling, disassembling, or cleaning.
- Do not operate the appliance with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any manner.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

3. SETUP

Before first use, wash all removable parts (filter, pulp container, juice spout, food pusher) in warm soapy water, rinse thoroughly, and dry.

1. Place the motor base on a flat, stable, and dry surface.
2. Assemble the juicer components according to the diagram. Ensure the stainless steel filter is securely in place.
3. Attach the pulp container to the side of the juicer.
4. Ensure the juice spout is correctly positioned to allow juice to flow into a collection glass.
5. Secure the locking arm to ensure all parts are firmly in place before plugging in the appliance.



Image: Maxima Juicer fully assembled, showing the main unit, pulp container, and juice spout.



Image: Close-up view of the locking arm, which secures the top cover and ensures safe operation.

4. OPERATING INSTRUCTIONS

Follow these steps for efficient juicing:

1. Wash fruits and vegetables thoroughly. For larger items, cut them into smaller pieces that fit comfortably into the feed chute. Remove any hard seeds or pits.
2. Place an empty glass or container under the juice spout to collect the extracted juice.
3. Plug the juicer into a suitable power outlet.
4. Turn on the machine using the power switch. Select the desired speed **Speed 1 (3000 RPM)** for softer fruits and vegetables, or **Speed 2 (7200 RPM)** for harder produce.
5. Gradually feed the prepared fruits and vegetables into the feed chute. Use the food pusher to gently guide them down. **Do not force food into the chute.**
6. The juicer will separate the juice from the pulp. Juice will flow into your glass, and pulp will collect in the pulp container.
7. Once juicing is complete, turn off the machine and unplug it from the power outlet.
8. For maximum juice yield, you may re-process the collected pulp once.



Image: Top view of the Maxima Juicer showing the open feed chute, where fruits and vegetables are inserted.



Image: Close-up of the control panel with power switch and speed settings, alongside the juice dispensing spout.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your juicer. Always unplug the appliance before cleaning.

1. Turn off and unplug the juicer from the power outlet.
2. Disassemble the removable parts: food pusher, top cover, stainless steel filter, pulp container, and juice spout.
3. Empty the pulp container.
4. Rinse the stainless steel filter under running water. Use the included cleaning brush to remove any stubborn pulp residue from the mesh. Ensure all pulp is removed from the filter for efficient juicing.
5. Wash the top cover, pulp container, juice spout, and food pusher in warm, soapy water. Rinse thoroughly and dry.
6. Wipe the motor base with a damp cloth. **Never immerse the motor base in water.**
7. Reassemble all dry parts. Store the juicer in a clean, dry place.



Image: Side view of the Maxima Juicer, highlighting the detachable pulp container for easy cleaning.

6. TROUBLESHOOTING

If you encounter issues with your Maxima Juicer, refer to the following common problems and solutions:

- **Juicer does not turn on:** Ensure the power cord is securely plugged into a working outlet. Check that the locking arm is fully engaged and the appliance is correctly assembled.
- **Low juice yield or excessive pulp:** The stainless steel filter may be clogged. Clean the filter thoroughly. Ensure fruits and vegetables are fresh and cut to appropriate sizes. Try re-processing the pulp.
- **Appliance stops during operation:** The juicer may have overheated. Turn off and unplug the appliance, allow it to cool down for at least 30 minutes before restarting. Ensure you are not overloading the machine.
- **Loud noise or vibration:** Ensure all parts are correctly assembled and the locking arm is secured. Check for any foreign objects in the feed chute or filter.

If the problem persists, contact Maxima customer support.

7. SPECIFICATIONS

Feature	Specification
Model Number	09366100
Net Weight	7 Kg
Pulp Container Capacity	5 L
Appliance Dimensions (W x D x H)	24 x 45 x 53 cm
Feed Chute Diameter	Ø 7.5 cm
Speeds	3000 RPM and 7200 RPM
Power Supply	230V / 50Hz / 1 Phase
Power Consumption	500W
Noise Level	70dB
Included Accessories	Cleaning brush
Manufacturer	Maxima

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact Maxima customer service directly. Ensure you have your model number (09366100) and proof of purchase available when contacting support.