

Lamshaw Galaxy Watch Ultra 47mm 3 Pack-Black+Gray+Blue+Connect Adapter

Lamshaw Quick Release Classic Watch Bands User Manual

Model: Galaxy Watch Ultra 47mm 3 Pack-Black+Gray+Blue+Connect Adapter
Brand: Lamshaw

PRODUCT OVERVIEW

This manual provides instructions for the Lamshaw Quick Release Classic Watch Bands, designed for the Galaxy Watch Ultra 47mm LTE Smartwatch. These bands are made from food-grade silicone material, offering durability, lightweight comfort, and sweat-proof properties for a comfortable wearing experience. The quick-release spring bars facilitate easy installation and removal without the need for additional tools.

The product includes a set of watch bands and a connect adapter. Please ensure your watch model is compatible with the Galaxy Watch Ultra 47mm LTE Smartwatch before use.



Image: Overview of the Lamshaw Quick Release Classic Watch Bands in black, gray, and blue, shown with the included connect adapters.

SETUP: BAND INSTALLATION

Installing the Lamshaw Quick Release Classic Watch Bands is a straightforward process due to their quick-release design. No special tools are required.

- 1. Prepare the Watch:** Ensure your Galaxy Watch Ultra 47mm is clean and free of debris where the band connects.

2. **Attach the Adapter (if separate):** If your bands come with a separate connect adapter, first attach the adapter to the watch. Align the adapter with the watch's lug holes and slide the quick-release pin into place until it clicks securely.
3. **Insert First End of Band:** Locate the quick-release pin on the back of the watch band. Insert one end of the pin into the corresponding lug hole on the watch (or adapter, if used).
4. **Compress and Secure:** While holding the first end in place, pull the quick-release lever to compress the pin. Carefully guide the other end of the pin into the opposite lug hole. Release the lever, ensuring the pin snaps securely into place. Gently tug on the band to confirm it is firmly attached.
5. **Repeat for Second Band:** Follow the same steps to attach the second half of the watch band.

Your browser does not support the video tag.

Video: Demonstration of how to install the Lamshaw Classic Watch Bands onto a smartwatch, showcasing the quick-release mechanism.



Image: Detailed view of the watch bands, highlighting the quick-release pins for easy attachment.

WEARING AND ADJUSTMENT

Once installed, the silicone watch bands are designed for comfortable daily wear and various activities.

- **Adjusting Fit:** Use the tang buckle to adjust the band to a comfortable and secure fit on your wrist. Ensure it is snug enough for accurate sensor readings from your smartwatch but not so tight as to restrict circulation.
- **Comfort:** The food-grade silicone material is skin-friendly and designed to be lightweight and sweat-proof, providing comfort during extended wear, including sports and exercise.
- **Security:** The double secure slot design helps keep the band firmly in place during activity.



Image: Example of the watch band being worn during a daily activity, demonstrating comfort and fit.



Image: The watch band in use while typing, showing its flexibility and non-restrictive nature.



Image: The blue watch band on a wrist, illustrating its casual and comfortable appearance.

CARE AND MAINTENANCE

To ensure the longevity and hygiene of your Lamshaw silicone watch bands, follow these simple care instructions:

- **Cleaning:** Regularly clean the band with mild soap and water. Use a soft cloth to wipe away sweat, dirt, or oils. Rinse thoroughly and dry completely before reattaching to your watch or wearing.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, solvents, or strong detergents, as these can damage the silicone material or cause discoloration.
- **Storage:** When not in use, store the bands in a cool, dry place away from direct sunlight to prevent material degradation.
- **Inspect Regularly:** Periodically check the quick-release pins and the band material for any signs of wear or damage.


BAND DETAILS DISPLAY



1. Seamless connection



2. Double secure slot

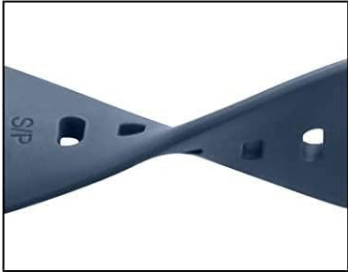

3. Soft and flexible



4. Breathable and comfortable

Image: Visual representation of band details, emphasizing material quality and design for comfort and durability.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Band does not attach securely.	• Ensure the quick-release pin is fully compressed and aligned with the lug holes. • Verify that the watch model is indeed Galaxy Watch Ultra 47mm. • Check for any obstructions in the lug holes.
Band feels uncomfortable or causes irritation.	• Adjust the tightness of the band. It should be snug but not overly tight. • Clean the band regularly to remove sweat and debris that can cause irritation. • Ensure the band is completely dry after cleaning or exposure to moisture.

Problem	Possible Cause / Solution
Band appears discolored or worn.	• Avoid prolonged exposure to direct sunlight or harsh chemicals. • Regular cleaning can help maintain the band's appearance. • If significant wear is present, consider replacing the band.

SPECIFICATIONS

- **Material:** Food-grade Silicone
- **Clasp Type:** Tang Buckle
- **Compatibility:** Specifically designed for Galaxy Watch Ultra 47mm LTE Smartwatch
- **Features:** Quick Release Pins, Skin-friendly, Durable, Lightweight, Sweat-proof, No fading
- **Package Includes:** Watch Bands, Connect Adapter (quantity may vary by pack)

WARRANTY INFORMATION

Specific warranty details for this product are not provided in the available information. Please refer to the seller's return policy or contact the seller directly for warranty inquiries.

CUSTOMER SUPPORT

For any questions, concerns, or assistance regarding your Lamshaw watch bands, please contact the seller directly through the platform where the purchase was made. Provide your order details for faster service.
Seller: [Lamshaw](#)

© 2024 Lamshaw. All rights reserved. Information subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D9D7R4X5>

More documents and user manuals: <https://manuals.plus/>