

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Sokany](#) /

› [Sokany SK-BBQ-842 Pizza and Pancake Maker User Manual](#)

Sokany SK-BBQ-842

Sokany SK-BBQ-842 Pizza and Pancake Maker User Manual

Model: SK-BBQ-842 | Power: 1000W

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before operating the appliance.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
15. Children should be supervised to ensure that they do not play with the appliance.

SAVE THESE INSTRUCTIONS.

PRODUCT OVERVIEW

The Sokany SK-BBQ-842 is a versatile electric appliance designed for making pizzas and pancakes. It features a non-stick cooking surface and a powerful 1000W heating element for efficient cooking.



Figure 1: Sokany SK-BBQ-842 Pizza and Pancake Maker. This image shows the overall design of the appliance with its cooking plates and handle.

Components:

- **Main Unit:** Houses the heating elements and controls.
- **Non-Stick Cooking Plates:** Reversible surfaces for different cooking needs.
- **Handle:** For opening and closing the unit safely.
- **Power Indicator Light:** Illuminates when the unit is powered on.
- **Ready Indicator Light:** Illuminates when the unit has reached the optimal cooking temperature.
- **Power Cord:** For connecting to an electrical outlet.
- **Spatula:** Included for safe food handling.

BEFORE FIRST USE

1. Unpack the appliance and remove all packaging materials, including any protective films or stickers.
2. Wipe the exterior of the unit with a damp cloth.
3. Clean the non-stick cooking plates with a damp cloth or sponge. Do not use abrasive cleaners or scouring pads.
4. Dry all parts thoroughly.
5. For the first use, it is recommended to lightly grease the cooking plates with a small amount of cooking oil.
6. Plug in the appliance and allow it to heat up for approximately 5-10 minutes without food. This helps to burn off any manufacturing residues. A slight odor or smoke may be present during this initial heating; this is normal.
7. Unplug the appliance and allow it to cool completely before wiping the plates clean again.

SETUP

Setting up your Sokany SK-BBQ-842 is straightforward:

1. Place the appliance on a stable, heat-resistant, and dry surface. Ensure there is adequate space around the unit for ventilation.
2. Ensure the cooking plates are clean and properly seated.
3. Close the lid and ensure the handle is securely latched.
4. Plug the power cord into a standard 220-240V AC electrical outlet. The power indicator light will illuminate.



Figure 2: Illustrative setup diagram. This image would typically show the appliance placed on a counter with the power cord plugged in.

OPERATING INSTRUCTIONS

General Operation:

1. Ensure the appliance is properly set up and plugged in. The power indicator light will be on.
2. Allow the unit to preheat with the lid closed until the ready indicator light illuminates. This usually takes 5-8 minutes.
3. Carefully open the lid using the handle.
4. Place your food onto the bottom cooking plate. Do not overfill.
5. Close the lid. The ready indicator light may turn off during cooking and cycle on/off to maintain temperature.
6. Cook for the recommended time (refer to specific recipes or cooking guides).
7. Once cooking is complete, carefully open the lid and remove the food using the included spatula or a heat-resistant plastic/wooden utensil. Do not use metal utensils as they can damage the non-stick coating.
8. Unplug the appliance from the wall outlet when finished.

Making Pizza:

1. Prepare your pizza dough and toppings. For best results, use a dough that is not too thick.
2. Preheat the Pizza and Pancake Maker until the ready indicator light turns on.
3. Lightly grease the bottom cooking plate if desired, though the non-stick surface usually prevents sticking.
4. Carefully place the pizza dough onto the bottom plate. Add sauce, cheese, and your desired toppings.
5. Close the lid.
6. Cook for approximately 8-15 minutes, depending on the thickness of the dough and toppings, and your desired crispiness. Check periodically to prevent overcooking.
7. Once the crust is golden brown and cheese is melted and bubbly, carefully remove the pizza.

Making Pancakes:

1. Prepare your pancake batter.
2. Preheat the Pizza and Pancake Maker until the ready indicator light turns on.
3. Lightly grease the bottom cooking plate with a small amount of oil or butter.
4. Pour a portion of pancake batter onto the bottom plate. The amount will depend on the desired size of your pancake.
5. Close the lid.
6. Cook for approximately 3-6 minutes, or until the pancake is golden brown and cooked through.
7. Carefully remove the pancake using the spatula. Repeat for additional pancakes.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity of your appliance.

1. **Always unplug the appliance** from the power outlet and allow it to cool completely before cleaning.
2. Wipe the exterior of the unit with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.
3. For the non-stick cooking plates, gently wipe away any food residue with a soft, damp cloth or sponge. For stubborn residue, dampen a cloth with warm, soapy water and wipe clean.
4. Do not use metal scouring pads, abrasive cleaners, or sharp utensils on the non-stick surfaces, as this will damage the coating.
5. Never immerse the main unit, power cord, or plug in water or any other liquid.
6. Ensure all parts are thoroughly dry before storing or using again.
7. Store the appliance in a clean, dry place.



Figure 3: Illustrative cleaning instructions. This image would typically show someone wiping down the cooking plates with a soft cloth.

TROUBLESHOOTING

If you encounter any issues with your Sokany SK-BBQ-842, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction.	Ensure the power cord is securely plugged into a working electrical outlet. Check the circuit breaker.
Food sticks to the cooking plates.	Plates not properly seasoned; insufficient oil/butter; damaged non-stick coating.	Ensure plates are clean and lightly greased before use. Avoid using metal utensils. If coating is damaged, contact customer support.
Food is not cooking evenly.	Uneven distribution of food; appliance not fully preheated.	Ensure food is spread evenly. Allow the appliance to fully preheat until the ready indicator light illuminates.
Smoke or unusual odor during operation.	Initial use residue; food residue on plates; appliance malfunction.	A slight odor is normal during first use. Ensure plates are clean. If smoke persists or is excessive, unplug immediately and contact customer support.

If the problem persists after trying these solutions, please contact Sokany customer support.

SPECIFICATIONS

Feature	Detail
Brand	Sokany
Model	SK-BBQ-842
Power / Wattage	1000 watts
Material	Stainless Steel, Non-Stick

Feature	Detail
Special Features	Reversible Cooking Surface
Color	Black
Item Weight	1.73 Kilograms
Package Dimensions	51 x 34 x 10.4 cm
Included Components	Spatula

WARRANTY AND SUPPORT

Sokany products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Sokany website.

For technical assistance, troubleshooting beyond this manual, or spare parts, please contact Sokany customer support:

- **Website:** www.sokany.com (Illustrative link)
- **Email:** support@sokany.com (Illustrative email)
- **Phone:** Please refer to your regional Sokany contact information.

When contacting support, please have your product model (SK-BBQ-842) and purchase date available.