

[Manuals.plus](#) /

› [CG MOBILE](#) /

› CG MOBILE GUESS GUBHK1GCTCSK Bluetooth Headphones User Manual

CG MOBILE GUBHK1GCTCSK

CG MOBILE GUESS GUBHK1GCTCSK Bluetooth Headphones User Manual

Model: GUBHK1GCTCSK

1. INTRODUCTION

Welcome to the user manual for your CG MOBILE GUESS GUBHK1GCTCSK Bluetooth Headphones. These wireless headphones are designed to provide a high-quality audio experience with the convenience of Bluetooth connectivity and a built-in voice assistant. This manual will guide you through the setup, operation, and maintenance of your new headphones to ensure optimal performance and longevity.



Image 1: Front view of the CG MOBILE GUESS GUBHK1GCTCSK Bluetooth Headphones, showcasing the earcups and headband design.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- CG MOBILE GUESS GUBHK1GCTCSK Bluetooth Headphones
- USB Type C Charging Cable (not explicitly listed but implied by 'Hardware interface: USB Type C')
- Earbuds (Bigger and Smaller) - *Note: While listed as 'Earbuds', this typically refers to ear cushions or tips for in-ear devices. For these over-ear headphones, it may refer to replacement ear cushions or is a generic component listing.*
- User Manual (this document)



Image 2: The retail packaging for the CG MOBILE GUESS GUBHK1GCTCSK Bluetooth Headphones, showing product branding and specifications.

3. SETUP

3.1 Charging the Headphones

1. Locate the USB Type C charging port on your headphones.
2. Connect one end of the provided USB Type C cable to the headphone's charging port.
3. Connect the other end of the USB cable to a compatible USB power source (e.g., computer USB port, wall adapter).
4. The charging indicator light will illuminate. A full charge takes approximately 4 hours.
5. Once fully charged, the indicator light will change or turn off, depending on the model. Disconnect the charging cable.

3.2 Powering On/Off

- **To Power On:** Press and hold the Power button (location varies by model, typically on an earcup) for a few seconds until an indicator light flashes or an audible prompt is heard.
- **To Power Off:** Press and hold the Power button again for a few seconds until the indicator light turns off or an audible prompt is heard.

3.3 Bluetooth Pairing

To connect your headphones to a device via Bluetooth:

1. Ensure the headphones are fully charged and powered off.
2. Press and hold the Power button for approximately 5-7 seconds until the indicator light flashes rapidly (often blue and red alternately), indicating pairing mode.
3. On your device (smartphone, tablet, laptop), go to the Bluetooth settings.
4. Enable Bluetooth and search for available devices.
5. Select "GUESS GUBHK1GCTCSK" (or similar name) from the list of found devices.
6. Once connected, the indicator light on the headphones will typically turn solid blue or flash slowly, and an audible confirmation may be heard.

4. OPERATING INSTRUCTIONS

4.1 Music Playback

- **Play/Pause:** Press the Multi-function button (often the Power button or a dedicated play/pause button) once.
- **Next Track:** Press and hold the Volume Up button or a dedicated "Next" button.
- **Previous Track:** Press and hold the Volume Down button or a dedicated "Previous" button.

4.2 Call Management

When connected to a smartphone, you can manage calls using the headphone controls:

- **Answer/End Call:** Press the Multi-function button once.
- **Reject Call:** Press and hold the Multi-function button for approximately 2 seconds.

4.3 Voice Assistant

Your headphones feature a built-in voice assistant (e.g., Siri, Google Assistant). To activate:

- **Activate Voice Assistant:** Double-press the Multi-function button or use the dedicated Voice Assistant button (if available).
- Once activated, you can issue voice commands through the headphone's microphone.

4.4 Volume Control

- **Increase Volume:** Press the Volume Up (+) button.
- **Decrease Volume:** Press the Volume Down (-) button.

5. MAINTENANCE

Proper maintenance ensures the longevity and performance of your headphones.

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the headphones. Do not use abrasive cleaners, solvents, or spray directly onto the headphones.
- **Water Resistance:** These headphones are water resistant. Avoid submerging them in water or exposing them to heavy rain. Dry them thoroughly if they get wet.
- **Storage:** Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, charge them periodically to maintain battery health.
- **Battery Care:** Avoid fully discharging the battery frequently. Charge the headphones when the battery is low.

6. TROUBLESHOOTING

If you encounter issues with your headphones, refer to the following common problems and solutions:

- **Headphones do not power on:** Ensure the headphones are fully charged. Connect them to a power source and try again.
- **Cannot pair with device:**
 - Ensure Bluetooth is enabled on your device.
 - Make sure the headphones are in pairing mode (rapidly flashing indicator light).
 - Move the headphones closer to your device.
 - Turn off and on both the headphones and your device's Bluetooth.
 - Clear previous Bluetooth connections on your device if too many are stored.
- **No sound or low volume:**
 - Check the volume levels on both the headphones and your connected device.
 - Ensure the headphones are properly paired and connected.

- Try playing audio from a different application or source.
- **Voice assistant not responding:** Ensure the headphones are connected and the voice assistant feature is enabled on your device.

7. SPECIFICATIONS

Model	GUBHK1GCTCSK
Brand	CG MOBILE
Wireless Communication Technology	Bluetooth
Headphones Jack	None (Wireless)
Charging Interface	USB Type C
Charging Time	4 Hours
Battery Average Life	4 Hours
Water Resistance Level	Water Resistant
Control Method	Voice
Item Weight	0.54 Kilograms
Material	Plastic
Special Features	Built-In Voice Assistant
Compatible Devices	Smartphones, Tablets, Laptops
Noise Control	Sound Isolation

8. WARRANTY AND SUPPORT

Your CG MOBILE GUESS GUBHK1GCTCSK Bluetooth Headphones are covered by a manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included in your package for specific terms and conditions, including the warranty period and claim procedures.

For technical support, troubleshooting assistance, or warranty inquiries, please visit the official CG MOBILE website or contact their customer service department. Contact details can typically be found on the product packaging or the brand's official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question